Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Orbegozo /
- > Orbegozo VT 2700 27-Bottle Digital Display Wine Cooler Instruction Manual

Orbegozo VT 2700

Orbegozo VT 2700 27-Bottle Digital Display Wine Cooler Instruction Manual

Model: VT 2700 | Brand: Orbegozo

1. PRODUCT OVERVIEW

The Orbegozo VT 2700 is a thermoelectric wine cooler designed to store up to 27 bottles of wine across two independent temperature zones. It features a digital display for precise temperature control and a sleek black finish with metal accents.





Image 1.1: Front view of the Orbegozo VT 2700 wine cooler, showcasing its dual-zone design, digital display, and metallic handle.

Key Features:

- Capacity: Stores up to 27 standard wine bottles.
- Dual Temperature Zones:
 - Upper Zone: 9 bottles, temperature range 7°C 18°C (45°F 64°F).
 - Lower Zone: 18 bottles, temperature range 11°C 18°C (52°F 64°F).
- Cooling Technology: Thermoelectric refrigeration.
- Control: Digital display for precise temperature adjustment.
- Power: 140 W, 230 V 50 Hz.
- Material: Metal construction.

2. SAFETY INSTRUCTIONS

Read all instructions before using the appliance to ensure safe operation and prevent damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not overload electrical outlets. Avoid using extension cords.
- **Placement:** Place the wine cooler on a stable, level surface. Ensure adequate ventilation around the unit (at least 10 cm clearance on sides and back). Do not block ventilation openings.
- **Environment:** Do not install near heat sources (e.g., ovens, radiators, direct sunlight). Avoid placing in areas with high humidity.
- **Handling:** Do not touch the power plug with wet hands. Do not pull the power cord to disconnect from the outlet.
- Cleaning: Always unplug the appliance before cleaning. Use a soft cloth and mild detergent. Do not use abrasive cleaners or sharp objects.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Damage:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard. Do not attempt to repair the appliance yourself.

3. SETUP

3.1 Unpacking

Carefully remove the wine cooler from its packaging. Inspect the unit for any signs of damage during transit. Retain packaging materials for future transport or if the unit needs to be returned.

3.2 Placement

Choose a location that is dry, well-ventilated, and away from direct sunlight or heat sources. Ensure there is at least 10 cm (4 inches) of space around the back and sides of the unit for proper air circulation. The ambient temperature should be between 10°C and 32°C (50°F and 90°F) for optimal performance.

3.3 Leveling

The wine cooler must be level to function correctly. Adjust the leveling feet at the bottom of the unit until it is stable and level. This prevents vibrations and ensures proper door sealing.

3.4 Power Connection

Before plugging in, allow the unit to stand upright for at least 2 hours. This allows refrigerants to settle. Plug the power cord into a dedicated, grounded electrical outlet (230V, 50Hz). Do not use adapters or extension cords.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The control panel is located on the upper part of the door, featuring a digital display and touch buttons for temperature adjustment and light control.





Image 4.1: Detail of the digital display and control buttons for temperature settings and interior light.

4.2 Temperature Adjustment

The Orbegozo VT 2700 has two independent temperature zones. Each zone has its own digital display and temperature control buttons.

- **Selecting a Zone:** Press the 'Zone Select' button (if available, otherwise assume separate controls for each display) to toggle between the upper and lower zones.
- **Setting Temperature:** Use the 'Up' and 'Down' arrow buttons next to each digital display to adjust the desired temperature for that specific zone.
 - Upper Zone: Adjustable from 7°C to 18°C. Ideal for white wines and sparkling wines.
 - Lower Zone: Adjustable from 11°C to 18°C. Ideal for red wines.
- The display will show the set temperature, then revert to showing the actual internal temperature after a few seconds.

4.3 Interior Light

Press the 'Light' button (represented by a light bulb icon) on the control panel to turn the interior LED light on or off.

4.4 Loading Bottles

Arrange bottles on the shelves, ensuring they do not touch the back wall or obstruct the internal fan (if visible). Avoid overcrowding to allow for proper air circulation and temperature distribution. The shelves are designed to accommodate standard-sized wine bottles.





Image 4.2: Interior view showing the metal bottle racks within the wine cooler's two zones.

5. MAINTENANCE

5.1 Cleaning the Interior

To clean the interior, first unplug the unit. Remove all bottles and shelves. Wipe the interior surfaces with a soft cloth dampened with a mild detergent solution. Rinse with clean water and dry thoroughly before replacing shelves and bottles. Do not use abrasive cleaners or solvents.

5.2 Cleaning the Exterior

Clean the exterior surfaces with a soft, damp cloth. For the glass door, use a glass cleaner. Avoid getting water into the control panel or electrical components. Dry thoroughly.

5.3 Power Outage

In case of a power outage, minimize opening the door to preserve the internal temperature. Once power is restored, the unit will resume operation at the previously set temperatures.

5.4 Extended Absence

If the wine cooler will not be used for an extended period, unplug it, empty all contents, clean the interior, and leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not operate.	No power supply.	Check if the power cord is plugged in correctly. Verify the wall outlet is functional.
Temperature is not cold enough.	Door not closed properly; excessive door opening; poor ventilation; high ambient temperature.	Ensure the door is sealed. Minimize door openings. Check for adequate clearance around the unit. Relocate the unit to a cooler environment if ambient temperature is too high.
Unit is making excessive noise.	Unit is not level; objects touching the back of the unit; fan obstruction.	Adjust leveling feet. Ensure nothing is touching the unit. Check if the internal fan is clear of obstructions.
Digital display shows an error code.	Sensor malfunction or other internal issue.	Unplug the unit for 15 minutes, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Orbegozo
Model Number	VT 2700 (Internal: 16439.0)
Color	Black
Capacity	27 Bottles
Upper Zone Temperature Range	7°C - 18°C (45°F - 64°F)

Feature	Detail
Lower Zone Temperature Range	11°C - 18°C (52°F - 64°F)
Cooling Technology	Thermoelectric
Power	140 W
Voltage/Frequency	230 V - 50 Hz
Material	Metal
Package Dimensions	105 x 58 x 42 cm
Product Weight	21.7 kg

8. WARRANTY AND SUPPORT

This Orbegozo product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Orbegozo customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

When contacting support, please have your model number (VT 2700) and purchase date available.

Related Documents - VT 2700



Orbegozo AIR 55 Air Cooler Instruction Manual

This manual provides instructions for the Orbegozo AIR 55 air cooler, covering safety, functions, assembly, operation, remote control, maintenance, and troubleshooting.



Orbegozo SFA 7600 Stand Fan with Dehumidifier Instruction Manual

Comprehensive instruction manual for the Orbegozo SFA 7600 stand fan with dehumidifier, covering safety guidelines, operating instructions, maintenance procedures, and technical specifications. Learn how to assemble, use, and care for your appliance.



Orbegozo AIR 37 Air Cooler - Instruction Manual

Comprehensive instruction manual for the Orbegozo AIR 37 air cooler, covering safety instructions, functions, assembly, operation, maintenance, troubleshooting, and technical specifications.



Orbegozo AIR 55 Air Cooler Instruction Manual

Comprehensive instruction manual for the Orbegozo AIR 55 air cooler, covering safety, functions, assembly, operation, maintenance, and troubleshooting in multiple languages.



Orbegozo MIG 2140 Microwave Instruction Manual

Comprehensive instruction manual for the Orbegozo MIG 2140 microwave, covering safety precautions, installation, operation, cooking tips, and troubleshooting.



Orbegozo CP 136105 Ventilador de Techo LED - Manual de Instrucciones

Manual de instrucciones detallado para el ventilador de techo Orbegozo CP 136105 con luz LED. Incluye información sobre instalación, funcionamiento, mantenimiento y seguridad.