

[Manuals.plus](#) /

> [iLive Electronics](#) /

> iLive Electronics ISB310B Wireless Tailgate Party Speaker User Manual

iLive Electronics ISB310B

iLive Electronics ISB310B Wireless Tailgate Party Speaker User Manual

Model: ISB310B

INTRODUCTION

This manual provides comprehensive instructions for the iLive Electronics ISB310B Wireless Tailgate Party Speaker. Please read this manual thoroughly before operating the device to ensure proper use and to maximize its performance and longevity. Keep this manual for future reference.





Image: Front view of the iLive ISB310B Wireless Tailgate Party Speaker, showcasing its dual speaker grilles and integrated LED lighting.

IMPORTANT SAFETY INFORMATION

- Do not expose this unit to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- The battery should not be exposed to excessive heat such as sunshine, fire, or the like.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or

other reproductive harm.

PACKAGE CONTENTS

Please check to ensure all items are present:

- iLive ISB310B Wireless Tailgate Party Speaker
- Micro-USB to USB cable
- User's guide

PRODUCT OVERVIEW

The ISB310B speaker features dual 8-inch full-range speakers, integrated LED lighting, and multiple connectivity options for versatile audio playback.



Image: Diagram showing the internal speaker components, illustrating the dual 8-inch full-range speakers.

Key Features:

- Bluetooth v5.0 for wireless audio streaming (up to 60 feet range).
- Dual 8-inch full-range speakers.
- Digital FM scan radio.
- Microphone input.
- Auxiliary input.
- USB port for playback and charging.
- Integrated LED light effects.
- Built-in rechargeable lithium-ion battery.
- Built-in carry handle for portability.
- LED display.

SETUP

1. Charging the Battery

The speaker is equipped with a built-in rechargeable lithium-ion battery. Before first use, fully charge the battery.

1. Connect the included Micro-USB to USB cable to the speaker's Micro-USB port.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a powered USB port.
3. The LED display will indicate charging status. The battery is fully charged when the indicator changes or turns off (refer to LED display section for details).

Battery Life: Approximately 5 hours at 50% volume and approximately 1.5 hours at 100% volume.



Image: The iLive ISB310B speaker with an overlaid battery charging icon, indicating its rechargeable capability.

2. Powering On/Off

Locate the Power button on the speaker's control panel.

- To power on, press and hold the Power button until the LED display illuminates.
- To power off, press and hold the Power button again until the LED display turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

The speaker supports Bluetooth v5.0 for wireless audio streaming from compatible devices.

1. Ensure the speaker is powered on and in Bluetooth mode. The LED display will show "BT" or a Bluetooth icon, and an audible prompt may sound.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), navigate to the Bluetooth settings.
3. Scan for available devices. The speaker will appear as "ISB310B" or similar.
4. Select "ISB310B" to pair. Once paired, an audible confirmation will sound, and the Bluetooth indicator on the speaker will become solid.
5. You can now stream audio wirelessly to the speaker.

Note: The wireless range is approximately 60 feet (18 meters). Obstacles may reduce this range.



Image: A man relaxing on a couch, using his smartphone to stream music wirelessly to the iLive ISB310B speaker, illustrating Bluetooth connectivity.

2. FM Radio Operation

The speaker includes a digital FM scan radio.

1. Press the Mode button to switch to FM Radio mode. The LED display will show the current frequency.
2. To automatically scan and save available stations, press and hold the Play/Pause button. The speaker will scan and store stations with strong signals.
3. Use the Previous/Next track buttons to navigate through the saved FM stations.
4. For manual tuning, short press the Previous/Next track buttons to fine-tune the frequency.



Image: An icon representing FM Radio, indicating the speaker's built-in radio functionality.

3. Auxiliary Input (AUX In)

Connect external audio devices using the 3.5mm auxiliary input.

1. Connect a 3.5mm audio cable (not included) from your external audio device's headphone jack or audio output to the AUX In port on the speaker.
2. Press the Mode button to switch to AUX mode. The LED display will show "AUX".
3. Control playback and volume from your connected audio device.

4. Microphone Input

The speaker features a microphone input for vocal amplification.

1. Connect a wired microphone (not included) to the Microphone Input jack on the speaker.
2. Adjust the microphone volume using the dedicated microphone volume knob (if available) or the main volume control.
3. The microphone input can be used simultaneously with other audio sources like Bluetooth or AUX.



Image: A group of friends enjoying a karaoke session, with one person holding a microphone, demonstrating the speaker's microphone input capability.

5. USB Playback

The speaker includes a USB port. While primarily for charging, it may support basic audio playback from USB drives. Refer to the LED display for mode indication.

1. Insert a USB flash drive (formatted to FAT32) containing compatible audio files (e.g., MP3) into the USB port.
2. Press the Mode button to switch to USB mode. The LED display will show "USB".
3. Use the Play/Pause and Previous/Next track buttons to control playback.

6. LED Light Effects

The speaker features integrated LED light effects that can be toggled or changed.

- Locate the Light button on the control panel.
- Press the Light button to cycle through different light modes or to turn the lights off.



Image: The iLive ISB310B speaker illuminated with vibrant, color-changing LED lights, demonstrating its light effects feature.

7. Volume Control

Adjust the master volume using the main volume knob on the control panel. Rotate clockwise to increase volume and counter-clockwise to decrease.

MAINTENANCE

Cleaning

- Always power off and unplug the speaker before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use liquid cleaners, abrasive cleaners, or solvents, as these may damage the finish.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to help preserve its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker using the Micro-USB cable.
No sound	Volume is too low or muted. Incorrect input mode selected. Device not paired (Bluetooth).	Increase volume. Press the Mode button to select the correct input. Re-pair Bluetooth device.
Bluetooth not connecting	Speaker is not in pairing mode. Device is out of range. Interference.	Ensure speaker is in Bluetooth mode. Move device closer to speaker. Turn off other Bluetooth devices.
FM radio static	Weak signal. Interference.	Relocate the speaker for better reception. Perform an auto-scan again.

SPECIFICATIONS

Model: ISB310B

Power Source: Battery Powered (Built-in rechargeable Lithium Ion battery)

Battery Life: ~5 hours (50% volume), ~1.5 hours (100% volume)

Connectivity Technology: Bluetooth v5.0

Wireless Range: 60 feet (18 meters)

Speakers: 2 x 8-inch full-range speakers

Audio Inputs: Microphone, Aux (3.5mm), USB

Radio: FM Scan Radio

Dimensions (L x W x H): 9.92 x 7.44 x 22.09 inches (25.2 x 18.9 x 56.1 cm)

Item Weight: 6.61 pounds (3 kg)

Material: Plastic

Color: Black

UPC: 047323203107

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official iLive Electronics website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question