

## GPX PD901VPB

# GPX PD901VPB Portable DVD Player User Manual

Model: PD901VPB

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your GPX PD901VPB Portable DVD Player. Please read this manual thoroughly before using the device and retain it for future reference.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.



Image: The GPX PD901VPB Portable DVD Player shown with its included accessories. These include the main DVD

player unit with a 9-inch screen, a black carrying case, an AC power adapter, a car power adapter, an AV cable (RCA), two sets of earbuds, a Y-splitter for headphones, a remote control, and two AAA batteries.

- GPX PD901VPB Portable DVD Player
- AC Power Adapter
- Car Power Adapter
- Remote Control
- AV Cable (RCA)
- Earbuds (2 pairs)
- Headphone Splitter
- Carrying Case
- AAA Batteries (for remote control)
- User Manual (this document)

### **3. PRODUCT FEATURES**

---

- 9-inch LCD Swivel Display (800 x 480 resolution)
- Supports DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW, JPEG
- Built-in Stereo Speakers
- Headphone Jack (3.5mm)
- AV Output Jack
- USB Port for media playback
- SD Card Slot for media playback
- Rechargeable Battery
- Full-function Remote Control

### **4. SETUP**

---

#### **4.1. Charging the Battery**

1. Connect the AC power adapter to the DC IN jack on the DVD player.
2. Plug the AC power adapter into a standard wall outlet.
3. The charging indicator light will illuminate. Allow approximately 4-5 hours for a full charge.
4. The indicator light will change or turn off when charging is complete.

#### **4.2. Installing Remote Control Batteries**

1. Open the battery compartment on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment.

#### **4.3. Powering On/Off**

- To power on, slide the POWER switch to the ON position.
- To power off, slide the POWER switch to the OFF position.

### **5. OPERATING INSTRUCTIONS**

---

#### **5.1. Loading a Disc**

1. Open the disc compartment cover.
2. Place a DVD or CD onto the spindle with the label side facing up.
3. Gently press the disc until it clicks into place.
4. Close the disc compartment cover.
5. The player will automatically begin reading the disc.

## 5.2. Basic Playback Controls

- **PLAY/PAUSE:** Press to start or pause playback.
- **STOP:** Press once to stop playback, press twice to return to the beginning of the disc.
- **SKIP (<< / >>):** Press to skip to the previous or next chapter/track.
- **FAST FORWARD/REWIND:** Press and hold to fast forward or rewind.
- **VOLUME (+/-):** Adjust the audio output level.
- **MENU:** Access the disc's main menu.

## 5.3. Using USB/SD Media

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. The player should automatically detect the media and display a menu.
3. Use the navigation buttons (UP/DOWN/LEFT/RIGHT) and ENTER to select files for playback.

## 5.4. Connecting to an External Display

To view content on a larger screen, use the included AV cable:

1. Connect one end of the AV cable to the AV OUT jack on the portable DVD player.
2. Connect the other end of the AV cable to the corresponding AV INPUT jacks (Yellow for Video, White for Left Audio, Red for Right Audio) on your television or monitor.
3. Select the correct AV input source on your external display.

## 6. MAINTENANCE

- **Cleaning the Unit:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or abrasive materials.
- **Cleaning Discs:** Wipe discs gently from the center outwards with a soft, lint-free cloth. Avoid touching the playback surface.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the player before first use and periodically if not used for extended periods.

## 7. TROUBLESHOOTING

Problem	Possible Solution
No power	<ul style="list-style-type: none"><li>• Ensure the power adapter is securely connected.</li><li>• Check if the battery is charged.</li><li>• Verify the POWER switch is in the ON position.</li></ul>

Problem	Possible Solution
Disc not playing	<ul style="list-style-type: none"> <li>Check if the disc is inserted correctly (label side up).</li> <li>Clean the disc for smudges or scratches.</li> <li>Ensure the disc format is supported (DVD, CD).</li> <li>Try a different disc.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>Increase the volume.</li> <li>Check headphone connections if using headphones.</li> <li>Ensure external speakers/TV are properly connected and volume is up.</li> </ul>
Remote control not working	<ul style="list-style-type: none"> <li>Replace the AAA batteries.</li> <li>Ensure there are no obstructions between the remote and the player's IR sensor.</li> <li>Point the remote directly at the player.</li> </ul>

## 8. SPECIFICATIONS

- Model:** PD901VPB
- Screen Size:** 9 Inches
- Display Type:** LCD
- Resolution:** 800 x 480
- Supported Media:** DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW, JPEG, USB, SD Card
- Connectivity:** USB, AV Output, 3.5mm Headphone Jack
- Power Source:** AC Adapter, Car Adapter, Built-in Rechargeable Battery
- Dimensions:** Approximately 11.7 x 9.2 x 5.5 inches (Product Dimensions)
- Weight:** Approximately 1.87 pounds

## 9. WARRANTY AND SUPPORT

For warranty information or technical assistance, please refer to the warranty card included with your product or visit the official GPX support website. Do not attempt to repair the device yourself, as this may void your warranty. For further assistance, you may contact GPX customer support through their official channels.

## Related Documents - PD901VPB

	<p><a href="#">GPX PCB319 Portable Compact CD Player User's Guide</a></p> <p>Comprehensive user guide for the GPX PCB319 portable compact CD player. Learn about safety precautions, device features, controls, power options, CD playback, programming, and Bluetooth connectivity.</p>
	<p><a href="#">GPX Tablet Quickstart Guide: Connecting to Wi-Fi and Playing DVDs</a></p> <p>A quickstart guide for GPX tablets, covering essential functions like adding/deleting apps, connecting to Wi-Fi, troubleshooting network issues, and playing DVDs. Includes model TBDV1093 v3126-01.</p>
	<p><a href="#">GPX MWB308 Bluetooth MP3 Player User's Guide</a></p> <p>Comprehensive user's guide for the GPX MWB308 Bluetooth MP3 Player, detailing features, operation, controls, charging, music management, Bluetooth connectivity, radio functions, recording capabilities, e-book reader, and settings. Includes FCC warnings and additional safety information.</p>
	<p><a href="#">GPX PC800 Personal CD/MP3 Player User Guide</a></p> <p>User guide for the GPX PC800 Personal CD/MP3 Player with Skip Protection, detailing features, operation, safety, and troubleshooting.</p>
	<p><a href="#">GPX PC332B Portable CD Player User Guide</a></p> <p>Learn how to operate your GPX PC332B Portable CD Player, including turning it on/off, understanding the mode button, and programming tracks for playback.</p>
	<p><a href="#">GPX Bluetooth MP3 Player MWB308 User's Guide</a></p> <p>User's guide for the GPX Bluetooth MP3 Player Model MWB308. Learn about features, controls, charging, loading music, Bluetooth, FM radio, recording, settings, and troubleshooting.</p>

