

manuals.plus /

- › [GPX](#) /
- › [GPX 9-inch Portable DVD Player Model PD901BDLP Instruction Manual](#)

**GPX PD901BDLP**

# GPX 9-inch Portable DVD Player Instruction Manual

Model: PD901BDLP

## INTRODUCTION

---

Thank you for purchasing the GPX 9-inch Portable DVD Player, Model PD901BDLP. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: The GPX 9-inch Portable DVD Player in its closed position, showcasing its vibrant pink top casing and sleek design.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- GPX 9-inch Portable DVD Player (Model PD901BDLP)
- Remote control (requires 2 AAA batteries, included)
- AC/DC power adapter
- 12V car adapter
- 3.5mm-to-RCA audio/video cable
- Carrying case
- Headphones
- Instruction Manual (this document)

## PRODUCT FEATURES

- 9-inch 800x480 LCD screen
- Screen tilts and swivels for versatile viewing angles

- Rechargeable lithium polymer battery with up to 2 hours of battery life
- Built-in stereo speakers
- Headphone jack for private listening
- RCA output for connection to external displays
- Supports DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW, JPEG, MP3 formats

## SETUP

---

### 1. Charging the Battery

Before first use, fully charge the internal lithium polymer battery. Connect the AC/DC power adapter to the DC IN port on the DVD player and plug the other end into a standard wall outlet. The charging indicator light will illuminate. Charging typically takes approximately 3-4 hours for a full charge, providing up to 2 hours of playback.

### 2. Installing Remote Control Batteries

Open the battery compartment on the back of the remote control. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Close the compartment securely.

### 3. Connecting to a Television (Optional)

To view content on a larger screen, use the included 3.5mm-to-RCA audio/video cable. Connect the 3.5mm end to the AV OUT port on the DVD player. Connect the RCA (red, white, yellow) ends to the corresponding AV INPUT ports on your television. Select the correct AV input source on your TV.

### 4. Using the Car Adapter (Optional)

For in-car use, connect the 12V car adapter to the DC IN port on the DVD player and plug the other end into your vehicle's cigarette lighter socket.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

Press and hold the **POWER** button on the player or remote control to turn the device on or off.

### 2. Inserting a DVD

1. Gently open the DVD player lid.
2. Place a DVD disc onto the spindle with the label side facing up.
3. Press down gently on the center of the disc until it clicks into place.
4. Close the lid. The player will automatically begin reading the disc.

### 3. Screen Adjustment

The LCD screen can be tilted and swiveled to achieve the optimal viewing angle. Carefully adjust the screen to your preferred position.

### 4. Basic Playback Controls

- **PLAY/PAUSE**: Press to start or pause playback.
- **STOP**: Press to stop playback.
- **SKIP (<< / >>)**: Press to skip to the previous or next chapter/track.

- **FF/REW:** Press and hold to fast forward or rewind.
- **VOLUME (+/-):** Adjust the audio volume.

## 5. Using Headphones

Plug the included headphones into the **HEADPHONE** jack for private listening. The built-in speakers will automatically mute when headphones are connected.

## MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the LCD screen. Do not use liquid cleaners or abrasive materials.
- **Cleaning the Disc Tray:** Keep the disc tray free of dust and debris. Use a soft brush or compressed air if necessary.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge it periodically.
- **Storage:** Store the DVD player in a cool, dry place away from direct sunlight and extreme temperatures. Use the included carrying case for protection during transport.

## TROUBLESHOOTING

Problem	Solution
Player does not power on.	Ensure the battery is charged or the AC/DC adapter is securely connected to a working power outlet. Check the power switch.
No disc detected.	Verify the disc is inserted correctly with the label side up and seated properly on the spindle. Ensure the disc is clean and free of scratches. Try a different disc.
No sound.	Check the volume level. Ensure headphones are not plugged in if you intend to use the built-in speakers. If connected to a TV, check the TV's volume and input settings.
Remote control not working.	Check and replace the AAA batteries in the remote. Ensure there are no obstructions between the remote and the player's IR sensor.
Picture is distorted or blurry.	Clean the disc. Adjust the screen angle. If connected to a TV, check the AV cable connections.

## SPECIFICATIONS

**Model:** PD901BDLP

**Screen Size:** 9 inches

**Display Type:** LCD

**Native Resolution:** 800 x 480

**Media Type:** DVD, DVD-R/RW, DVD+R/RW, CD, CD-R/RW, JPEG, MP3

**Battery:** Rechargeable Lithium Polymer

**Battery Life:** Up to 2 hours

**Connectivity:** 3.5mm AV Out, Headphone Jack, DC In

**Power Input:** AC/DC Adapter, 12V Car Adapter

**Weight:** Approximately 1.9 Pounds (0.86 kg)

**Color:** Pink

**UPC:** 047323179044

## WARRANTY AND SUPPORT

---

This GPX Portable DVD Player is covered by a **90-day limited manufacturer warranty** from the date of original purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty service or technical support, please refer to the contact information provided with your product packaging or visit the official GPX website. Keep your purchase receipt as proof of purchase.

For more information, you may visit the [GPX Store on Amazon](#).