

GPX PR047B

GPX PR047B 4GB Digital Voice Recorder User Manual

Model: PR047B

INTRODUCTION

The GPX PR047B is a compact and versatile 4GB digital voice recorder designed for clear audio capture. Featuring a voice-activated system, it automatically starts and stops recording based on sound detection, optimizing memory usage. With 4GB of preinstalled flash memory, it can store up to 270 hours of audio, making it suitable for various applications such as interviews, lectures, and personal notes. This device supports MP3 audio format and offers two recording speeds (SP/LP) for flexibility. It is compatible with both PC and Mac systems for easy file transfer.





Image: Front view of the GPX PR047B Digital Voice Recorder. The device is black with silver accents, featuring a central LCD screen displaying "01" and "00:26", indicating recording status. Below the screen are "VOL+", "VOL-", and "MODE" buttons. To the right, a "HOLD off/on" switch is visible. A microphone input is located at the top.

SETUP

1. Battery Installation

The GPX PR047B requires two AAA batteries (not included) for operation. To install:

1. Locate the battery compartment cover on the back of the device.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as marked inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2. Initial Power On

After installing batteries, slide the **HOLD** switch on the side of the device to the **OFF** position (if it's in **ON**). The device should

power on and the LCD screen will illuminate.

OPERATING INSTRUCTIONS

Recording Audio

1. Ensure the device is powered on.
2. Press the **REC** button (usually a red button or marked with a red dot) to begin recording. The recording indicator on the screen will activate.
3. To pause recording, press the **REC** button again. Press it once more to resume.
4. To stop recording, press the **STOP** button (often marked with a square symbol). The recorded file will be saved automatically.

Voice-Activated Recording (VOR)

The PR047B features a Voice-Activated Recording (VOR) function, which starts recording only when sound is detected and pauses when silence occurs, conserving memory.

1. While in stop mode, press the **MODE** button repeatedly until "VOR" or a similar indicator appears on the screen.
2. Press the **REC** button. The device will now enter VOR standby mode and begin recording automatically when sound is detected.
3. To exit VOR mode, press the **STOP** button.

Playback

1. In stop mode, use the **VOL+** or **VOL-** buttons to navigate through recorded files.
2. Press the **PLAY/PAUSE** button (often marked with a triangle symbol) to start playback of the selected file.
3. Press **PLAY/PAUSE** again to pause playback.
4. To adjust volume during playback, use the **VOL+** and **VOL-** buttons.
5. To stop playback, press the **STOP** button.

Connecting to a Computer

The PR047B can be connected to a PC or Mac to transfer recorded files.

1. Ensure the voice recorder is powered off.
2. Connect the device to your computer using a standard USB cable (not included, typically Mini-USB to USB-A). The USB port is usually located on the side or bottom of the recorder.
3. The recorder will appear as a removable disk drive on your computer.
4. Navigate to the appropriate folder (e.g., "VOICE" or "RECORD") to access your recorded MP3 files.
5. Drag and drop files to your computer to save them.
6. Safely eject the device from your computer before disconnecting the USB cable.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Device does not power on.	• Batteries are dead or incorrectly installed. Replace batteries and check polarity. • The HOLD switch is in the ON position. Slide it to OFF.
Poor recording quality.	• Microphone is too far from the sound source. Move closer. • Recording environment is too noisy. Record in a quieter area. • Recording speed (SP/LP) setting might be too low for desired quality. Adjust setting if available.
Cannot transfer files to computer.	• USB cable is not properly connected. Ensure a secure connection. • Device is not recognized by the computer. Try a different USB port or restart your computer. • Ensure the device is powered off before connecting to the computer.
Voice-activated recording (VOR) not working as expected.	• Sensitivity setting might be too low. Check if there's an option to adjust VOR sensitivity (refer to advanced settings if available). • Background noise might be too high, causing continuous recording.

SPECIFICATIONS

• Model: PR047B • Memory: 4GB preinstalled flash memory • Recording Time: Up to 270 hours (depending on speed setting) • Recording Formats: MP3 • Recording Speeds: SP (Standard Play), LP (Long Play) • Features: Voice-activated recording (VOR), Built-in microphone, 3.5mm headphone jack • Interface: USB (for PC/Mac connection) • Display: 1.5-inch LCD screen • Power: 2 x AAA batteries (not included) • Dimensions: Approximately 6.9 x 3.3 x 2 inches • Weight: Approximately 5.6 ounces (without batteries) • Color: Black
--

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official GPX website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims. GPX, Inc. www.gpx.com <i>Note: Product specifications and features are subject to change without notice.</i>
--

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question