

Bosch 00612114

Bosch 00612114 Spray Head Instruction Manual

Model: 00612114

1. PRODUCT OVERVIEW

The Bosch 00612114 Spray Head is an authorized replacement part designed for use with various Bosch brand dishwasher models. This component facilitates effective cleaning, particularly for larger items or specific areas within the dishwasher.

Key Features:

- Genuine OEM authorized part.
- Compatible with a range of Bosch dishwasher models.
- Designed for targeted spray action.



Figure 1: Front view of the Bosch 00612114 Spray Head, illustrating the spray nozzle configuration and attachment indicators.

2. SETUP AND INSTALLATION

This section provides instructions for correctly installing the Bosch 00612114 Spray Head in your compatible Bosch dishwasher.

1. **Preparation:** Ensure your dishwasher is empty and turned off. For safety, disconnect the power supply to the dishwasher.
2. **Remove Upper Basket:** Carefully remove the upper dish rack (basket) from your dishwasher. This provides clear access to the rear wall of the dishwasher tub.
3. **Locate Attachment Point:** Identify the designated attachment point on the rear wall of the dishwasher tub. This is typically a circular opening or a specific fitting designed for accessories.
4. **Attach Spray Head:** Align the Bosch 00612114 Spray Head with the attachment point. Insert the central stem of the spray head into the opening.
5. **Secure Spray Head:** Gently push and then rotate the spray head clockwise (as indicated by any markings on the spray head or dishwasher) until it locks securely into place. Ensure it is firmly seated and does not wobble.
6. **Verify Installation:** Lightly tug on the spray head to confirm it is properly secured.
7. **Restore Power:** Reconnect the dishwasher's power supply.



Figure 2: Rear view of the Bosch 00612114 Spray Head, highlighting the attachment mechanism.

3. OPERATION

The Bosch 00612114 Spray Head is designed to enhance the cleaning of specific items that may not fit well in standard racks or require more direct water spray.

- Once installed, the spray head operates automatically with your dishwasher's wash cycles.
- It is particularly useful for cleaning large or unusually shaped items such as oven grates, large pots, baking sheets, or barbecue grill components that can be placed directly on the bottom of the dishwasher tub after removing the upper basket.
- Ensure items placed in the dishwasher do not obstruct the spray head's nozzles to allow for optimal water distribution.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Bosch 00612114 Spray Head.

- **Cleaning:** Periodically inspect the spray head for any food debris or mineral deposits that may accumulate in the nozzles.

- If blockages are observed, carefully remove the spray head by rotating it counter-clockwise. Rinse it under running water. Use a soft brush or toothpick to clear any stubborn blockages from the nozzles.
- Do not use harsh chemicals or abrasive materials for cleaning, as these can damage the plastic.
- Reinstall the spray head after cleaning, following the steps in the "Setup and Installation" section.

5. TROUBLESHOOTING

If you encounter issues with your Bosch 00612114 Spray Head, refer to the following common solutions:

Problem	Possible Cause	Solution
Spray head not spraying effectively.	Nozzles are clogged with food debris or mineral deposits.	Remove the spray head and clean the nozzles as described in the Maintenance section.
Spray head is loose or falls off.	Incorrect installation or not fully locked.	Ensure the spray head is properly aligned and rotated clockwise until it locks securely into the dishwasher's attachment point.
Water leakage around the spray head.	Improper seating or damaged seal (unlikely for this part).	Verify the spray head is correctly installed and seated flush. If leakage persists, inspect the dishwasher's internal fitting for damage or consult a service technician.

6. SPECIFICATIONS

Detailed specifications for the Bosch 00612114 Spray Head are provided below:

Attribute	Detail
Brand	Bosch
Part Number	00612114
Item Model Number	00612114
Item Weight	0.704 ounces
Product Dimensions	3.5 x 3.5 x 0.25 inches
Included Components	Bosch Dishwasher Parts SPRAY HEAD
Material	Plastic

7. WARRANTY AND SUPPORT

As an authorized aftermarket product, the Bosch 00612114 Spray Head is manufactured to Bosch's quality standards.

- For specific warranty information, please refer to the documentation provided with your original Bosch appliance or contact Bosch customer service directly.
- For technical support or further assistance, please visit the official Bosch website or contact their customer support channels.
- Ensure you have your appliance model number and the spray head part number (00612114) available when seeking support.

