

## Rexel RES1523

# Rexel Mercury RES1523 Paper Shredder

User Manual

## 1. INTRODUCTION

---

The Rexel Mercury RES1523 is a strip-cut paper shredder designed for personal and business use, offering efficient and secure disposal of confidential documents. It features revolutionary anti-jam technology, a 23-liter waste bin, and the ability to shred up to 15 sheets of paper at once, along with CDs and credit cards. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your shredder.



Image 1.1: Front view of the Rexel Mercury RES1523 Paper Shredder.

## 2. SAFETY INFORMATION

---

Please read all safety instructions carefully before using the shredder. Failure to follow these instructions may result in injury or damage to the shredder.

- **Keep hands and fingers away:** Never place hands or fingers near the paper entry slot.
- **Loose clothing and hair:** Keep loose clothing, ties, jewelry, and long hair away from the paper entry slot.
- **Children and pets:** Keep children and pets away from the shredder at all times. This appliance is not intended for use

by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- **Power source:** Ensure the shredder is connected to a power outlet with the correct voltage (230-250V).
- **Indoor use only:** This shredder is designed for indoor use only. Do not expose to rain or moisture.
- **Flammable materials:** Do not shred materials containing flammable liquids or aerosols.
- **Unplug when not in use:** Always unplug the shredder before moving, cleaning, or emptying the waste bin.
- **Damage:** Do not operate the shredder if the power cord or plug is damaged. Contact qualified service personnel for repair.

## 3. SETUP

---

Follow these steps to set up your Rexel Mercury RES1523 shredder:

1. **Unpack:** Carefully remove the shredder from its packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the shredder on a flat, stable surface. Ensure there is adequate space around the unit for ventilation and access to the waste bin.
3. **Waste Bin:** Ensure the 23-liter waste bin is correctly inserted into the shredder housing. The shredder will not operate if the bin is not properly seated.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

## 4. OPERATING INSTRUCTIONS

---

Your Rexel Mercury RES1523 shredder is equipped with user-friendly controls and features for efficient shredding.

### 4.1 Powering On/Off

- To turn on the shredder, press the power button (usually indicated by a circle with a vertical line). The shredder will enter standby mode.
- To turn off the shredder, press the power button again.

### 4.2 Shredding Paper

The shredder can shred up to 15 sheets of 80gsm A4 paper at once, producing 5.8mm strip-cut particles (P-2 security level). It can also handle staples and paper clips.

1. Ensure the shredder is powered on and in auto mode.
2. Insert paper into the main paper entry slot. The shredder will automatically start and stop.
3. **Anti-Jam Technology:** The shredder features a clear display next to the paper entry. A green light indicates it's safe to feed paper. A red light warns you if you are attempting to feed too much paper, preventing jams. Reduce the number of sheets if the red light appears.



Image 4.1: Paper being fed into the shredder's main slot.

### 4.3 Shredding CDs and Credit Cards

The shredder has a dedicated slot for shredding CDs and credit cards.

1. Insert one CD or credit card at a time into the dedicated slot.
2. The shredder will automatically shred the item.



Image 4.2: A CD being inserted into the dedicated shredding slot.



Image 4.3: A credit card being inserted into the dedicated shredding slot.

#### 4.4 Continuous Operation and Cool-down

The shredder can operate continuously for up to 8 minutes. After this period, it requires a cool-down phase to prevent overheating. Allow the shredder to cool down for approximately 30 minutes before resuming operation.

### 5. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your shredder.

#### 5.1 Emptying the Waste Bin

The 23-liter waste bin can hold up to 190 sheets of shredded paper. Empty the bin regularly to prevent paper jams and ensure efficient operation. The shredder has a sensor that indicates when the bin is full.

1. Unplug the shredder from the power outlet.
2. Pull out the waste bin from the front of the shredder.
3. Dispose of the shredded material.
4. Slide the waste bin back into the shredder until it is securely in place.



Image 5.1: The waste bin pulled out for emptying.

## 5.2 Cleaning

Clean the exterior of the shredder with a soft, dry cloth. Do not use abrasive cleaners or solvents. The shredder features self-cleaning cutting blades for extended life and maximum performance.

## 5.3 Oiling (Recommended)

To maintain optimal performance and extend the life of the cutting blades, it is recommended to oil the shredder regularly, especially after emptying the waste bin or after prolonged use. Use a shredder-specific oil.

1. Apply a thin line of shredder oil across the paper entry slot.
2. Run the shredder in reverse mode for a few seconds to distribute the oil.

## 6. TROUBLESHOOTING

---

If you encounter issues with your shredder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shredder does not turn on.	No power; Waste bin not properly inserted; Overheat protection activated.	Check power connection; Ensure waste bin is fully inserted; Allow shredder to cool down for 30 minutes.
Paper jam.	Too much paper inserted; Staples/paper clips not removed (for non-compatible models); Overload.	Press the reverse button to clear the jam; Reduce paper quantity; Ensure compatible items are shredded.
Shredder stops during operation.	Overheat protection; Waste bin full; Motor overload.	Allow shredder to cool down; Empty waste bin; Reduce paper quantity.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Rexel

Feature	Detail
Model Number	2105015EU (Mercury RES1523)
Shred Type	Strip-cut
Particle Size	Approx. 5.8 mm strips (P-2 security level)
Sheet Capacity	15 sheets (80gsm A4 paper)
Waste Bin Capacity	23 liters (approx. 190 sheets)
Shreds	Paper, CDs, Credit Cards, Staples, Paper Clips
Continuous Run Time	8 minutes
Cool-down Time	Approx. 30 minutes
Dimensions (L x W x H)	47.1 x 27 x 41.3 cm
Weight	6.95 kg
Voltage	230-250 V
Noise Level	65 dB

## 8. WARRANTY AND SUPPORT

Your Rexel Mercury RES1523 Paper Shredder comes with a **2-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.



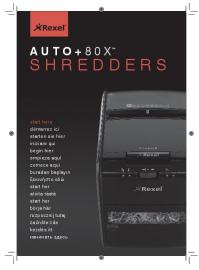
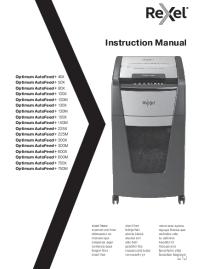
Image 8.1: Warranty information indicating 2 years.

For warranty claims, technical support, or further assistance, please contact Rexel customer service or visit the official Rexel website. Please have your model number (RES1523 / 2105015EU) and proof of purchase ready when contacting support.



© 2024 Rexel. All rights reserved.

### Related Documents - RES1523

	<p><a href="#"><b>Rexel Mercury RSS2434 &amp; RSX1834 Paper Shredder Instruction Manual</b></a></p> <p>Discover the Rexel Mercury RSS2434 and RSX1834 paper shredders with this comprehensive instruction manual. Learn about key features like Mercury Anti-Jam Technology, CD/Credit Card shredding, specifications, safety guidelines, and warranty information for efficient and reliable document destruction.</p>
	<p><a href="#"><b>Rexel Auto+ 80X Shredder: User Manual, Specifications, and Safety Guide</b></a></p> <p>A comprehensive guide to the Rexel Auto+ 80X Shredder, detailing its autofeed technology, operational instructions, safety precautions, shredding capabilities, technical specifications, and warranty information. Learn how to use, maintain, and troubleshoot your Rexel shredder.</p>
	<p><a href="#"><b>Rexel Momentum X308 &amp; X406 Paper Shredder Instruction Manual</b></a></p> <p>Comprehensive user guide for the Rexel Momentum X308 and Momentum X406 paper shredders, detailing setup, operation, safety features, maintenance, and troubleshooting.</p>
	<p><a href="#"><b>Rexel Optimum AutoFeed+ Instruction Manual - Secure Document Shredding</b></a></p> <p>User manual for Rexel Optimum AutoFeed+ series paper shredders. Learn about features like AutoFeed, P4 security, and various models (45X to 750M) for efficient and secure document destruction.</p>
	<p><a href="#"><b>Rexel Optimum AutoFeed+ Paper Shredder Instruction Manual</b></a></p> <p>Comprehensive instruction manual for Rexel Optimum AutoFeed+ series paper shredders, covering specifications, operation, safety guidelines, shredding capabilities, maintenance, WEEE information, and warranty details.</p>
	<p><a href="#"><b>Rexel Momentum X312/X410 Shredder Instruction Manual</b></a></p> <p>Comprehensive instruction manual for Rexel Momentum X312, X410, X312-SL, and X410-SL paper shredders. Learn about operation, safety, specifications, and troubleshooting.</p>