

Sharp R-219T(S)

SHARP Microwave Oven R-219T(S) Instruction Manual

Model: R-219T(S)

1. INTRODUCTION

Thank you for purchasing the SHARP Microwave Oven Model R-219T(S). This manual provides important information regarding the installation, operation, maintenance, and troubleshooting of your new microwave oven. Please read it thoroughly before using the appliance and keep it for future reference.

This 22-liter microwave oven features a wide 272mm turntable, a compact and space-saving design, and an easy-to-use push-open door. With 5 levels of variable cooking control and 800W of power, it ensures quick and efficient cooking and easy defrosting.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not attempt to service or repair the oven yourself. Contact qualified service personnel for examination, repair, or adjustment.
- Ensure proper ventilation around the oven. Do not block any ventilation openings.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use microwave-safe cookware. Metal containers or foil should not be used in the microwave.
- Supervise children closely when the appliance is in use.

WARNING: MICROWAVE ENERGY. DO NOT REMOVE ANY COVER.

This warning is also present on the rear of the appliance, indicating that only authorized service personnel should access internal components to prevent exposure to microwave energy.



Figure 2.1: Rear view of the microwave oven with safety warning.

3. PRODUCT OVERVIEW

The SHARP R-219T(S) microwave oven is designed for ease of use and efficient cooking. Below are images illustrating the product and its key components.



Figure 3.1: Front view of the SHARP R-219T(S) Microwave Oven.



Figure 3.2: Angled view of the microwave oven.

3.1 Control Panel

The control panel features two main rotary dials for setting cooking power and time/defrost weight.



Figure 3.3: Close-up of the control panel.

- **Cooking Control Dial:** Used to select the desired power level (Defrost, Low, Med Low, Med, Med High, High).
- **Timer/Defrost Dial:** Used to set the cooking time in minutes or the defrost weight in kilograms.

3.2 Interior Components

The interior of the microwave includes a glass turntable and a turntable support, which must be correctly positioned for proper operation.



Figure 3.4: Interior view with door open.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your microwave oven.

4.1 Unpacking

- Remove all packing materials from inside the oven cavity and from the door.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact your dealer.

4.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation. Allow at least 10 cm (4 inches) of space at the back, 20 cm (8 inches) at the top, and 5 cm (2 inches) on each side for proper airflow. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

4.3 Electrical Connection

- The oven operates on 220 Volts, 50 Hz AC power. Ensure your power supply matches these specifications.
- Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

4.4 Turntable Installation

- Place the turntable support ring in the center of the oven cavity.
- Place the glass turntable plate on top of the support ring, ensuring it sits securely in the center hub.



Figure 4.1: Approximate dimensions of the microwave oven.

5. OPERATING INSTRUCTIONS

This section details how to use your SHARP microwave oven for various cooking tasks.

5.1 Basic Operation

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely. The oven will not operate if the door is not properly closed.
3. Turn the **Cooking Control Dial** to select the desired power level.
4. Turn the **Timer/Defrost Dial** to set the desired cooking time. The oven will start automatically once the timer is set.
5. To stop cooking, open the oven door or turn the timer dial back to '0'.

5.2 Power Levels

Your microwave oven offers 5 variable power levels:

- **HIGH (800W):** For fast cooking and reheating.
- **MED HIGH:** For denser foods or longer cooking times.
- **MED:** For general cooking.
- **MED LOW:** For simmering or delicate foods.
- **LOW:** For keeping food warm.
- **DEFROST:** For thawing frozen foods.

5.3 Defrost Function

The defrost function allows you to thaw frozen foods based on weight.

1. Place the frozen food on the turntable.
2. Turn the **Cooking Control Dial** to 'DEFROST'.
3. Turn the **Timer/Defrost Dial** to the desired weight (e.g., 0.5 kg, 1.0 kg). The oven will automatically calculate the defrosting time.
4. During defrosting, it is recommended to turn the food over periodically for even thawing.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

6.1 Cleaning the Exterior

- Wipe the exterior with a soft cloth and mild soapy water.
- Avoid using abrasive cleaners or solvents.

6.2 Cleaning the Interior

- Wipe the inside of the oven with a soft cloth and warm soapy water after each use.
- For stubborn stains, place a bowl of water with a few lemon slices inside and microwave on high for 2-3 minutes. The steam will loosen the grime, making it easier to wipe away.
- Clean the door seals and sealing surface regularly to ensure proper closure.

6.3 Turntable Care

- The glass turntable and turntable support can be washed in warm soapy water or in a dishwasher.
- Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in securely.	Plug into outlet.
	Door not closed properly.	Close door securely.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
Food not heating	Cooking time or power level set too low.	Adjust cooking time and/or power level.
Turntable not rotating	Turntable not properly seated.	Ensure turntable and support are correctly positioned.
	Food container too large or heavy.	Use a smaller/lighter container.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel.

If the problem persists after trying these solutions, please contact Sharp customer service for assistance.

8. SPECIFICATIONS

Feature	Specification
Model	R-219T(S)
Brand	Sharp



Feature	Specification
Capacity	22 Liters
Output Power	800 Watts
Voltage	220 Volts
Frequency	50 Hz
Control Type	Buttons / Rotary Dials
Material	Metal
Color	Silver (Body), Black (Door)
Product Dimensions (W x D x H)	46 x 38.99 x 28.19 cm (approx. 319 x 211 x 336 mm internal)
Item Weight	11.93 kg (approx. 12 kg)
Special Features	Defrost, Turntable
Installation Type	Countertop





9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product at the time of purchase. Keep your proof of purchase for any warranty claims.

If you require technical assistance, service, or have any questions not covered in this manual, please contact Sharp customer service. Contact details can typically be found on the Sharp official website or on your product's packaging.

Related Documents - R-219T(S)

	<p>Sharp YC-MS01E-B 20 Litre Microwave Oven - Manual Control</p> <p>Detailed specifications and features for the Sharp YC-MS01E-B 20 Litre Microwave Oven with manual control, including capacity, power, dimensions, and logistic information.</p>
	<p>Sharp R-360 Microwave Oven Operation Manual</p> <p>This operation manual provides comprehensive guidance for the Sharp R-360 microwave oven, covering installation, safe operation, various cooking functions, maintenance, and troubleshooting tips.</p>

 The cover of the Sharp R-C932XVN-BST Microwave Oven User Manual. It features the Sharp logo at the top, a black microwave oven in the center, and the model number R-C932XVN-BST below it. The text "USER MANUAL" is also visible.	<p>Sharp R-C932XVN-BST Microwave Oven User Manual</p> <p>Comprehensive user manual for the Sharp R-C932XVN-BST microwave oven, covering installation, operation, safety instructions, cooking functions, auto menus, and maintenance.</p>
 The cover of the Sharp R-1874 / R-1875 Over-the-Range Convection Microwave Oven Operation Manual. It features the Sharp logo at the top, the model numbers R-1874 / R-1875, and the text "OVER-THE-RANGE CONVECTION MICROWAVE OVEN" and "INTERACTIVE COOKING SYSTEM". The title "OPERATION MANUAL" is prominently displayed.	<p>Sharp R-1874 / R-1875 Over-the-Range Convection Microwave Oven Operation Manual</p> <p>This comprehensive operation manual for the Sharp R-1874 and R-1875 Over-the-Range Convection Microwave Oven provides detailed instructions on safety, features, cooking methods, cleaning, maintenance, and specifications. It guides users through manual and automatic cooking modes, sensor functions, and troubleshooting tips.</p>
 The cover of the Sharp R-872 Microwave Oven User Manual. It features the Sharp logo at the top, a black microwave oven in the center, and the model number R-872 below it. The text "USER MANUAL" is also visible.	<p>Sharp R-872 Microwave Oven User Manual</p> <p>A comprehensive guide to operating and maintaining the Sharp R-872 microwave oven, featuring grill, convection, and microwave functions. Includes safety instructions, cooking tables, and troubleshooting tips.</p>
 The cover of the Sharp Built-In Appliance Design Guide: Microwaves, Ovens & Kitchen Layouts. It features the Sharp logo at the top, the title "DESIGN GUIDE for Built-in Appliances", and a line drawing of a kitchen cabinet with a built-in microwave and oven.	<p>Sharp Built-In Appliance Design Guide: Microwaves, Ovens & Kitchen Layouts</p> <p>Explore Sharp's comprehensive design guide for built-in kitchen appliances, featuring Microwave Drawers, SuperSteam+™ Ovens, Over-the-Counter microwaves, and installation dimensions for creating your dream kitchen.</p>