



[Manuals.plus](#) /

› [TEMPO DI SALDI](#) /

› TEMPO DI SALDI 24-Hour Programmable Timer Outlet User Manual

TEMPO DI SALDI 8033695336330

TEMPO DI SALDI 24-Hour Programmable Timer Outlet User Manual

Model: 8033695336330

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your TEMPO DI SALDI 24-Hour Programmable Timer Outlet. Please read this manual thoroughly before use and retain it for future reference.

The TEMPO DI SALDI programmable timer allows you to automate the power supply to electrical appliances, scheduling them to turn on and off at specific times throughout a 24-hour cycle. This can be used for various applications, such as controlling lighting, heating systems, or other household devices.

SAFETY INFORMATION

- Do not exceed the maximum load rating of the timer.
- Do not immerse the timer in water or expose it to excessive moisture.
- Do not open or attempt to repair the timer. Refer all servicing to qualified personnel.
- Ensure the timer is securely plugged into a wall outlet before connecting an appliance.
- Keep out of reach of children.
- Unplug the timer from the wall outlet before cleaning.

PRODUCT OVERVIEW

The TEMPO DI SALDI 24-Hour Programmable Timer Outlet features a mechanical dial for setting schedules and a universal socket for connecting appliances.



Image 1: Front view of the TEMPO DI SALDI 24-Hour Programmable Timer Outlet. This image displays the circular 24-hour dial with numbered segments and small pins around its circumference. Below the dial is the universal electrical socket designed to accept various plug types. A small indicator light is visible on the right side.



Image 2: Side view of the TEMPO DI SALDI 24-Hour Programmable Timer Outlet. This image highlights the three-pin Type F/E plug designed to connect the timer to a wall outlet. The side profile of the timer's body and the circular dial mechanism are also visible.

Components:

- **24-Hour Dial:** Marked with hours from 1 to 24, used for setting the current time and programming on/off cycles.
- **Timing Pins/Levers:** Small, push-down segments around the dial. Each segment typically represents 15 or 30 minutes. Pushed down means "ON" during that period.
- **Manual Override Switch:** *(This model primarily relies on the pins for control.)*
- **Output Socket:** Where you plug in the appliance to be controlled.
- **Input Plug:** Connects the timer to the wall power outlet.

SETUP INSTRUCTIONS

1. **Set Current Time:** Rotate the 24-hour dial clockwise until the current time aligns with the arrow or indicator mark on the timer's face. The dial is marked from 1 to 24 (representing 1 AM to 12 AM).
2. **Program ON/OFF Times:**
 - Locate the small pins (levers) around the circumference of the dial. Each pin represents a time interval (e.g., 15 minutes).
 - To set a period for the appliance to be **ON**, push the corresponding pins **down**.
 - To set a period for the appliance to be **OFF**, leave the corresponding pins in the **up** position.
 - You can program multiple ON/OFF cycles within the 24-hour period.
3. **Connect to Power:** Plug the timer into a standard 220V - 50/60Hz wall outlet.
4. **Connect Appliance:** Plug the appliance you wish to control into the timer's output socket. Ensure the appliance's power switch is set to the "ON" position if it has one, so the timer can control its power supply.

Note: *The timer's internal clock will start running once it is plugged into a live outlet. If power is interrupted for an extended period, the clock may lose accuracy and require resetting the current time.*

OPERATING INSTRUCTIONS

Once set up, the timer will automatically turn the connected appliance ON and OFF according to your programmed schedule. The dial will continuously rotate, and as the current time aligns with the pushed-down pins, power will be supplied to the appliance. When the current time aligns with the up-position pins, power will be cut off.

Manual Override (if applicable):

Some models may include a manual override switch (e.g., ON/TIMER/OFF). If your model has one, you can use it to temporarily bypass the programmed schedule:

- **ON:** The appliance will remain continuously ON, regardless of the timer settings.
- **TIMER:** The timer will operate according to the programmed schedule.
- **OFF:** The appliance will remain continuously OFF, regardless of the timer settings.

This specific model primarily relies on the pins for scheduling. Ensure pins are correctly set for desired operation.

MAINTENANCE

- **Cleaning:** Disconnect the timer from the power outlet before cleaning. Wipe the exterior with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the timer in a cool, dry place when not in use.

- **Regular Check:** Periodically check the timer and its connections for any signs of damage or wear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn ON/OFF as programmed.	<p>Timer not plugged in.</p> <p>Appliance not plugged into timer.</p> <p>Appliance's own power switch is OFF.</p> <p>Pins not set correctly (e.g., all pins up for an ON period).</p> <p>Current time not set correctly.</p> <p>Power outage.</p>	<p>Ensure timer is securely plugged into a live wall outlet.</p> <p>Ensure appliance is securely plugged into the timer.</p> <p>Set appliance's power switch to ON.</p> <p>Verify that the pins corresponding to the desired ON times are pushed down.</p> <p>Reset the current time on the dial.</p> <p>Check household circuit breaker.</p>
Timer dial is not rotating.	<p>Timer not receiving power.</p> <p>Internal mechanism fault.</p>	<p>Ensure timer is plugged into a live wall outlet.</p> <p>If power is confirmed, the unit may be faulty. Do not attempt to repair; contact support.</p>
Timer makes a clicking noise.	<p>Normal operation for mechanical timers.</p>	<p>This is typically normal for mechanical timers as the internal gears rotate. If the noise is excessively loud or unusual, contact support.</p>

SPECIFICATIONS

Model Number	8033695336330
Brand	TEMPO DI SALDI
Timer Type	24-Hour Mechanical
Input Voltage	220V - 50/60Hz
Color	White
Dimensions (approx.)	12 x 7.5 x 7 cm (4.7 x 3 x 2.8 inches)
Weight (approx.)	130 g (0.29 lbs)
Plug Type	Type F/E (Schuko compatible)
Socket Type	Universal (compatible with small and large plugs, likely Type F/E/L)

WARRANTY INFORMATION

Specific warranty details for this product may vary by region and retailer. Please refer to your purchase receipt or contact the retailer where the product was purchased for detailed warranty terms and conditions. Generally, products are covered against manufacturing defects for a limited period from the date of purchase.

This warranty typically does not cover damage resulting from:

- Improper installation or use.
- Unauthorized repairs or modifications.
- Accident, abuse, or neglect.
- Normal wear and tear.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact your retailer or the manufacturer directly.

Manufacturer: TEMPO DI SALDI

Please have your product model number (8033695336330) and purchase information ready when contacting support.

