

Trust 20322

Trust Primo Wireless Mouse User Manual

Model: 20322

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Trust Primo Wireless Mouse, Model 20322. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your device.

The Trust Primo Wireless Mouse is designed for convenience and reliability, offering a wireless connection and an ambidextrous design suitable for various computing tasks.

PACKAGE CONTENTS

- Trust Primo Wireless Mouse
- USB Micro Receiver
- 2 x AAA Batteries
- User Manual (this document)

SETUP

1. Install Batteries

Locate the battery compartment on the underside of the mouse. Open the cover and insert the two AAA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.

Compact and convenient

Work wirelessly and take it everywhere with you



Image: The underside of the mouse, illustrating the battery compartment and the slot for the USB micro receiver.

2. Connect USB Receiver

Remove the USB micro receiver from its storage slot, usually located within the battery compartment or adjacent to it. Plug the USB receiver into an available USB port on your computer (laptop or desktop PC).

For everyone


Ambidextrous design and compatible with any laptop or PC that has a free USB port



LEFT-RIGHT
HANDED



SPEED SELECT
1000 - 1600 DPI

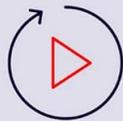

PLUG AND
PLAY



Image: The mouse with an arrow pointing to the USB receiver, indicating its plug-and-play nature.

3. Power On the Mouse

Locate the power switch on the underside of the mouse and slide it to the "ON" position. Your computer should automatically detect and install the necessary drivers. This is a plug-and-play device, so no additional software installation is typically required.



Trust.

Image: Top view of the mouse, highlighting its design and the DPI button.

OPERATING INSTRUCTIONS

Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Accesses contextual menus.
- **Scroll Wheel:** Scrolls through documents and web pages. Can also function as a middle click button.

DPI Adjustment

The mouse features a DPI (Dots Per Inch) button, typically located below the scroll wheel. Press this button to cycle through different cursor speeds (1000 DPI and 1600 DPI). Select the speed that best suits your preference and task.



Image: A person using the Trust Primo Wireless Mouse with a laptop, demonstrating typical usage.

Ambidextrous Design

The Trust Primo Wireless Mouse is designed for ambidextrous use, making it comfortable for both left-handed and right-handed users.



Image: Side profile of the mouse, showing the contoured shape and textured side grips for comfortable handling.

Power Saving Mode

To conserve battery life, the mouse automatically enters a standby mode after a period of inactivity. To reactivate the mouse, simply move it or click any button.

MAINTENANCE

Battery Replacement

When the mouse performance degrades or it stops responding, it is likely time to replace the batteries. Follow the steps in the "Install Batteries" section under Setup to replace the two AAA batteries.

Cleaning

To clean the mouse, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding	<ul style="list-style-type: none">○ Batteries are low or incorrectly installed.○ Mouse is switched off.○ USB receiver is not properly connected.○ Receiver is out of range or obstructed.	<ul style="list-style-type: none">○ Replace batteries or ensure correct polarity.○ Slide the power switch to "ON".○ Ensure the USB receiver is firmly plugged into a working USB port. Try a different port.○ Move the mouse closer to the receiver (up to 6m range) and ensure no large metal objects are blocking the signal.

Problem	Possible Cause	Solution
Cursor movement is erratic or lagging	<ul style="list-style-type: none">Mouse sensor is dirty.Using the mouse on an unsuitable surface.Low battery.	<ul style="list-style-type: none">Clean the optical sensor on the underside of the mouse with a soft cloth.Use the mouse on a clean, non-reflective, opaque surface or a mouse pad.Replace batteries.

SPECIFICATIONS

Brand	Trust
Model	20322
Hardware Interface	USB 2.0
Connectivity Technology	Wireless (USB)
Movement Detection Technology	Optical
Maximum Resolution	1600 DPI (adjustable)
Number of Buttons	4
Hand Orientation	Ambidextrous
Batteries Required	2 x AAA (included)
Product Dimensions	4.8 x 11.5 x 13.5 cm
Item Weight	0.08 g

SUPPORT INFORMATION

For further assistance, warranty information, or to download the latest drivers (if applicable), please visit the official Trust website or contact their customer support. Refer to the product packaging for specific contact details or warranty terms.