

[Manuals.plus](#) /

› [Koolatron](#) /

› Koolatron WC06 6-Bottle Wine Cooler Instruction Manual

Koolatron WC06

Koolatron WC06 6-Bottle Wine Cooler Instruction Manual

Model: WC06

1. INTRODUCTION

Thank you for choosing the Koolatron WC06 6-Bottle Wine Cooler. This appliance is designed to provide optimal storage conditions for your wine collection. Please read this manual thoroughly before operating the unit to ensure proper use, maintenance, and safety.



Figure 1: Koolatron WC06 6-Bottle Wine Cooler, front view, displaying a digital temperature and control panel.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces immediately after the unit has been plugged in.
- Ensure the appliance is properly grounded.
- Do not use the appliance if the power cord is damaged.
- Keep ventilation openings clear of obstructions.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **California Proposition 65 Warning:** This product may contain materials cautioned by California Proposition 65.

3. PACKAGE CONTENTS

Verify that all parts are present before discarding packaging materials:

- Koolatron WC06 6-Bottle Wine Cooler Unit
- 2 Removable Wire Shelves
- Instruction Manual (this document)

4. SETUP

4.1 Placement

The Koolatron WC06 is a freestanding unit. For optimal performance and longevity, consider the following:

- Place the unit on a flat, stable surface away from direct sunlight or heat sources (e.g., oven, radiator).
- Ensure adequate air circulation around the unit. Allow at least 5 inches (12.7 cm) of space at the back and sides for proper ventilation.
- Avoid placing the unit in areas with high humidity.
- The unit's adjustable feet can be used to level the cooler on uneven surfaces.



Figure 2: Proper placement of the wine cooler on a countertop, ensuring adequate space.

4.2 Initial Cleaning

Before first use, clean the interior and exterior of the wine cooler with a soft cloth and mild detergent. Rinse thoroughly and dry completely. Do not use abrasive cleaners or solvents.

4.3 Power Connection

Plug the unit into a dedicated 120V AC outlet. Do not use extension cords or adapter plugs. Allow the unit to stand for at least 2 hours before loading with bottles to allow the cooling system to stabilize.

UV PROTECTIVE GLASS DOOR

Double-paned glass doors block UV rays and internal fan maintains consistent temperature for wine preservation



Figure 3: The double-paned glass door provides UV protection for stored wines.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The Koolatron WC06 features an external digital touch control panel for easy temperature adjustment and light control without opening the door.

DIGITAL TOUCH BUTTON CONTROL PANEL



DIGITAL
LED DISPLAY



TEMPERATURE SETTING
UP(+)/DOWN(-)



LIGHT (ON/OFF)
°C/°F



Figure 4: Digital LED display and touch buttons for temperature adjustment and light control.

- **Digital LED Display:** Shows the current internal temperature.
- **Temperature Up (▲) / Down (▼) Buttons:** Used to adjust the desired temperature.
- **Light () / °C/°F Button:** Press once to turn the interior light on/off. Press and hold to switch between Celsius and Fahrenheit display.

5.2 Setting Temperature

The recommended operating temperature range for this unit is 46-66°F (8-18°C). To set the desired temperature:

1. Press the ▲ or ▼ button. The display will flash, indicating it is in setting mode.
2. Press the ▲ or ▼ button repeatedly to select your desired temperature.
3. Once the desired temperature is displayed, stop pressing the buttons. The display will flash a few more times and then return to showing the actual internal temperature, confirming the new setting.

5.3 Loading Bottles

The cooler is designed to hold up to 6 standard-sized wine bottles. Arrange bottles on the removable wire shelves to allow for

proper air circulation.



Figure 5: Features such as 6-bottle capacity, freestanding design, adjustable feet, and an airtight door seal.



Figure 6: Compact design with a mirrored glass door, removable racks, and interior LED lighting.

6. MAINTENANCE

6.1 Cleaning the Interior

Unplug the unit before cleaning. Use a soft cloth dampened with a mild detergent solution to clean the interior surfaces. Do not use abrasive cleaners or harsh chemicals. Ensure the interior is completely dry before plugging the unit back in.

6.2 Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. For the glass door, use a glass cleaner. Avoid getting water into the control panel area.

6.3 Defrosting

This unit features an automatic defrost system. Any frost that forms on the interior back wall will melt and evaporate. If excessive frost builds up, unplug the unit and allow it to defrost naturally with the door open. Do not use sharp objects to remove frost.

6.4 Power Interruption

In the event of a power outage, the unit will automatically restart at the lowest temperature setting once power is restored. You may need to reset your desired temperature.

7. TROUBLESHOOTING

Review the following common issues and solutions before contacting customer service.

Problem	Possible Cause	Solution
Unit does not operate.	No power supply.	Check if the unit is plugged in. Verify the wall outlet is functional by plugging in another appliance.
Unit is not cold enough.	Ambient temperature is too high; door is opened too frequently; door not closed properly; poor ventilation.	Ensure the room temperature is within the recommended range for thermoelectric coolers (below 77-78°F). Minimize door openings. Check door seal. Ensure adequate space around the unit for ventilation. Allow sufficient time for the unit to reach the set temperature, especially after initial setup or loading.
Excessive noise.	Unit is not level; fan obstruction.	Adjust the leveling feet to ensure the unit is stable. Check for any obstructions around the fan vents. A slight hum from the fan is normal for thermoelectric coolers.
Digital display not working.	Power issue; control panel malfunction.	Unplug the unit for 5 minutes and then plug it back in. If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	WC06
Capacity	6 Standard Wine Bottles (16 Liters)
Temperature Range	46-66°F (8-18°C)
Installation Type	Freestanding; Counter Top
Dimensions (D x W x H)	10 x 20 x 14.25 inches (25.4 x 50.8 x 36.2 cm)
Item Weight	17.24 pounds (7.82 kg)
Voltage	120 Volts
Wattage	50 watts
Defrost System	Automatic
Door Material	Glass
Shelves	2 Wire Shelves (Removable)
Certification	ETL

DIMENSIONS



Figure 7: Product dimensions for planning placement.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Koolatron WC06 6-Bottle Wine Cooler comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance under normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty inquiries, or to order replacement parts, please contact Koolatron customer service. Refer to the contact information provided with your product packaging or visit the official Koolatron website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question