

AeroFryer 9349

AeroFryer Cooklite 4.6L Air Fryer Instruction Manual

Model: 9349

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your AeroFryer Cooklite 4.6L Air Fryer. Please read all instructions carefully before operating the appliance and retain this manual for future reference. This appliance is designed for oil-less frying, convection cooking, and air frying, offering a versatile cooking solution.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the power cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than its intended use.

- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use. If an extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the components of your AeroFryer.



Image 1: Top-down view of the Cooklite AeroFryer 4.6L Air Fryer, showcasing the control knobs for temperature and timer, and the transparent glass cooking pot.

- **Temperature Control Knob:** Used to set the desired cooking temperature.
- **Timer Control Knob:** Used to set the cooking duration.
- **Heating Element:** Located in the lid, providing triple cooking power (halogen, convection, infrared heat).
- **Glass Cooking Pot:** The main cooking chamber with a 4.6-liter capacity.

- **Mesh Basket:** Ideal for frying smaller items and ensuring even air circulation.
- **Reversible Racks:** Allows for high and low cooking positions to accommodate various food types and quantities.



Image 2: Front view of the Cooklite AeroFryer 4.6L Air Fryer, with the lid open to reveal the mesh basket inside the cooking pot. This setup is suitable for preparing items like french fries or chicken wings.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials from the AeroFryer. Retain packaging for storage or shipping if needed.
2. **Cleaning:** Before first use, wash the glass cooking pot, mesh basket, and reversible racks with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit (containing electrical components) in water.
3. **Placement:** Place the AeroFryer on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation. Ensure there is at least 10 cm (4 inches) of clear space around the appliance.
4. **Power Connection:** Ensure the appliance is unplugged before placing any components. Plug the power cord into a

grounded electrical outlet.

5. **Initial Burn-off (Recommended):** For the first use, operate the empty AeroFryer for approximately 10-15 minutes at maximum temperature (480°F/250°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your food into the mesh basket or directly onto the reversible racks within the glass cooking pot. Do not overfill to allow for proper air circulation.
2. **Close Lid:** Ensure the lid is securely closed. The appliance will not operate if the lid is not properly seated.
3. **Set Temperature:** Turn the Temperature Control Knob to your desired cooking temperature. Refer to recipes or food packaging for guidance.
4. **Set Timer:** Turn the Timer Control Knob to the desired cooking time. The appliance will begin heating immediately. The power indicator light will illuminate.
5. **Monitor Cooking:** The transparent glass pot allows you to monitor the cooking process without opening the lid.
6. **Shaking/Turning Food:** For even cooking, especially with items like fries or chicken wings, you may need to shake the basket or turn the food halfway through the cooking time. Carefully open the lid (hot steam will escape), use heat-resistant utensils, and then close the lid securely to resume cooking.
7. **Completion:** The appliance will automatically turn off when the timer reaches zero, and a bell will sound. The power indicator light will turn off.
8. **Remove Food:** Carefully open the lid. Using oven mitts or heat-resistant handles, remove the mesh basket or racks with the cooked food. Place hot components on a heat-resistant surface.
9. **Unplug:** Always unplug the appliance from the power outlet after use.

Cooking Tips

- For crispier results, lightly toss food with a small amount of oil (e.g., 1 tablespoon for 1 lb of fries) before placing it in the AeroFryer.
- Do not overcrowd the basket; cook in batches if necessary to ensure even air circulation and crisping.
- Frozen foods can be cooked directly without thawing, though cooking times may need to be adjusted.
- The AeroFryer utilizes triple cooking power (halogen, convection, infrared) for efficient and fast cooking, cooking up to 3 times faster than conventional methods.



Image 3: The interior of the Cooklite AeroFryer 4.6L Air Fryer's cooking pot, showing food being prepared. This illustrates the appliance's capacity and how food is placed for cooking.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your AeroFryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Removable Parts:** The glass cooking pot, mesh basket, and reversible racks are dishwasher-safe or can be washed by hand with warm, soapy water. Use a non-abrasive sponge or cloth.
3. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Heating Element:** Gently wipe the heating element area in the lid with a damp cloth to remove any food residue. Be careful not to damage the element.
5. **Storage:** Ensure all parts are clean and dry before storing the AeroFryer. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Lid not properly closed. Timer not set.	Ensure power cord is securely plugged into a grounded outlet. Close the lid completely until it clicks into place. Turn the Timer Control Knob to the desired cooking time.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket/pot is overcrowded. Food not shaken/turned. Temperature/time settings incorrect.	Cook in smaller batches. Shake the basket or turn food halfway through cooking. Refer to recipes or adjust settings as needed.
White smoke coming from the appliance.	Greasy food residue on heating element. Excess oil from food.	Unplug and allow to cool. Clean the heating element area. Ensure food is not excessively oily. Drain excess fat if necessary.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** 9349
- **Brand:** AeroFryer
- **Capacity:** 4.6 Liters
- **Power/Wattage:** 1000 watts
- **Material:** Glass (pot)
- **Product Dimensions:** 31.39 x 27.99 x 31.6 cm (approx. 12.36 x 11.02 x 12.44 inches)
- **Item Weight:** 3.35 kg (approx. 7.38 lbs)
- **Special Features:** Triple Cooking Power (Halogen, Convection, Infrared)

WARRANTY AND CUSTOMER SUPPORT

Specific warranty information is typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer for details regarding your product's warranty period and terms.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact AeroFryer customer support through their official website or the contact information provided at the point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question