

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UPBRIGHT AC Power Cord Cable Instruction Manual for Vocopro Gigstar Pro II Karaoke System

UPBRIGHT Vocopro Gigstar Pro II AC Power Cable

UPBRIGHT AC Power Cord Cable Instruction Manual

For Vocopro Gigstar Pro II and Compatible Karaoke Systems

INTRODUCTION

This manual provides instructions for the safe and proper use of your UPBRIGHT AC Power Cord Cable. This cable is designed as a replacement or spare power supply for compatible Vocopro Gigstar Pro II Professional DVD/CD Karaoke Machine Systems and similar devices requiring a C7 (figure-8) power input.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using the power cord.
- This power cord is designed for 120 Volts AC power outlets. Ensure your power source matches this requirement.
- **Caution:** This product is not UL Listed. Exercise extra care during use and ensure it is used in appropriate environments.
- Do not expose the cable to water, moisture, or extreme temperatures. Use only in dry, indoor environments.
- Do not use the cable if it shows any signs of damage, such as cuts, frayed wires, or bent prongs. Immediately replace any damaged cable.
- Always grasp the plug, not the cord, when connecting or disconnecting from an electrical outlet or device.
- Keep the power cord out of reach of children and pets.

PRODUCT OVERVIEW

The UPBRIGHT AC Power Cord Cable facilitates the connection of your compatible electronic device to a standard 120V AC wall outlet. It features a standard NEMA 1-15P male plug for the wall outlet and an IEC C7 (figure-8) female connector for your device.

UpBright AC Power Cord Outlet Line Cable Plug Compatible with:

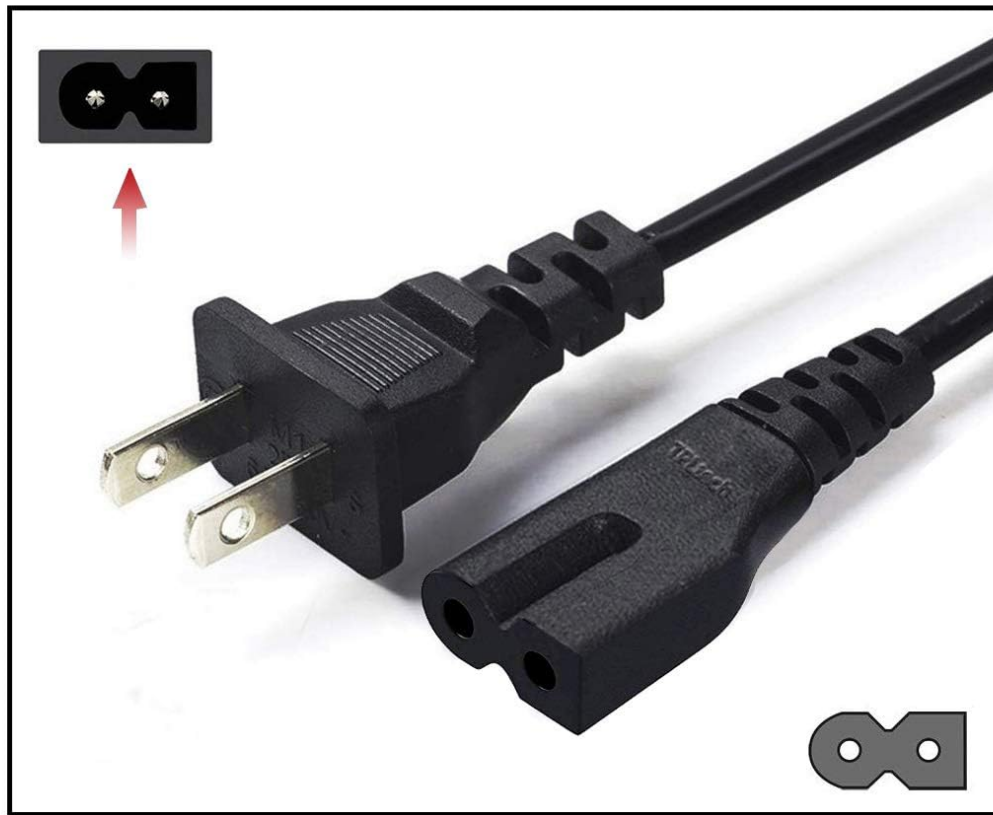



Image: The UPBRIGHT AC Power Cord Cable, illustrating the standard two-prong male plug and the figure-8 female connector.

Compatibility: This cable is specifically designed for devices requiring a C7 (figure-8) power input. Please verify your device's power input port before connecting to ensure proper fit and function.

UpBright AC Adapter Power Supply Compatible with:



YES, COMPATIBLE

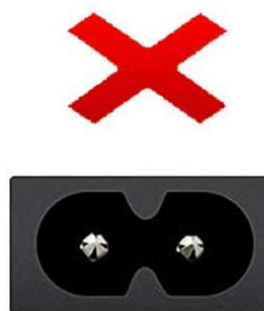

NO, INCOMPATIBLE



NO, INCOMPATIBLE

Image: A visual guide demonstrating the compatible C7 (figure-8) power input and examples of incompatible power input types.

SETUP

1. **Inspect the Cable:** Before connecting, visually inspect the power cord for any signs of damage. Do not use a damaged cable.
2. **Verify Device Compatibility:** Ensure your Vocopro Gigstar Pro II or compatible karaoke system requires a C7 (figure-8) power cord and operates on 120 Volts AC.
3. **Connect to Device:** Insert the female (figure-8) end of the UPBRIGHT AC Power Cord Cable firmly into the power input port of your karaoke system.
4. **Connect to Power Outlet:** Plug the male (two-prong) end of the power cord into a standard, easily accessible 120V AC wall outlet.
5. **Power On:** Once connected, you may power on your device using its dedicated power switch.

OPERATING

This power cord functions by supplying electrical power from a wall outlet to your compatible device. Once properly connected, the device will receive power, allowing it to operate according to its own instructions. There are no specific operational steps for the power cord itself beyond proper connection.

MAINTENANCE

- **Cleaning:** Disconnect the power cord from both the wall outlet and the device before cleaning. Wipe the cable with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the power cord in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply, which can damage internal wires.
- **Regular Inspection:** Periodically inspect the cable for any signs of wear, damage, or overheating. Replace the cable immediately if any damage is observed.

TROUBLESHOOTING

If your device does not power on after connecting the UPBRIGHT AC Power Cord Cable, consider the following:

- **Check Connections:** Ensure both ends of the power cord are securely plugged into the device and the wall outlet.
- **Verify Power Outlet:** Test the wall outlet with another known working appliance to confirm it is supplying power.
- **Inspect Cable:** Re-inspect the power cord for any visible damage. If damaged, discontinue use and replace.
- **Device Power Switch:** Ensure the power switch on your Vocopro karaoke system is in the "ON" position.
- **Device Compatibility:** Double-check that your device is indeed compatible with a C7 (figure-8) power cord and 120V AC input.

SPECIFICATIONS

Feature	Detail
Brand	UPBRIGHT

Feature	Detail
Model Number	Vocopro Gigstar Pro II AC Power Cable
Connector Type	Male-to-Female (NEMA 1-15P to IEC C7)
Voltage Rating	120 Volts AC
Plug Format	Type A (US Standard)
UL Listed	No

WARRANTY INFORMATION

For specific warranty details regarding your UPBRIGHT AC Power Cord Cable, please refer to the purchase documentation provided by your retailer or contact the manufacturer directly. UPBRIGHT products typically come with a limited warranty against manufacturing defects.

SUPPORT

If you require further assistance, have questions, or encounter issues with your UPBRIGHT AC Power Cord Cable, please contact the manufacturer or your point of purchase.

Manufacturer: UpBright
Amazon Store: [Visit the UPBRIGHT Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00QY3ANR2>

More documents and user manuals: <https://manuals.plus/>