

KRUPS XP602550

KRUPS XP602550 Definitive Series Automatic Pump Espresso Maker Instruction Manual

Model: XP602550

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your KRUPS XP602550 Definitive Series Automatic Pump Espresso Maker. Please read this manual thoroughly before first use and keep it for future reference.



Image: Front view of the KRUPS XP602550 Espresso Maker, showcasing its stainless steel finish and compact design.

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Placement:** Place the espresso maker on a stable, flat, heat-resistant surface, away from water sources and heat. Ensure adequate ventilation around the unit.
3. **Water Tank:** The removable water tank is located in the middle of the unit. Remove it, rinse thoroughly, and fill with fresh, cold water up to the MAX line. Reinsert the tank securely.
4. **Drip Tray:** Ensure the removable drip tray is correctly positioned.
5. **Initial Rinse:** Before first use, run a cycle with only water to clean the internal components.

OPERATING INSTRUCTIONS

Making Espresso

1. **Prepare the Portafilter:** Insert the desired filter basket (for 1 or 2 cups) into the portafilter. Fill with finely ground espresso coffee. Tamp the coffee evenly.
2. **Attach Portafilter:** Securely attach the portafilter to the brewing head by twisting it to the "LOCK" position.
3. **Select Volume:** Use the programmable 1 and 2 cup volume settings to choose your desired espresso shot size.
4. **Brew:** Press the brew button. The machine will automatically dispense the selected volume of espresso.

Frothing Milk (for Cappuccinos and Lattes)

1. **Prepare Steam Wand:** Position the adjustable steam spout over a pitcher containing cold milk.
2. **Activate Steam:** Turn the control knob to the steam setting. Allow a few seconds for the steam to build pressure.
3. **Froth Milk:** Immerse the steam wand tip just below the surface of the milk. Move the pitcher up and down to create froth.
4. **Clean Wand:** After frothing, wipe the steam wand immediately with a damp cloth to prevent milk residue from drying.

The machine features an automatic standby mode after 30 minutes of inactivity to conserve energy.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your espresso maker.

- **Daily Cleaning:**
 - Empty and rinse the removable drip tray and water tank.
 - Clean the portafilter and filter basket after each use.

- Wipe down the exterior stainless steel body with a soft, damp cloth.
- **Steam Wand Cleaning:** After each use, purge the steam wand briefly and wipe it clean to remove milk residue.
- **Descaling:** Depending on water hardness and usage, descale the machine every 2-3 months using a suitable descaling solution. Follow the descaling instructions provided with your descaling product.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow / Slow flow	Water tank empty, machine needs descaling, coffee too finely ground/over-tamped.	Refill water tank, descale machine, use coarser grind or less pressure when tamping.
Espresso is too weak	Coffee not finely ground enough, insufficient coffee in portafilter.	Use finer grind, increase coffee dose.
Milk not frothing properly	Steam wand clogged, insufficient steam pressure, milk not cold enough.	Clean steam wand, allow machine to heat up fully, use cold milk.

SPECIFICATIONS

Brand: KRUPS

Model: XP602550

Color: Silver

Material: Stainless Steel

Coffee Maker Type: Espresso Machine

Operation Mode: Fully Automatic

Special Features: Programmable, Removable Tank, Adjustable HOT Water/STEAM Spout

Item Weight: 13.02 pounds

UPC: 010942214601

WARRANTY AND SUPPORT

This KRUPS espresso maker is typically covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, or visit the official KRUPS website for detailed warranty information and customer support contact details.

For technical assistance, spare parts, or service, please contact KRUPS customer service. Keep your proof of purchase and model number (XP602550) handy when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question