

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOURMETmaxx](#) /

› [GOURMETmaxx 07277 Turbo Contact Grill / Table Grill XXL User Manual](#)

GOURMETmaxx 07277

GOURMETmaxx 07277 Turbo Contact Grill / Table Grill XXL User Manual

1. INTRODUCTION

Thank you for choosing the GOURMETmaxx 07277 Turbo Contact Grill / Table Grill XXL. This versatile 2-in-1 appliance is designed for efficient grilling, roasting, and cooking with its innovative ceramic non-stick coating. Please read this manual carefully before first use to ensure safe and optimal operation of your appliance. Keep these instructions for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug. Contact qualified service personnel for repair.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Allow the appliance to cool completely before cleaning or storing.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure adequate ventilation around the appliance during use.
- This appliance is for household use only. Do not use outdoors.

3. COMPONENTS

Familiarize yourself with the parts of your GOURMETmaxx Turbo Contact Grill:

- Upper Grill Plate (with ceramic non-stick coating)
- Lower Grill Plate (with ceramic non-stick coating)
- Handle
- Temperature Control Dial
- Power Indicator Light (Red)
- Ready Indicator Light (Green)
- Fat Collection Tray (removable)

- Power Cord and Plug



Figure 1: The GOURMETmaxx 07277 Turbo Contact Grill shown with its lid open, revealing the white ceramic non-stick grill plates. The temperature control dial and indicator lights are visible on the front. The handle is in an upright position, and the appliance is placed on a kitchen counter.

4. SETUP

1. **Unpacking:** Carefully remove the grill from its packaging. Retain the packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wipe the grill plates with a damp cloth. Ensure they are completely dry.
3. **Placement:** Place the grill on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the grill for ventilation.
4. **Fat Collection Tray:** Insert the fat collection tray into its designated slot at the front or side of the grill.

5. OPERATING INSTRUCTIONS

5.1 Preheating

1. Plug the power cord into a suitable electrical outlet. The red power indicator light will illuminate.
2. Turn the temperature control dial to your desired setting.
3. Close the grill lid and allow the grill to preheat. The green ready indicator light will illuminate when the grill has reached the set temperature.

5.2 Grilling

1. Once the green ready light illuminates, carefully open the grill lid using the handle.

2. Place your food onto the lower grill plate. You may lightly brush the plates with cooking oil if desired, though the ceramic coating is non-stick.
3. Close the lid. The floating hinge design allows the upper grill plate to adapt to the thickness of your food, ensuring even cooking.
4. Grill for the recommended time or until your food is cooked to your preference.
5. Periodically check the food. Use heat-resistant, non-metallic utensils to avoid damaging the non-stick coating.
6. When cooking is complete, carefully remove the food.
7. Unplug the appliance from the power outlet and allow it to cool down before cleaning.

5.3 Using as a Table Grill (Open Position)

The GOURMETmaxx 07277 can also be used as an open table grill. To do this, fully open the lid until it lies flat, creating a larger grilling surface. This is ideal for cooking larger quantities or different types of food simultaneously.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your grill.

1. **Always unplug** the grill and allow it to cool completely before cleaning.
2. **Grill Plates:** The ceramic non-stick coating is easy to clean. Wipe the grill plates with a soft, damp cloth or sponge. For stubborn food residue, dampen a paper towel with a small amount of cooking oil and wipe the plates while they are still slightly warm (but not hot). Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick surface.
3. **Fat Collection Tray:** Remove the fat collection tray and empty it. Wash it with warm, soapy water, then rinse and dry thoroughly.
4. **Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Once clean and dry, store the grill in a cool, dry place. You can store it vertically to save space.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet fault; appliance fault.	Ensure plug is securely in outlet. Check power outlet with another appliance. If problem persists, contact customer support.
Food sticks to grill plates.	Plates not preheated sufficiently; plates not clean; food not suitable for grilling without oil.	Allow grill to fully preheat until green light illuminates. Clean plates thoroughly. Lightly brush plates with cooking oil before use.
Smoke coming from grill.	Excess fat/oil on plates; food burning; residue from previous use.	Ensure plates are clean. Trim excess fat from food. Reduce cooking time or temperature. Clean fat collection tray.

8. SPECIFICATIONS

Model Number: 07277

Power: 1800 Watt

Voltage: 240 Volt

Material: Ceramic (non-stick coating)

Product Dimensions: 34.5 x 34.5 x 12 cm

Product Weight: 2.91 Kilogram

Grill Plate Size: 2 x 29.7 x 23.5 cm

Automatic Shut-off: No

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact the GOURMETmaxx customer service department. Keep your proof of purchase for any warranty claims.