

[Manuals.plus](#) /

› [Swiss Eagle](#) /

› Swiss Eagle SE-9065-06 Herzog Analog Display Swiss Quartz Watch Instruction Manual

Swiss Eagle SE-9065-06

Swiss Eagle SE-9065-06 Herzog Analog Display Swiss Quartz Watch Instruction Manual

Model: SE-9065-06

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Swiss Eagle SE-9065-06 Herzog Analog Display Swiss Quartz Watch. This timepiece features a Swiss-made quartz chronograph movement, three sub-dials, a date window, and is designed for durability with a marine-grade stainless steel case and K1 hardened mineral crystal lens.



Figure 1: Swiss Eagle SE-9065-06 Herzog watch worn on a wrist, showcasing its design and size.

Unboxing and Initial Inspection

Upon receiving your watch, carefully remove it from its packaging. Inspect the watch for any visible damage. The watch comes in a protective box.



Figure 2: The Swiss Eagle watch presented in its black and red branded box.

Setting the Time and Date

1. **Unscrew the Crown:** The watch features a screw-lock crown. Gently unscrew the crown counter-clockwise until it springs out to position 1.
2. **Set the Date (Position 2):** Pull the crown out further to position 2. Turn the crown clockwise or counter-clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism. Push the crown back to position 1.
3. **Set the Time (Position 3):** Pull the crown out to position 3. Turn the crown to set the hour and minute hands. To ensure accurate time setting, synchronize with a reliable time source.
4. **Secure the Crown:** Once the time and date are set, push the crown back to position 1 and screw it clockwise firmly against the case to ensure water resistance.



Figure 3: Detailed view of the watch crown and pushers, essential for time and date adjustments.

OPERATING THE CHRONOGRAPH

Your Swiss Eagle SE-9065-06 watch is equipped with a chronograph function for measuring elapsed time. It features three sub-dials.

1. **Start:** Press the upper pusher (A) to start the chronograph. The large second hand will begin to move, along with the sub-dial hands.
2. **Stop:** Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the main chronograph second hand and the sub-dials.
3. **Reset:** After stopping the chronograph, press the lower pusher (B) to reset all chronograph hands to their zero positions.

Note: Ensure the crown is fully screwed in before using the chronograph, especially in wet conditions, to maintain water resistance.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For silicone straps, a damp cloth with mild soap can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

Water Resistance

This watch is water resistant to 300 meters (330 feet). This makes it suitable for swimming, snorkeling, and recreational diving. However, it is crucial to ensure the screw-lock crown is fully tightened before any exposure to water. Do not operate the crown or pushers while the watch is submerged or wet.

Battery Replacement

The watch is powered by a product-specific battery. When the battery needs replacement, it is recommended to take your watch to an authorized service center or a qualified watchmaker to ensure proper sealing and water resistance are maintained.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Date Not Changing:** Ensure the time is set correctly, passing midnight. If the date changes at noon, it means the watch is set for PM instead of AM. Adjust the time by 12 hours.
- **Chronograph Hands Not Resetting to Zero:** This may require a chronograph reset procedure. Consult a qualified watchmaker if the issue persists after attempting to reset using the pushers.
- **Water Inside Watch:** If you notice condensation or water inside the watch, immediately take it to a service center. This indicates a breach in water resistance.

SPECIFICATIONS

Feature	Detail
Model Number	SE-9065-06
Movement Type	Swiss Quartz Chronograph
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	45 mm
Case Thickness	13 mm
Band Material	Silicone
Band Width	24 mm
Crystal Material	K1 Hardened Mineral
Water Resistance Depth	300 Meters (330 Feet)
Special Features	Chronograph, Date Display, Glow In The Dark, Screw-Lock Crown
Item Weight	318 g

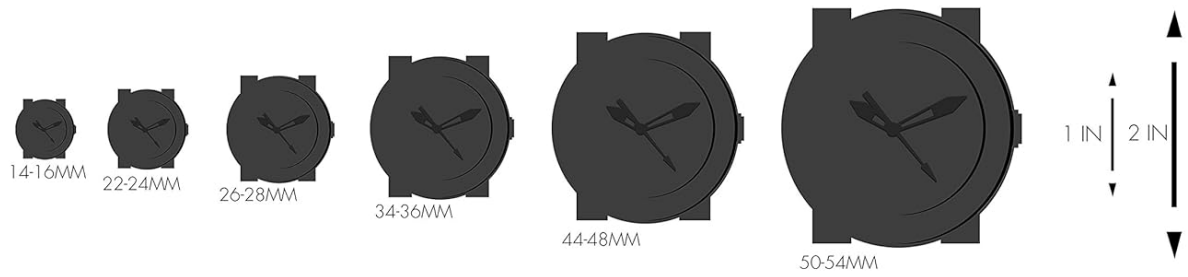


Figure 4: Watch size guide illustrating different case diameters for reference.

WARRANTY AND SUPPORT

For warranty information and support, please contact the seller of record. Keep your purchase receipt as proof of purchase. For general inquiries about Swiss Eagle products, you may visit the official Swiss Eagle store page.

Swiss Eagle Store: [Visit Store](#)

