

[Manuals.plus](#) /

› [Acer](#) /

› Acer Aspire V3-572G-76EM 15.6" Notebook User Manual

Acer V3-572G-76EM

Acer Aspire V3-572G-76EM 15.6" Notebook User Manual

Model: V3-572G-76EM

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Acer Aspire V3-572G-76EM notebook. Please read this guide thoroughly to ensure optimal performance and longevity of your device. The Acer Aspire V3-572G-76EM is a 15.6-inch notebook featuring an Intel Core i7-5500U processor, NVIDIA GeForce 840M graphics, 8GB DDR3L SDRAM, and a 1TB HDD, running on Windows 8.1.



Figure 1: Acer Aspire V3-572G-76EM Notebook, front view with display showing Windows 8.1 interface.

2. INITIAL SETUP

2.1 Unpacking and Inspection

Carefully remove all components from the packaging. Verify that all items listed in the packing list are present and undamaged. If any items are missing or damaged, contact your retailer immediately.

2.2 Connecting the Power Adapter

1. Connect the AC adapter cable to the power connector on the side of the notebook.
2. Plug the AC adapter into a grounded electrical outlet.
3. The battery will begin charging automatically. It is recommended to fully charge the battery before initial use.



Figure 2: Side view of the notebook, illustrating available ports including the power input.

2.3 First Power On

Press the power button to turn on the notebook. Follow the on-screen instructions to complete the initial Windows 8.1 setup, including language selection, user account creation, and network configuration.

3. OPERATING THE NOTEBOOK

3.1 Power Management

- **Turning On:** Press the power button.
- **Shutting Down:** From the Windows Start screen, navigate to the Power options and select "Shut down."
- **Sleep Mode:** Close the lid or select "Sleep" from the Power options.
- **Battery Life:** The notebook offers up to 7 hours of battery life under typical usage conditions.

3.2 Keyboard and Touchpad

The notebook features a full-size keyboard and a multi-gesture touchpad. Refer to the Windows 8.1 help for detailed information on touchpad gestures.

3.3 Connecting Peripherals

- **USB Ports:** The notebook includes two USB 2.0 ports and one USB 3.0 port for connecting external devices such as mice, keyboards, and external storage.
- **HDMI Port:** Connect an external display or TV using an HDMI cable.
- **SD Card Reader:** Insert an SD card into the dedicated slot for data transfer.

3.4 Wireless Connectivity

- **Wi-Fi:** Supports 802.11ac Wi-Fi with MIMO technology (Dual-Band 2.4GHz and 5GHz). Access Wi-Fi settings through the Windows 8.1 network panel.
- **Bluetooth:** Integrated Bluetooth 4.0 allows connection to compatible wireless devices.

4. MAINTENANCE

4.1 Cleaning the Notebook

- Use a soft, lint-free cloth slightly dampened with water or a specialized screen cleaner for the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals or abrasive materials.
- Ensure the notebook is powered off and unplugged before cleaning.

4.2 Battery Care

- Avoid exposing the battery to extreme temperatures.
- For optimal battery longevity, avoid frequently discharging the battery completely.
- If storing the notebook for an extended period, ensure the battery is charged to approximately 50%.



Figure 3: The notebook with its lid open, highlighting the keyboard and display area.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Notebook does not power on.	No power, discharged battery, or power adapter issue.	Ensure AC adapter is securely connected and plugged into a working outlet. Check battery charge.
Display is blank.	Sleep mode, external display connected, or display driver issue.	Press any key or move the mouse to wake from sleep. Disconnect external displays. Restart the notebook.
Wi-Fi connection issues.	Wi-Fi disabled, incorrect password, or router issue.	Ensure Wi-Fi is enabled in Windows settings. Verify network password. Restart your router.
Slow performance.	Too many applications running, low disk space, or malware.	Close unnecessary programs. Free up disk space. Run antivirus software.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	V3-572G-76EM
Processor	Intel Core i7-5500U Dual-core (2 Core) 2.40 GHz (up to 2.7GHz with Turbo Boost)
Operating System	Windows 8.1 64-bit
Display	15.6" Full HD (1920 x 1080) Widescreen CineCrystal LED-backlit ComfyView
Graphics	NVIDIA GeForce 840M with 2GB dedicated DDR3 VRAM
RAM	8 GB DDR3L SDRAM
Storage	1 TB SATA Hard Drive (5400 RPM)
Wireless Connectivity	802.11ac Wi-Fi (Dual-Band 2.4GHz and 5GHz), Bluetooth 4.0
Ports	2x USB 2.0, 1x USB 3.0, 1x HDMI, SD Card Reader, Gigabit Ethernet
Battery	6-cell Li-ion (5000 mAh), up to 7-hours battery life
Dimensions (LxWxH)	15.02 x 10.08 x 1 inches
Weight	5.62 pounds (system unit only)



Figure 4: Top view of the closed notebook, showcasing its silver finish and Acer logo.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Your Acer Aspire V3-572G-76EM notebook comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, driver downloads, or further support, please visit the official Acer support website. You can typically find contact information and support resources by searching for "Acer Support" online or referring to the documentation provided with your notebook.

