

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PHILIPS](#) /

› [Philips SHB7250/00 Wireless Bluetooth Headphones User Manual](#)

PHILIPS SHB7250/00

Philips SHB7250/00 Wireless Bluetooth Headphones

USER MANUAL

Introduction

Welcome to the user manual for your new Philips SHB7250/00 Wireless Bluetooth Headphones. This guide provides essential information on how to set up, operate, maintain, and troubleshoot your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

Safety Information

To prevent damage and ensure safe operation, please observe the following safety precautions:

- Do not expose the headphones to excessive heat, direct sunlight, or moisture.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Do not use the headphones in situations where you need to hear ambient sounds, such as while driving or cycling.
- Keep the headphones away from strong magnetic fields.
- Do not attempt to disassemble or modify the headphones. This will void the warranty.
- Use only the supplied or approved charging cables.

What's in the Box

Upon unpacking your Philips SHB7250/00 headphones, please ensure all the following items are present:

- Philips SHB7250/00 Wireless Bluetooth Headphones
- Audio Cable (1.2 meters)
- USB Charging Cable
- Quick Start Guide

Product Overview



Image: The Philips SHB7250/00 headphones in black. The image highlights the comfortable over-ear design, the

adjustable headband, and the controls located on the right earcup, including volume buttons, track navigation, and a call button. The Philips logo is visible on the earcup.

Controls and Components

The Philips SHB7250/00 headphones feature intuitive controls for easy management of your audio and calls:

- **Power Button:** Used to turn the headphones on/off and initiate Bluetooth pairing.
- **Volume Controls (VOL + / VOL -):** Adjusts the playback volume.
- **Track Navigation (Previous / Next):** Skips to the previous or next track.
- **Call Button:** Answers, ends, or rejects calls. Also activates voice assistants like Siri or Google Now.
- **Digital Bass Boost Button:** Enhances bass output for a richer sound experience.
- **Micro-USB Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection using the supplied audio cable.
- **NFC Area:** For quick pairing with NFC-enabled devices.
- **LED Indicator:** Shows power, charging, and Bluetooth status.

Setup

Charging the Headphones

Before first use, fully charge your headphones. A full charge provides approximately 11 hours of music playback or talk time.

1. Connect the small end of the USB charging cable to the Micro-USB port on the headphones.
2. Connect the larger end of the USB cable to a powered USB port (e.g., computer, USB wall adapter).
3. The LED indicator will illuminate during charging and turn off when charging is complete.

Bluetooth Pairing

The Philips SHB7250/00 headphones use Bluetooth 4.0 for wireless connectivity.

Initial Pairing (First Time Use)

1. Ensure the headphones are turned off and fully charged.
2. Press and hold the Power button until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), turn on Bluetooth and search for available devices.
4. Select "Philips SHB7250" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly.

NFC Pairing (Near Field Communication)

For quick pairing with NFC-enabled devices:

1. Ensure NFC is enabled on your device and the headphones are in pairing mode or turned on.
2. Tap the NFC area of your device against the NFC area on the left earcup of the headphones.
3. Confirm the pairing request on your device.

Multi-Point Connection

The headphones support multi-point connectivity, allowing them to be connected to two Bluetooth devices simultaneously. This enables seamless switching between devices, for example, listening to music on a tablet and answering calls from a smartphone.

1. Pair the headphones with the first device as described above.
2. Disconnect Bluetooth on the first device temporarily.
3. Put the headphones back into pairing mode and pair with the second device.
4. Reconnect Bluetooth on the first device. The headphones should now be connected to both.

Operating the Headphones

Music Playback

- **Play/Pause:** Press the Call button once.
- **Next Track:** Press the 'Next' button.
- **Previous Track:** Press the 'Previous' button.
- **Volume Up/Down:** Press the 'VOL +' or 'VOL -' buttons.
- **Activate Digital Bass Boost:** Press the dedicated Bass Boost button to enhance low frequencies. Press again to deactivate.

Making and Receiving Calls

- **Answer Call:** Press the Call button once.
- **End Call:** Press the Call button once during a call.
- **Reject Call:** Press and hold the Call button for 2 seconds.
- **Activate Voice Assistant (Siri/Google Now):** Press and hold the Call button for 2 seconds when not on a call.

Wired Connection

You can use the supplied 3.5mm audio cable to connect the headphones directly to an audio source, even if the battery is depleted. Simply plug one end into the headphone's audio jack and the other into your device's audio output.

Maintenance

Cleaning

- Wipe the headphones with a soft, damp cloth. Do not use cleaning agents containing alcohol, ammonia, benzene, or abrasives.
- Do not immerse the headphones in water.

Storage

- Store the headphones in a clean, dry place when not in use.
- The headphones feature a compact foldable design for easy storage and portability. Fold them carefully to avoid damage.

Troubleshooting

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Solution
Headphones do not turn on.	Ensure the headphones are fully charged.
Cannot pair with Bluetooth device.	Ensure headphones are in pairing mode (flashing blue/red). Make sure Bluetooth is enabled on your device and it's within range. Delete previous pairings on your device and try again.
No sound or low volume.	Check volume levels on both headphones and the connected device. Ensure headphones are properly paired. Try using the wired connection.
Sound quality is poor.	Move closer to the connected device to reduce interference. Ensure there are no obstacles between the headphones and the device.
Microphone not working during calls.	Ensure the headphones are properly connected for calls. Check microphone settings on your device.

Specifications

Feature	Detail
Model	SHB7250/00
Connectivity	Bluetooth 4.0, NFC
Wireless Range	Up to 10 meters (33 feet)
Frequency Response	8 – 40,000 Hz
Impedance	32 Ohm
Sensitivity	104 dB
Driver Size	40 mm
Battery Type	Lithium Polymer
Battery Life (Music/Talk Time)	Up to 11 hours
Standby Time	Up to 200 hours
Charging Time	Approximately 2 hours
Weight	167.5 grams
Dimensions (LxWxH)	7.9 x 14.5 x 18.2 cm

Feature	Detail
Included Components	Headphone, Audio Cable, USB Cable, Quick Start Guide

Warranty and Support

Philips provides a limited warranty for this product. For detailed warranty information, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Philips support website. For technical assistance, product registration, or to find authorized service centers, please visit www.philips.com/support.