

Melitta 1011-16

Melitta Look Therm Timer Filter Coffee Maker User Manual

Model: 1011-16 (Type: 6738044)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Melitta Look Therm Timer filter coffee maker. Please read these instructions carefully before first use and keep them for future reference.

Important Safety Instructions

- Always ensure the appliance is unplugged before cleaning or if not in use.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Use only original Melitta accessories and spare parts.
- The thermal carafe is designed to keep coffee warm; it is not suitable for heating liquids.

2. PRODUCT OVERVIEW

The Melitta Look Therm Timer is a filter coffee maker designed for convenience and optimal coffee taste, featuring a programmable timer and a durable thermal carafe.



Components

1. Water Reservoir with Level Indicator
2. Swivel Filter Holder (removable)
3. Thermal Carafe with Lid
4. Control Panel with Display
5. Power Button
6. Timer Button
7. Calc (Descaling) Button
8. Hour (h) and Minute (m) Buttons
9. Aroma Selector (integrated)
10. Cable Storage

3. SETUP

3.1 Unpacking and Initial Cleaning

1. Remove all packaging materials and protective films from the appliance.
2. Clean the thermal carafe and its lid, and the removable filter holder with warm water and a mild detergent. Rinse thoroughly.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Before first use, operate the coffee maker with clean water (without coffee) at least twice to rinse the internal components.

3.2 Setting Water Hardness

The appliance features a water hardness setting to optimize the descaling cycle. Refer to your local water supplier for information on your water hardness level.

1. Consult the full instruction manual for specific steps on how to set the water hardness level on your device. This typically involves a combination of button presses.

4. OPERATING INSTRUCTIONS

4.1 Brewing Coffee

1. Open the swivel filter holder and insert a Melitta 1x4 coffee filter.
2. Add the desired amount of ground coffee into the filter. A general guideline is 6-8 grams of coffee per cup (125ml).
3. Fill the water reservoir with fresh, cold water up to the desired level, using the dual graduation marks for 10 large cups (125ml) or 15 small cups (85ml).
4. Ensure the thermal carafe is placed correctly on the warming plate and its lid is securely closed.
5. Press the Power button () to start the brewing process. The indicator light will illuminate.
6. The coffee maker will automatically shut off after brewing is complete.



Image 4.1: The coffee maker with the swivel filter holder open for adding coffee and filter.

4.2 Setting the Timer Function

The timer allows you to program the coffee maker to start brewing at a specific time.



Image 4.2: Close-up of the control panel, showing the display and timer button.

1. First, set the current time using the 'h' (hour) and 'm' (minute) buttons.
2. Prepare the coffee maker as described in section 4.1 (add filter, coffee, and water).
3. Press and hold the **TIMER** button until the display flashes.
4. Use the 'h' and 'm' buttons to set the desired start time for brewing.
5. Press the **TIMER** button briefly again to activate the timer. A small timer icon will appear on the display.
6. The coffee maker will start brewing automatically at the programmed time.

4.3 Adjusting Aroma Strength

The aroma selector allows you to customize the intensity of your coffee, from mild to strong.

1. Locate the aroma selector dial, usually near the filter holder.
2. Turn the dial to your preferred setting before starting the brewing process.

4.4 Using the Thermal Carafe

The double-walled thermal carafe keeps your coffee warm for up to 2 hours without a heating plate, preserving its flavor.



Image 4.3: The thermal carafe separated from the coffee maker.

- Ensure the carafe lid is securely closed to maintain temperature.
- The carafe is designed for one-hand operation for easy pouring.
- Do not place the thermal carafe on a stove or in a microwave.

5. MAINTENANCE

5.1 Daily Cleaning

- After each use, remove and discard the used coffee filter.
- Rinse the filter holder and thermal carafe with warm water. The swivel filter holder is dishwasher-safe.
- Wipe the exterior of the appliance with a damp cloth.
- Do not use abrasive cleaning agents or scouring pads.

5.2 Descaling Program

Regular descaling is crucial for the longevity of your coffee maker and for maintaining optimal coffee taste. The appliance features a descaling indicator.

1. When the descaling indicator illuminates, it's time to descale the appliance.
2. Use a commercially available descaling solution suitable for coffee makers, following the manufacturer's instructions.
3. Fill the water reservoir with the descaling solution as instructed.
4. Press the **CALC** button to start the descaling program.
5. After the program is complete, run the coffee maker with clean water at least twice to rinse out any descaling residue.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; power button not pressed; water reservoir empty.	Check power connection; press power button; fill water reservoir.
Coffee tastes weak.	Insufficient coffee grounds; aroma selector set to mild; incorrect water-to-coffee ratio.	Add more coffee; adjust aroma selector to strong; use recommended ratio.
Coffee overflows from filter.	Too much coffee grounds; filter clogged; carafe not correctly placed.	Reduce coffee amount; use correct filter size (1x4); ensure carafe is fully inserted.
Descaling indicator is on.	Appliance requires descaling.	Perform the descaling program as described in section 5.2.

7. SPECIFICATIONS

Brand	Melitta
Model Name	Look Therm Timer
Model Number	1011-16 (Type: 6738044)
Color	Black/Brushed Steel
Dimensions (W x H x D)	Approximately 23 x 35 x 21 cm
Weight	Approximately 2.45 kg
Water Reservoir Capacity	1.4 Liters (for 10 large / 15 small cups)
Coffee Volume	1.2 Liters
Power	1000 Watts
Material	Plastic, Stainless Steel
Filter Size	1x4

Special Features	Timer function, Aroma selector, Descaling program, Descaling indicator, Water hardness setting, Removable swivel filter holder, Thermal carafe, Automatic shut-off.
-------------------------	---

8. WARRANTY AND SUPPORT

Melitta products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Melitta website. For technical support, spare parts, or service inquiries, please contact Melitta customer service. Contact details can typically be found on the official Melitta website or in the product packaging. You can find more information and support at: www.melitta.com