

[Manuals.plus](#) /

› [Home Decorators Collection](#) /

› Home Decorators Collection Weschler 1-Light Polished Chrome Vanity Light (Model 5111-NDM) Instruction Manual

Home Decorators Collection 5111-NDM

Home Decorators Collection Weschler 1-Light Polished Chrome Vanity Light

Model: 5111-NDM

1. INTRODUCTION

Thank you for purchasing the Home Decorators Collection Weschler 1-Light Polished Chrome Vanity Light. This fixture is designed to provide elegant illumination with its crystal and clear glass shades, complemented by a polished chrome finish. This manual provides essential information for safe installation, operation, and maintenance of your new vanity light.

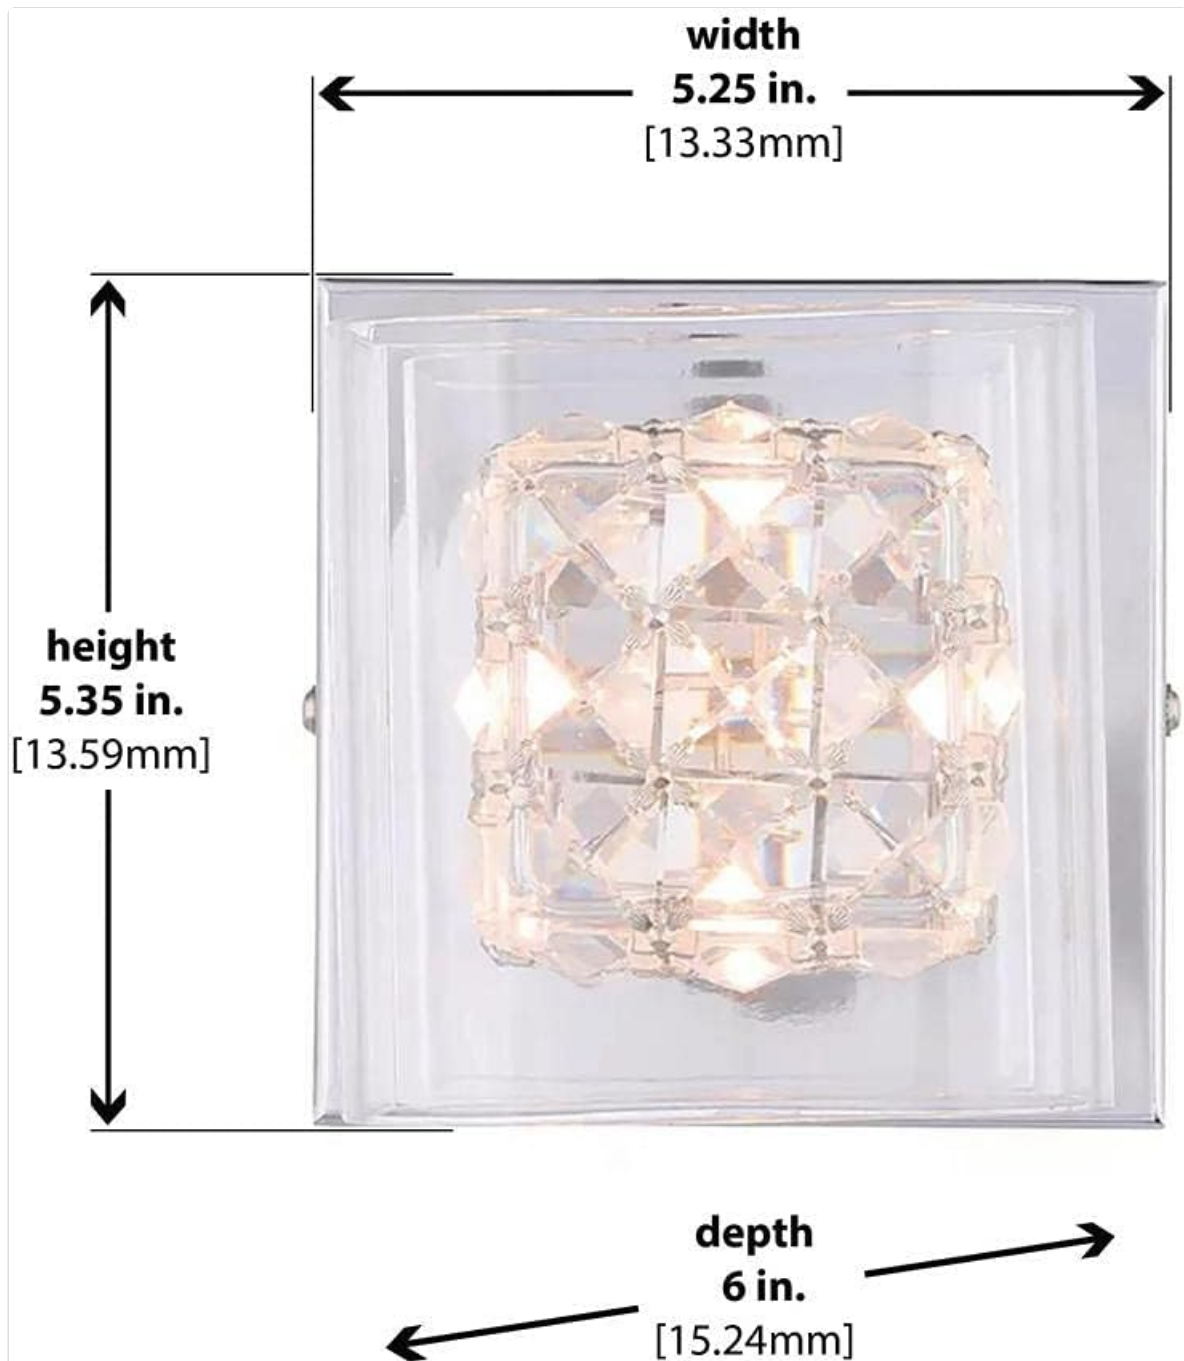


Image 1.1: The Weschler Vanity Light installed in a bathroom setting, showcasing its design and illumination.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is intended for indoor use only. Do not expose to water or moisture.
- Ensure the mounting surface can support the weight of the fixture.
- Do not exceed the maximum wattage specified for the light source.
- Handle glass and crystal components with care to prevent breakage.

3. PACKAGE CONTENTS

Carefully unpack your fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Weschler 1-Light Vanity Light Fixture (1)
- Clear Glass Shade (1)
- Crystal Cube Inset (1)
- Mounting Hardware (1 set)

4. SPECIFICATIONS

Feature	Specification
Model Number	5111-NDM
Brand	Home Decorators Collection
Material	Glass, Metal (Polished Chrome)
Color	Chrome, Clear
Light Source	LED (Integrated or compatible with LED bulbs)
Number of Lights	1
Wattage	40 watts (maximum)
Brightness	40 lumens (Light Output Maximum)
Bulb Base	Prong (if integrated LED, this refers to the connection type)
Mounting Type	Wall Mount
Room Type	Bathroom (Indoor Use Only)
Item Weight	2.5 pounds



Image 4.1: Dimensional drawing of the Weschler Vanity Light.

5. SETUP AND INSTALLATION

Professional installation by a qualified electrician is recommended. Ensure power is disconnected at the circuit breaker before beginning installation.

1. **Prepare the Area:** Turn off the main power supply at the circuit breaker. Clear the installation area.
2. **Mount the Back Plate:** Attach the mounting hardware (included) to the junction box in the wall. Ensure it is securely fastened.
3. **Make Electrical Connections:** Connect the fixture's wires to the house wires according to standard electrical codes (black to black, white to white, ground to ground). Use wire nuts to secure connections.
4. **Secure the Fixture:** Carefully push the fixture onto the mounting hardware, aligning the holes, and secure it with the provided screws.
5. **Install Glass Shade and Crystal Inset:** Place the clear glass shade over the light source. Insert the crystal cube into its designated position within the shade. Ensure all components are seated correctly and securely.
6. **Restore Power:** Once installation is complete and all components are secure, restore power at the circuit breaker.



Image 5.1: Detailed view of the fixture components before or during installation.

6. OPERATING INSTRUCTIONS

The Weschler Vanity Light is designed for simple operation via a standard wall switch (toggle switch). Ensure the fixture is properly installed and connected to a power source.

- **Turning On/Off:** Use the wall switch connected to the fixture to turn the light on or off.
- **Light Source:** This fixture uses an LED light source. If the LED is integrated, it is not user-replaceable. If it uses a replaceable LED bulb (Prong base), ensure the replacement bulb matches the specifications (40W max, LED).

7. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your vanity light.

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the polished chrome finish. For the glass shade and crystal components, use a soft, damp cloth with a mild, non-abrasive glass cleaner. Avoid harsh chemicals or abrasive materials that could damage the finish or components.

- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.



Image 7.1: Close-up of the crystal and glass components, illustrating areas for cleaning.

8. TROUBLESHOOTING

If you experience issues with your vanity light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture Loose wiring connection Faulty light source	Check circuit breaker and wall switch. Ensure all wire connections are secure (with power off). If using a replaceable bulb, replace it. If integrated LED, contact customer support.
Light flickers	Loose wiring Incompatible dimmer switch (if applicable) Faulty light source	Check all wire connections (with power off). Ensure dimmer switch is compatible with LED fixtures. Replace if necessary. Replace light source if it is replaceable.
Fixture is loose	Mounting screws not tightened Mounting hardware not secure	Tighten mounting screws securely (with power off). Re-secure mounting hardware to the junction box.

9. WARRANTY AND SUPPORT

Specific warranty information for the Home Decorators Collection Weschler 1-Light Polished Chrome Vanity Light (Model 5111-NDM) is not provided within this document. For warranty details, product support, or to inquire about replacement parts, please contact the manufacturer, Home Decorators Collection, directly through their official website or customer service channels.

Please have your model number (5111-NDM) and proof of purchase available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question