

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby 310068 Pretty Garden House with XS Slide Instruction Manual

Smoby 310068

Smoby 310068 Pretty Garden House with XS Slide Instruction Manual

INTRODUCTION

Welcome to your new Smoby Pretty Garden House with XS Slide. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

General Safety Guidelines

- Recommended age: 2 years and up.
- Adult supervision is required at all times when children are using the product.
- Ensure the product is assembled correctly and securely before allowing children to use it.
- Place the product on a flat, level, and soft surface, such as grass, away from any obstacles.
- Keep the product away from open flames or other heat sources.
- Regularly check all components for wear, damage, or loose connections.

Important Warnings

WARNING: For domestic use only.

WARNING: Maximum user weight for the slide is not specified, but ensure only one child uses the slide at a time.

PARTS LIST

Before Assembly

Please check that all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, contact Smoby customer service.

- Garden House panels (walls, roof sections)
- Sliding shutter
- XS Slide components (slide surface, ladder)
- Fasteners and connectors (screws, caps, clips)

SETUP AND ASSEMBLY INSTRUCTIONS

Tools Required

A screwdriver (not included) may be required for some fasteners. No specialized tools are needed.

Step-by-Step Assembly

Note: Assembly typically takes approximately 45 minutes to 2 hours. Adult assembly is required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the parts list.
2. **Assemble the Garden House Base:** Connect the floor panel to the side walls using the provided fasteners. Ensure all connections are secure and click into place.
3. **Attach Walls and Roof:** Securely attach the remaining wall panels and then the roof sections. Follow the diagrams in the included paper manual for correct orientation and secure all connections.
4. **Install Sliding Shutter:** Insert the sliding shutter into its designated track on the house. Test its movement.
5. **Assemble the XS Slide:** Attach the ladder to the slide surface. Ensure all connections are firm and stable.
6. **Attach Slide to House:** Securely connect the assembled slide to the designated opening on the garden house. Verify stability by gently shaking the structure.
7. **Final Check:** Before allowing children to use the product, ensure all parts are correctly assembled, all fasteners are tightened, and the entire structure is stable.



Image: Dimensions of the Smoby XS Slide. The slide has a height of 75 cm, a sliding length of 90 cm, and a total base length of 125 cm.

OPERATING INSTRUCTIONS

Using the Garden House

The Smoby Pretty Garden House provides a safe and engaging play space for children. Children can enter and exit through the main opening. The sliding shutter can be opened and closed for interactive play, encouraging imaginative scenarios.

Using the XS Slide

Children should climb the ladder to the top of the slide and slide down feet first. Ensure the landing area at the bottom of the slide is clear of other children or objects. Adult supervision is essential during slide use to prevent accidents.

MAINTENANCE

Cleaning

Clean the product regularly with a damp cloth and mild, non-abrasive soap. Do not use harsh chemical cleaners, abrasive sponges, or solvents, as these can damage the plastic and its anti-UV treatment.

Storage

When not in use for extended periods, especially during harsh weather conditions (extreme heat, cold, heavy rain, or strong winds), it is recommended to store the product indoors or cover it to protect it from the elements. The product is anti-UV treated for enhanced durability and color retention.

Inspection

Periodically inspect all parts for signs of wear, damage, cracks, or loose connections. Pay particular attention to the slide surface, ladder steps, and all fastening points. Tighten any loose fasteners immediately. Replace any damaged parts with genuine Smoby replacement parts to ensure continued safety and functionality.

TROUBLESHOOTING

Product Instability

If the product feels unstable after assembly, re-check all connections and ensure they are securely fastened according to the instructions. Verify that the product is placed on a flat, level, and stable surface. Uneven ground can cause instability.

Difficulty with Assembly

Refer to the step-by-step instructions and diagrams provided in this manual and the physical instruction booklet. Ensure all parts are correctly oriented before attempting to connect them. If issues persist, double-check that you have all the necessary parts. If you are still experiencing difficulties, contact customer support.

SPECIFICATIONS

- **Model Number:** 310068
- **Dimensions (Garden House):** 98 cm (Length) x 111 cm (Width) x 127 cm (Height)
- **Slide Length (Gliding Surface):** 90 cm
- **Material:** High-quality Plastic with Anti-UV treatment
- **Product Weight:** 17.1 Kilograms
- **Recommended Age:** From 2 years
- **Manufacturer:** Smoby
- **Country of Manufacture:** France

CUSTOMER SUPPORT

For further assistance, missing parts, or warranty information, please contact Smoby customer service. Refer to the contact details provided with your purchase or visit the official Smoby website for support resources.