

Smoby 310269

Smoby Garden Slide Model 310269

INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Smoby Garden Slide. This manual provides essential information for the safe assembly, operation, and maintenance of your slide. Please read these instructions carefully before use and retain them for future reference. This product is designed for children aged 2 years and up, with a maximum weight capacity of 110 pounds (approximately 50 kg).

2. Safety Information

WARNING: Failure to follow these safety instructions may result in serious injury.

- **Adult Supervision Required:** Always ensure an adult supervises children using the slide.
- **Proper Placement:** Place the slide on a level, soft surface such as grass or sand. Avoid hard surfaces like concrete or asphalt. Ensure adequate clear space around the slide.
- **Weight Limit:** Do not exceed the maximum weight capacity of 110 pounds (50 kg).
- **One Child at a Time:** Only one child should use the slide at a time to prevent collisions.
- **Climbing:** Children should only climb the steps provided, not the slide surface or side rails.
- **Footwear:** Ensure children wear appropriate footwear to prevent slipping.
- **Inspection:** Regularly inspect the slide for any damage, loose parts, or wear before each use. Do not use if damaged.
- **Weather Conditions:** Do not use the slide during strong winds, rain, or extreme temperatures. The plastic material is UV-treated but prolonged exposure to harsh elements can affect its longevity.

3. Package Contents

Please verify that all components are present before beginning assembly:

- Slide chute section
- Ladder frame with steps
- Support base
- Handrails (integrated into ladder frame)
- Hose attachment point (integrated into slide chute)

4. Setup and Assembly

The Smoby Garden Slide is designed for easy assembly and disassembly. No tools are typically required.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Ladder and Slide:** Connect the slide chute section to the ladder frame. Ensure all connection points click securely into place. The design features blow-moulded plastic for a secure fit without sharp edges.
3. **Position the Slide:** Place the assembled slide on a flat, stable surface. The sturdy frame and wide base provide stability.
4. **Water Feature Setup (Optional):** For water play, locate the hose attachment point on the underside of the slide chute. Connect a standard garden hose to this attachment. Ensure the connection is secure to prevent leaks.



Image 1: Fully assembled Smoby Garden Slide, showing the ladder and slide chute.

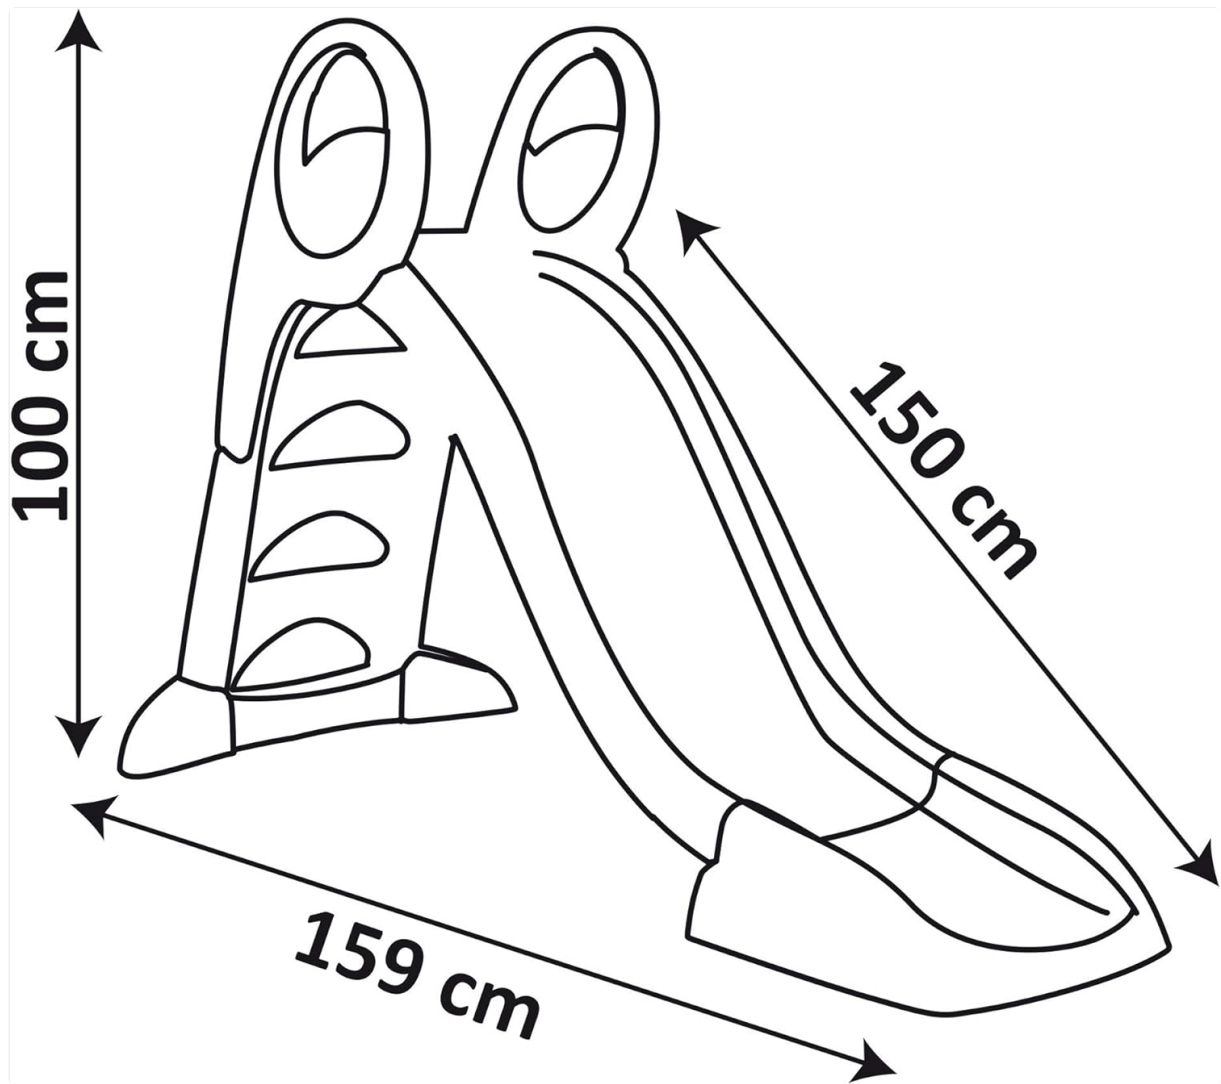


Image 2: Diagram illustrating the dimensions of the Smoby Garden Slide (height 100 cm, length 150 cm, width 159 cm).

5. Operating Instructions

To ensure a fun and safe experience:

- **Climbing:** Children should use the ergonomic steps and handrails to climb to the top of the slide.
- **Sliding:** Instruct children to slide down feet first, in a seated position. The gradient flattens at the bottom for a smooth landing.
- **Water Slide Function:** If using the water feature, turn on the garden hose connected to the slide. Water will spray onto the slide surface, making it slicker for enhanced sliding. Ensure the water flow is consistent.
- **Paddling Pool Use:** The end of the slide can be placed into a paddling pool for a splash landing. Ensure the pool is stable and deep enough for safe entry.



Image 3: Close-up view of the water hose attachment point on the slide chute, showing water spraying.

6. Maintenance

Regular maintenance will prolong the life of your Smoby Garden Slide.

- **Cleaning:** Clean the slide regularly with mild soap and water. Rinse thoroughly. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all connections to ensure they remain secure. Inspect the plastic for cracks, fading, or other signs of wear.
- **UV Protection:** The plastic is treated to protect against UV rays, helping colors remain bright. However, storing the slide out of direct sunlight when not in use can further extend its aesthetic life.
- **Storage:** For compact storage, the slide can be easily dismantled. Store in a dry, sheltered area during off-season or prolonged periods of non-use.

7. Troubleshooting

Problem	Possible Cause	Solution
Slide feels unstable.	Uneven ground; loose connections.	Move the slide to a level surface. Check all assembly connections to ensure they are fully engaged.
Water feature not working or weak flow.	Hose not properly connected; low water pressure; blockage.	Ensure the garden hose is securely attached and the water tap is fully open. Check the hose and attachment point for any blockages.
Child slides too slowly.	Slide surface is dry or dirty.	Ensure the water feature is active if desired. Clean the slide surface to remove any debris or residue.

8. Specifications

- **Model Number:** 310269
- **Material:** Blow-moulded Plastic (UV-treated)
- **Recommended Age:** 2 years and up
- **Maximum Weight Capacity:** 110 lbs (approximately 50 kg)
- **Item Weight:** 6.5 kg (approximately 14.3 lbs)
- **Color:** Multicolor

- **Features:** Water hose attachment, ergonomic handrails and steps, smooth landing gradient.

9. Warranty and Support

For any questions regarding assembly, operation, or if you encounter any issues with your Smoby Garden Slide, please contact Smoby customer support. Refer to the product packaging or the official Smoby website for specific contact information and warranty details applicable to your region.