

[Manuals.plus](#) /

› [Zyliss](#) /

› Zyliss Zick Zick 2 Food Chopper Instruction Manual

Zyliss Zick Zick 2

Zyliss Zick Zick 2 Food Chopper Instruction Manual

Model: Zick Zick 2

PRODUCT OVERVIEW

The Zyliss Zick Zick 2 Food Chopper is designed for quickly and easily chopping vegetables, chocolates, nuts, and cheeses. Its efficient design simplifies food preparation tasks.

Key Features

- High-quality stainless steel blade rotates with each chop for smooth, even chopping.
- Winged lower body opens up for easy blade cleaning.
- Locks down for easy storage.
- Integrated wiper blade for optimum chopping performance and results.
- Soft touch, non-slip plunger.



Image: Zyliss Zick Zick 2 Food Chopper in its retail packaging.

SETUP AND ASSEMBLY

Before first use, wash all parts thoroughly. The chopper is designed for simple assembly and disassembly.

1. Remove the transparent collection cup by twisting or pulling it off the main body.
2. Separate the red base from the transparent cup if they are connected.
3. Ensure the stainless steel blade assembly is securely in place within the main body.
4. Reassemble the collection cup and base if they were separated for cleaning.



Image: Disassembled components of the Zyliss Zick Zick 2 Food Chopper, showing the plunger, main body with blade, collection cup, and base.

OPERATING INSTRUCTIONS

Follow these steps for effective chopping:

1. **Prepare Ingredients:** Cut larger items into smaller, manageable pieces that fit within the chopper's base.
2. **Place Ingredients:** Put the prepared food into the transparent collection cup.
3. **Position the Chopper:** Place the main body with the blade assembly over the ingredients in the cup.
4. **Chop:** Hold the chopper firmly and press down on the soft-touch plunger repeatedly until the desired consistency is achieved. The blade rotates with each press for even chopping.



Image: A person's hands operating the Zyliss Zick Zick 2 Food Chopper to chop red onions on a wooden cutting board.



Image: Zyliss Zick Zick 2 Food Chopper next to freshly chopped red onions.

CARE AND CLEANING

Proper cleaning ensures longevity and hygiene of your Zyliss Zick Zick 2 Food Chopper.

Disassembly for Cleaning

1. Remove the collection cup from the main body.
2. The winged lower body of the chopper opens up for easy access to the blade. Gently pull the sides to expose the blade for thorough cleaning.

Cleaning Instructions

- **Hand Wash Only:** Wash all components with warm, soapy water. Rinse thoroughly.
- Use a brush to carefully clean around the blades to remove any food particles. Exercise caution as blades are sharp.
- Ensure all parts are completely dry before reassembling or storing.



Image: A person's hands cleaning the open winged lower body and blades of the Zyliss Zick Zick 2 Food Chopper under running water.

TROUBLESHOOTING

If you encounter issues with your Zyliss Zick Zick 2 Food Chopper, refer to the following common solutions:

Chopper not chopping effectively:

- Ensure ingredients are cut into small enough pieces to fit and be processed by the blade.
- Avoid overfilling the collection cup.

- Check if the blade is clean and free from obstructions.

Difficulty pressing the plunger:

- This may indicate that the ingredients are too large or too hard. Reduce the size of the food items.
- Ensure the chopper is assembled correctly.

PRODUCT SPECIFICATIONS

Brand	Zyliss
Model	Zick Zick 2
Product Dimensions	3.94"L x 3.74"W x 8.46"H
Material	Stainless Steel (Blade), Plastic (Body)
Color	White (with red/grey accents)
Special Feature	Manual Operation
Recommended Use	Chop
Care Instructions	Hand Wash Only
Item Weight	0.38 Kilograms
Included Components	Chopping Blade, Container, Lid

zyliss

Opens up for
easy blade cleaning

Kann zur leichten
Klingengeräumung geöffnet werden
Le hachoir s'ouvre et permet un
nettoyage facile de la lame

zyliss

Zick Zick 2 Food Chopper

Gemüsehacker
Hachoir à Legumes



Blade rotates with every press for even results
Die Klinge rotiert mit jedem Hacken für gleichmäßige Resultate
Chaque rotation de la lame donne un résultat uniforme



WARRANTY AND CUSTOMER SUPPORT

Warranty Information

The Zyliss Zick Zick 2 Food Chopper comes with a 5-year guarantee, ensuring quality and durability. Please retain your proof of purchase for warranty claims.



Image: Red circular logo indicating a "5 Year Guarantee" for the product.

Customer Support

For product inquiries, technical assistance, or warranty claims, please visit the official Zyliss website or contact their customer service department.

Official Zyliss Store on Amazon: [Zyliss Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00RDO9M64>

More documents and user manuals: <https://manuals.plus/>