

[Manuals.plus](#) /

› [Oki Data](#) /

› Oki Data MB472W Wireless Monochrome Laser MFP User Manual

Oki Data MB472W

OKI Data MB472W Wireless Monochrome Laser MFP User Manual

Model: MB472W (62444801)

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Oki Data MB472W Wireless Monochrome Laser Multifunction Printer (MFP). The MB472W is designed for efficient monochrome printing, scanning, copying, and faxing, featuring wireless connectivity and duplex capabilities.



Figure 1: Front view of the OKI Data MB472W Wireless Monochrome Laser MFP.

SETUP

Unpacking and Initial Inspection

Carefully remove the printer from its packaging. Ensure all packing materials, including tapes and protective films, are removed from the exterior and interior of the device. Verify that the following components are present:

- OKI Data MB472W Multifunction Laser Printer
- Power Cord
- Starter Toner Cartridge
- User Manual (this document)
- Installation CD (if included)

Connecting the Printer

The MB472W supports USB, Ethernet, and Wireless connectivity.

1. **Power Connection:** Connect the power cord to the printer's power input and then to a grounded electrical outlet.
2. **USB Connection (Optional):** For direct connection to a computer, connect a USB cable (not included) from the printer to your computer.
3. **Ethernet Connection (Optional):** For wired network connection, connect an Ethernet cable from the printer's LAN port to your network router or switch.
4. **Wireless Setup:** For wireless connectivity, power on the printer. Navigate to the network settings on the control panel. Select your Wi-Fi network and enter the password. Refer to the "Operating" section for detailed control panel navigation.



Figure 2: Rear view illustrating power and data ports.

Software Installation

Install the printer drivers and software from the provided CD or download the latest versions from the official Oki Data support website. Follow the on-screen instructions to complete the installation.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features a 3.5" backlit LCD display, one-touch function buttons, and an alphanumeric keypad for easy

navigation and operation.



Figure 3: Detailed view of the control panel with LCD display and buttons.

Loading Paper

The printer features a 250-sheet input tray and a 100-sheet multi-purpose tray (MPT). Ensure paper is loaded correctly to prevent jams.

- Open the paper tray and adjust the guides to fit the paper size (up to 8.5 x 14 inches).
- Insert the paper stack, ensuring it is flat and not exceeding the maximum fill line.
- Close the tray securely.

Printing Documents

From your computer, select the OKI Data MB472W as your printer. Adjust print settings such as paper size, orientation, and duplex printing as needed. Click "Print" to send the job to the printer.

Scanning Documents

Place documents on the scanner glass or in the automatic document feeder (ADF). On the control panel, select "Scan". Choose scan destination (e.g., computer, email) and desired settings. Note: Scanned documents are typically saved in JPEG format. For PDF conversion, external software may be required.



Figure 4: The scanner unit with the lid open, showing the flatbed scanner.

Copying Documents

Place the document on the scanner glass or in the ADF. Press the "Copy" button on the control panel. Enter the number of copies and adjust settings like darkness or reduction/enlargement. Press "Start" to begin copying.

Faxing Documents

Place the document in the ADF. Press the "Fax" button on the control panel. Enter the recipient's fax number using the keypad. Press "Start" to send the fax.

MAINTENANCE

Replacing Toner Cartridge

When the "Toner Low" or "Toner Empty" message appears on the display, it is time to replace the toner cartridge.

1. Open the front cover of the printer.
2. Carefully remove the old toner cartridge by pulling it towards you.
3. Unpack the new toner cartridge and gently shake it horizontally a few times to distribute the toner.
4. Insert the new cartridge into the printer until it clicks into place.
5. Close the front cover.



Figure 5: Front access panel open, revealing the toner cartridge area.

Cleaning the Printer

Regular cleaning helps maintain print quality and extends the life of your printer.

- **Exterior:** Wipe the exterior with a soft, damp, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Scanner Glass:** Use a soft cloth dampened with glass cleaner to clean the scanner glass. Ensure no residue remains.
- **Interior:** Periodically open the front cover and gently remove any dust or paper debris using a dry, lint-free cloth or a small vacuum cleaner designed for electronics.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not powering on	Power cord disconnected; Power outlet issue	Check power cord connection; Try a different outlet.
Paper jams	Incorrect paper loading; Damaged paper; Overfilled tray	Remove jammed paper carefully; Reload paper correctly; Do not overfill trays.
Poor print quality	Low toner; Dirty print head/drum; Incorrect print settings	Replace toner cartridge; Clean interior components; Adjust print settings.
Cannot connect to Wi-Fi	Incorrect password; Out of range; Router issue	Verify Wi-Fi password; Move printer closer to router; Restart router.

For further assistance, refer to the full online manual or contact Oki Data customer support.

SPECIFICATIONS

Feature	Detail
Model Name	MB472W
Part Number	62444801
Printer Type	Monochrome Laser Multifunction Printer (Print, Scan, Copy, Fax)
Print Speed (Mono)	Up to 35 ppm
Print Resolution	1200 x 1200 dpi
Scanner Type	Document (Flatbed and ADF)
Max Copy Speed (B&W)	35 ppm
Connectivity	USB, Ethernet, Wireless
Memory	3 GB
Input Tray Capacity	250 sheets (Standard), 100 sheets (MPT)
Maximum Media Size	8.5 x 14 inches
Duty Cycle (Max)	60,000 pages per month
Product Dimensions (WxDxH)	21.73 x 21.41 x 22.48 inches
Item Weight	52.9 pounds
UPC	051851095233

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your product or visit the official Oki Data website. Oki Data provides customer support for technical assistance and service inquiries.

Oki Data Customer Support:

- **Website:** www.okidata.com/support (Example link, actual link may vary)
- **Phone:** Refer to the Oki Data website for regional support numbers.

When contacting support, please have your printer's model number (MB472W) and serial number ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question