

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Coaster Fine Furniture](#) /

› [Coaster Home Furnishings Krester Metal Arc Floor Lamp Instruction Manual](#)

### Coaster Fine Furniture 901199

# Coaster Home Furnishings Krester Metal Arc Floor Lamp Instruction Manual

Model: 901199

Brand: Coaster Fine Furniture

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your Coaster Home Furnishings Krester Metal Arc Floor Lamp. Please read these instructions carefully before assembly and operation, and retain them for future reference.

The 85-inch floor lamp with a sleek chrome metal pole offers a modern, sophisticated touch to any space. Featuring a curved lamp head, it provides adjustable, focused lighting, perfect for your home decor. The round white marble base adds both stability and elegance, while the metal construction ensures long-lasting durability. Ideal for contemporary settings, this standing lamp enhances your home furniture with timeless style.

## SAFETY INFORMATION

### WARNING:

- Ensure all components are securely fastened before use.
- Do not exceed the specified wattage for the light bulb.
- Keep electrical cords away from heat sources, sharp edges, and moving parts.
- Unplug the lamp from the power outlet before cleaning or replacing the bulb.
- This product is intended for indoor use only.
- Handle the marble base with care due to its weight.

## PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- One (1) Floor Lamp (includes metal pole, dome shade, and marble base)
- Assembly Hardware (if applicable)

## SETUP & ASSEMBLY

While the product description indicates "Assembly Required: No", some minor setup may be necessary. For detailed visual instructions, please refer to the official Installation Manual PDF provided by the manufacturer:

[Download Installation Manual \(PDF\)](#)

General assembly steps typically involve:

1. Carefully unpack all components from the packaging.
2. Attach the metal pole sections together, ensuring they are securely threaded.
3. Secure the assembled pole to the heavy marble base. The base is designed for stability.
4. Attach the dome shade to the top of the arc pole.
5. Insert the appropriate light bulb (not included).



Image: The Coaster Krester Arc Floor Lamp positioned in a modern living room, showcasing its elegant design and how it complements the space.

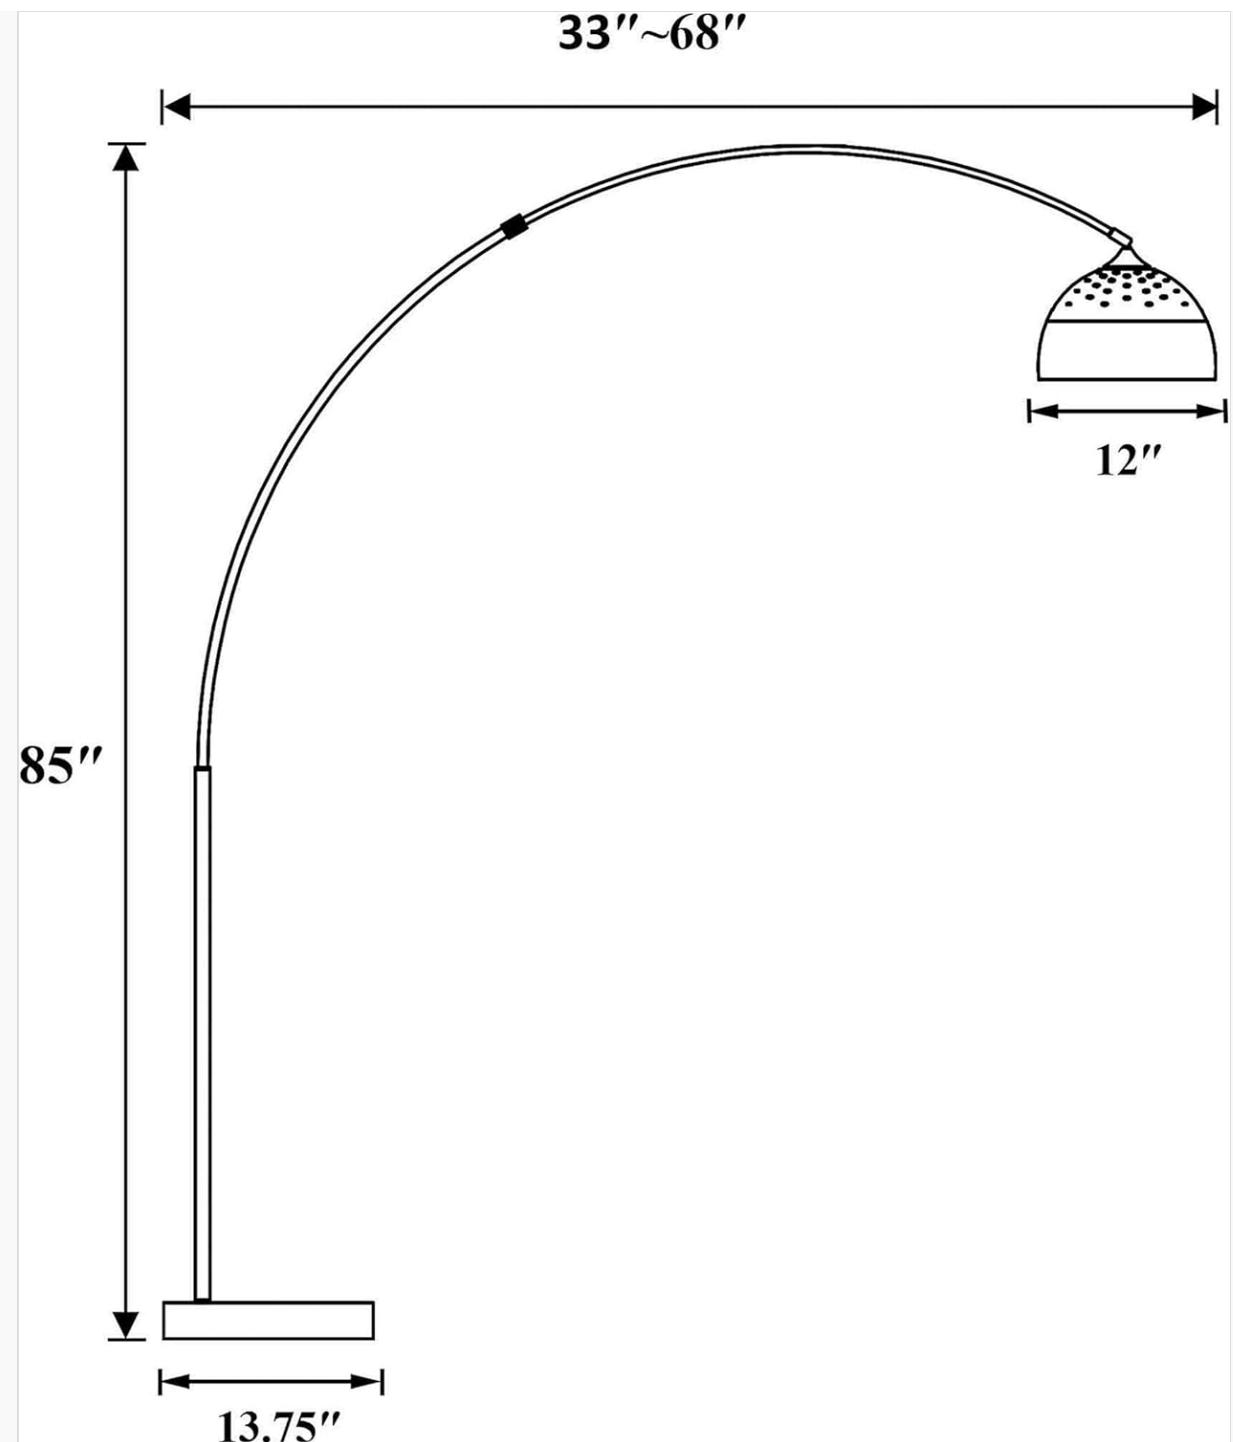


Image: A technical diagram illustrating the key dimensions of the Coaster Krester Arc Floor Lamp, including its 85-inch height, 33-68 inch width, and 13.75-inch base depth.

## OPERATING INSTRUCTIONS

To operate your Coaster Krester Metal Arc Floor Lamp:

1. Ensure the lamp is fully assembled and a compatible light bulb is installed.
2. Plug the power cord into a standard 120V electrical outlet.
3. Locate the foot switch on the power cord.
4. Press the foot switch to turn the lamp ON or OFF.

### Bulb Information:

- Bulb Base: E26

- Maximum Wattage: 8 watts (LED recommended)
- Voltage: 120 Volts
- Light Source Type: LED (compatible with incandescent/CFL up to 100W/23W as per some reviews, but 8W LED is the listed specification for optimal performance and energy efficiency).

## MAINTENANCE

- **Cleaning:** Unplug the lamp before cleaning. Use a soft, dry cloth to wipe down the metal and marble surfaces. Do not use abrasive cleaners or polishes, as they may damage the finish.
- **Bulb Replacement:** Always unplug the lamp and allow the bulb to cool completely before attempting to replace it.
- **Stability Check:** Periodically check all connections and the base for stability. Tighten any loose parts as needed.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not plugged in; Bulb is loose or burnt out; Outlet is not functioning.	Ensure cord is fully plugged into a live outlet. Check and tighten/replace bulb. Test outlet with another device.
Lamp flickers.	Loose bulb; Incompatible bulb type; Loose wiring.	Tighten bulb. Ensure bulb wattage and type are compatible. If flickering persists, consult a qualified electrician.
Lamp is unstable/leans.	Base not properly secured; Uneven surface.	Ensure all pole sections are tightly connected to the base. Place lamp on a flat, stable surface.

## SPECIFICATIONS

- **Model:** 901199
- **Dimensions:** 13.75"D x 33"W x 85"H
- **Item Weight:** 44 Pounds
- **Finish Type:** Chrome
- **Base Material:** Marble
- **Shade Material:** Metal
- **Bulb Base:** E26
- **Wattage:** 8 watts (Max)
- **Voltage:** 120 Volts
- **Switch Type:** Foot Switch
- **Light Source Type:** LED
- **Indoor/Outdoor Usage:** Indoor

## WARRANTY

This product comes with a **1 year limited manufacturer warranty**. Please retain your proof of purchase

for warranty claims. For specific details regarding warranty coverage and claims, refer to the manufacturer's official website or contact their customer support.

## CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Coaster Fine Furniture customer service. Refer to the contact information provided on the product packaging or the official Coaster Fine Furniture website.

You can also visit the [Coaster Fine Furniture Store on Amazon](#) for more information.

## PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video from Coaster Fine Furniture, showcasing various furniture pieces and highlighting the brand's commitment to quality and customer satisfaction. This video provides a general overview of the brand's offerings and values.