

- Manuals.plus /
- > Spirit Of Gamer /
- > Spirit of Gamer SOG-RWP Gaming Steering Wheel User Manual

Spirit Of Gamer SOG-RWP

Spirit of Gamer SOG-RWP Gaming Steering Wheel User Manual

Model: SOG-RWP | Brand: Spirit Of Gamer

- Introduction
- Safety Information
- Package Contents
- Product Overview
- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

This manual provides detailed instructions for the Spirit of Gamer SOG-RWP Gaming Steering Wheel. This wired multi-platform racing wheel is designed for use with PC, PlayStation 2 (PS2), and PlayStation 3 (PS3) systems, offering an immersive driving experience for various racing games. Please read this manual thoroughly before use to ensure proper setup and operation.



Figure 1: Spirit of Gamer SOG-RWP Gaming Steering Wheel and Pedal Set. This image displays the steering wheel unit with its integrated buttons and the separate pedal unit, connected via cable.

2. SAFETY INFORMATION

- Do not expose the device to moisture, dust, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the steering wheel or pedals. This may void the warranty and cause damage.
- Keep the device away from direct sunlight and heat sources.
- Ensure all cables are securely connected before use to prevent accidental disconnection.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.

3. PACKAGE CONTENTS

The Spirit of Gamer SOG-RWP package typically includes the following items:

- SOG-RWP Gaming Steering Wheel Unit
- Pedal Unit (Accelerator and Brake)
- User Manual (this document)

4. PRODUCT OVERVIEW

The SOG-RWP steering wheel features a comprehensive set of controls designed for racing simulation. Key components include:

- **Digital Octo-directional Cross (D-pad):** For menu navigation and directional input.
- **8 Analog Buttons:** Provide pressure-sensitive input for nuanced control.
- **5 Digital Buttons:** Includes Mode, Select/9, Start/10, L3/11, R3/12 for various in-game functions.
- **"Mode" Button:** Specifically for PlayStation 3 configuration and mode switching.
- **8 Freely Programmable Buttons:** Allows customization of controls to suit individual preferences and game requirements.
- **Pedal Unit:** Separate accelerator and brake pedals for realistic driving input.
- **Suction Cups:** Integrated into the base for securing the steering wheel to a flat surface.

5. SETUP INSTRUCTIONS

5.1 Connecting the Steering Wheel

1. Place the steering wheel unit on a stable, flat surface, such as a desk or table.
2. Press down firmly on the steering wheel to engage the suction cups, ensuring a secure attachment. While the rear suction cups provide strong grip, the front ones may offer less adhesion.
3. Connect the pedal unit cable to the designated port on the steering wheel unit.
4. Connect the steering wheel's USB cable to an available USB port on your PC, PlayStation 2, or PlayStation 3 console.
5. Once connected, the steering wheel should be recognized by your system.

5.2 Platform-Specific Setup

For PC: The steering wheel is generally plug-and-play. If drivers are required, they will typically be installed automatically by your operating system. Refer to your game's control settings to configure the steering wheel and pedals.

For PlayStation 2/3: Connect the USB cable to an available USB port on your console. The console should detect the device. For PlayStation 3, use the "Mode" button to ensure proper configuration and functionality within games.

6. OPERATING INSTRUCTIONS

6.1 Basic Controls

- **Steering Wheel:** Turn left or right to control vehicle direction. The wheel has a 180-degree rotation range.
- **Accelerator Pedal:** Press to increase vehicle speed.
- **Brake Pedal:** Press to decrease vehicle speed or stop.
- **D-pad:** Navigate menus or provide directional input in games.
- **Analog/Digital Buttons:** Perform various in-game actions as assigned by the game or user.

6.2 Button Programming

The SOG-RWP features 8 freely programmable buttons. The exact programming method may vary depending on the game or system. Generally, button programming is done through the in-game control settings menu. Consult your game's manual for

specific instructions on remapping controls.

6.3 "Mode" Button for PlayStation 3

When using the steering wheel with a PlayStation 3, the "Mode" button is crucial for proper functionality. Press this button to switch between different modes or to ensure the console recognizes the steering wheel correctly, especially when launching PS2 games on a PS3 console.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe down the steering wheel and pedals. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.
- **Storage:** When not in use, store the steering wheel and pedals in a clean, dry place away from direct sunlight and extreme temperatures. Avoid coiling cables too tightly to prevent damage.
- **Cable Care:** Regularly inspect cables for any signs of wear or damage. Do not pull on the cables to disconnect the device; always grasp the connector.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Steering wheel not recognized by PC/console.	Loose USB connection, incorrect port, system driver issue.	Ensure USB cable is firmly connected. Try a different USB port. Restart your PC/console. For PS3, press the "Mode" button.
Pedals are unresponsive.	Pedal unit cable not connected properly, game settings issue, faulty unit.	Check the connection between the pedal unit and the steering wheel. Verify pedal assignments in game control settings. If issues persist, contact support.
Steering wheel slides on the table during use.	Suction cups not properly engaged or surface is unsuitable.	Ensure the table surface is clean and smooth. Press down firmly on the steering wheel to activate the suction cups. Consider using a non-slip mat if necessary.
Steering input has a "dead zone" or is not precise.	Game calibration settings, inherent design characteristic.	Check in-game control settings for steering linearity or dead zone adjustments. Some games allow for calibration. The SOG-RWP may have a slight inherent dead zone.

9. SPECIFICATIONS

- **Model Number:** SOG-RWP
- **Brand:** Spirit Of Gamer
- **Connectivity Technology:** Wired (Filaire)
- **Compatible Platforms:** PC, Sony PlayStation 2, Sony PlayStation 3
- **Controller Type:** Steering Wheel with Pedals
- **Number of Buttons:** 14 (including D-pad, analog, and digital buttons)
- **Special Features:** Digital Octo-directional Cross, 8 Analog Buttons, 5 Digital Buttons (Mode, Select/9, Start/10, L3/11, R3/12), 8 Freely Programmable Buttons, "Mode" button for PS3 configuration.
- **Dimensions (Item):** Approximately 10 x 10 x 3 cm (Steering Wheel Unit)
- **Weight (Item):** Approximately 2 Kilograms

- **Power Source:** Batteries (1 Lithium Ion type required, though typically USB powered for wired devices, this spec might be generic or refer to internal memory for settings)
- **GTIN (Global Trade Item Number):** 03700104431737

10. WARRANTY AND SUPPORT

Spirit Of Gamer products are designed for reliability and performance. For information regarding warranty coverage, technical support, or service, please refer to the official Spirit Of Gamer website or contact your local retailer. Keep your proof of purchase for warranty claims.

Official Brand Store: [Spirit Of Gamer Amazon Store](#)

© 2023 Spirit Of Gamer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B00RISS75W>

More documents and user manuals: <https://manuals.plus/>