

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Moulinex](#) /

> [Moulinex Masterchef Bowl MS-5817775 Instruction Manual](#)

## Moulinex MS-5817775

# Moulinex Masterchef Bowl

MODEL: MS-5817775 INSTRUCTION MANUAL

## 1. Introduction

---

Thank you for choosing the Moulinex Masterchef Bowl MS-5817775. This bowl is a genuine replacement part or accessory designed for specific Moulinex Masterchef food processor models. This manual provides essential information for the proper installation, use, and maintenance of your new bowl to ensure optimal performance and longevity. Please read these instructions carefully before use.

## 2. Safety Instructions

---

Always observe basic safety precautions when using any kitchen appliance accessory. This bowl is designed to be used with compatible Moulinex Masterchef food processors. Refer to your main food processor's instruction manual for comprehensive safety guidelines.

- Ensure the bowl is correctly seated and locked onto the motor unit before operating the appliance.
- Do not use the bowl if it is cracked, chipped, or damaged in any way.
- Keep hands and utensils away from moving parts when the appliance is in operation.
- Always unplug the food processor before assembling, disassembling, or cleaning the bowl.
- This bowl is not intended for use by children.

## 3. Product Overview

---

The Moulinex Masterchef Bowl MS-5817775 is a durable, clear plastic bowl designed to fit various Moulinex Masterchef food processor models. It serves as the primary container for processing ingredients.



Image showing the Moulinex Masterchef Bowl MS-5817775, a clear plastic bowl designed for food processors. The bowl features a handle and a base designed for secure attachment to the appliance.

#### 4. Setup and Installation

---

To install the Moulinex Masterchef Bowl MS-5817775 onto your compatible food processor:

1. Ensure the food processor is unplugged from the power outlet.
2. Place the bowl onto the motor unit's base, aligning the bowl's tab with the slot on the motor unit.
3. Rotate the bowl clockwise until it clicks securely into place. The appliance will not operate unless the bowl is correctly locked.
4. Once the bowl is secured, you can proceed to attach other accessories (e.g., blade, lid) as per your food processor's manual.

#### 5. Operating Instructions

---

The Moulinex Masterchef Bowl MS-5817775 functions as the main processing container for your food processor. For detailed operating instructions, including how to use various attachments and processing techniques, please refer to the instruction manual provided with your specific Moulinex Masterchef food processor model.

Always ensure the bowl is clean and dry before adding ingredients. Do not overfill the bowl beyond the

maximum fill line, if indicated, to prevent spills and ensure efficient processing.

## 6. Cleaning and Maintenance

Proper cleaning and maintenance will extend the life of your Moulinex Masterchef Bowl MS-5817775.

- **Before Cleaning:** Always unplug the food processor from the power supply and remove the bowl from the motor unit.
- **Dishwasher Safe:** The bowl is dishwasher safe. Place it on the top rack for best results.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately to prevent water spots.
- **Stubborn Stains:** For stubborn food residues, soak the bowl in warm, soapy water for a few minutes before cleaning.
- **Storage:** Store the clean, dry bowl in a safe place, away from direct heat or sunlight, to prevent warping or discoloration.

## 7. Troubleshooting

If you encounter issues with your Moulinex Masterchef Bowl MS-5817775, consider the following:

- **Bowl Not Fitting/Locking:** Ensure the bowl is correctly aligned with the motor unit's base and rotated clockwise until it clicks. Check for any obstructions or damage to the bowl or motor unit.
- **Appliance Not Starting:** The food processor will not operate if the bowl (and lid) are not correctly locked into place. Refer to your main appliance manual for safety interlock mechanisms.
- **Damage:** If the bowl is cracked, chipped, or shows signs of significant wear, it should be replaced to ensure safe operation and prevent leaks.

For further assistance, please contact Moulinex customer support.

## 8. Specifications

<b>Brand</b>	Moulinex
<b>Model Number</b>	MS-5817775
<b>Product Dimensions (L x W x H)</b>	21 x 17 x 14 cm
<b>Item Weight</b>	250 g
<b>Compatibility</b>	Compatible with various Moulinex Masterchef food processor models including: 129 Masterchef 30, 130 Masterchef 35, 813 Masterchef 20, 813 Multifonction, 814 Code 210, 814 Robot Vertical, 920 Masterchef 20, 920 Masterchef 22, A92 Masterchef 270, AX9141 Masterchef 370, AX91B1 Masterchef 370, AX91RG Masterchef 370, AX91S1 Masterchef 370, B66 Masterchef 350, B67 Masterchef 470, C80 Masterchef 450, DFA1B1 Masterchef 1.5L M1, DG5 Masterchef, DG6 Masterchef, EM9 Masterchef, X91 Masterchef 370, Y13 Masterchef 370.

## 9. Warranty and Support

All Moulinex items sold are covered by the legal guarantee of conformity and the guarantee against hidden defects, as per applicable consumer protection laws.

For warranty claims, technical support, or inquiries regarding your Moulinex Masterchef Bowl MS-5817775, please contact Moulinex customer service through their official website or the retailer where the product was purchased. Please have your model number (MS-5817775) and proof of purchase ready when contacting support.