

FERVE F-909

FERVE F-909 Automatic Lead Acid Battery Charger

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, setup, and maintenance of your FERVE F-909 Automatic Lead Acid Battery Charger. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage or injury.

The FERVE F-909 is designed for charging all types of lead-acid batteries, offering automatic charging functionality with selectable output voltages of 12V and 24V, and selectable charging currents between 4 and 8 amps.

2. PRODUCT OVERVIEW

The FERVE F-909 is a robust and versatile automatic charger suitable for lead-acid batteries with capacities ranging from 24 to 95 Ah. It features a practical digital indicator via LEDs for easy monitoring of the charging process. Its durable metal casing ensures longevity and protection.

Key Features:

- Automatic charger for 12V and 24V systems.
- Selectable charging currents: 4A and 8A.
- Compatible with lead-acid batteries from 24 Ah to 95 Ah.
- Equipped with a digital LED indicator for status display.
- Constructed with a robust metal casing for durability.



Image: The FERVE F-909 Automatic Lead Acid Battery Charger, showing its red and white casing, front panel with display and buttons, and attached battery clamps (red and black).

3. SETUP

1. **Unpacking:** Carefully remove the charger from its packaging. Inspect for any signs of damage during transit. If damaged, do not use and contact your supplier.
2. **Placement:** Place the charger on a stable, dry, and well-ventilated surface. Ensure it is away from direct sunlight,

heat sources, and flammable materials.

3. **Battery Preparation:** Ensure the battery to be charged is clean and its terminals are free of corrosion. If charging a wet lead-acid battery, check the electrolyte levels and top up with distilled water if necessary, ensuring proper ventilation during charging.
4. **Connecting to Battery:**

- Connect the **red (+)** clamp of the charger to the **positive (+)** terminal of the battery.
- Connect the **black (-)** clamp of the charger to the **negative (-)** terminal of the battery.
- Ensure a secure connection to prevent sparks or poor contact.

5. **Power Connection:** Once the battery clamps are securely connected, plug the charger's power cord into a suitable mains power outlet (230V AC, 50/60Hz).

4. OPERATING INSTRUCTIONS

1. **Power On:** After connecting the battery and plugging in the charger, the unit will power on. The LED indicators will illuminate, showing the current settings and battery status.
2. **Select Voltage (12V/24V):** Use the voltage selection button (often labeled "V" or with voltage symbols) to choose the appropriate voltage for your battery (12V or 24V). The corresponding LED will light up.
3. **Select Charging Current (4A/8A):** Use the current selection button (often labeled "A" or with current symbols) to select the desired charging current (4A or 8A). For smaller batteries or slower charging, select 4A. For larger batteries or faster charging, select 8A. The corresponding LED will light up.
4. **Monitor Charging:** The digital LED indicator will display the charging progress. Common indicators include:
 - *Charging in progress:* LEDs indicating current flow.
 - *Fully charged:* A specific LED (e.g., "FULL" or "OK") will illuminate, and the charger may switch to a maintenance/float charge mode.
 - *Error/Fault:* If an error occurs (e.g., reverse polarity, faulty battery), an error LED may light up. Disconnect immediately and troubleshoot.
5. **Disconnecting:** Once charging is complete and the battery is fully charged:
 - Unplug the charger from the mains power outlet first.
 - Then, disconnect the black (-) clamp from the battery's negative terminal.
 - Finally, disconnect the red (+) clamp from the battery's positive terminal.

5. MAINTENANCE

- **Cleaning:** Regularly clean the charger's casing with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure the ventilation openings are free from dust and debris.
- **Cable and Clamp Inspection:** Periodically inspect the power cord, charging cables, and battery clamps for any signs of damage, fraying, or corrosion. Replace if necessary.
- **Storage:** When not in use, store the charger in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it out of reach of children.
- **No User Serviceable Parts:** The FERVE F-909 contains no user-serviceable parts. Do not attempt to open or repair the unit yourself. Refer all servicing to qualified personnel.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|--|--|
| Charger does not power on. | No mains power; faulty power cord; internal fault. | Check power outlet and cord. Ensure secure connection. If problem persists, seek professional service. |
| Battery not charging. | Incorrect voltage/current selection; poor clamp connection; deeply discharged battery; faulty battery. | Verify voltage and current settings match battery. Ensure clamps are securely connected. Check battery condition. |
| Error LED illuminates. | Reverse polarity connection; short circuit; internal fault. | Immediately disconnect. Check clamp polarity. Inspect cables for damage. If error persists, battery or charger may be faulty. |
| Charger gets hot during operation. | Normal operation; poor ventilation; excessive load. | Some heat is normal. Ensure adequate ventilation around the charger. Do not cover vents. If excessively hot, disconnect and allow to cool. |

7. SPECIFICATIONS

| Attribute | Detail |
|---|--------------------------------------|
| Brand | FERVE |
| Model Number | F-909 |
| Manufacturer | FERVE, S.A. |
| Product Dimensions | 23.5 x 19.5 x 14 cm |
| Item Weight | 5.14 kg |
| Output Voltage | 12 Volts, 24 Volts (selectable) |
| Current Rating | 4 Amps, 8 Amps (selectable) |
| Compatible Battery Capacity | 24 Ah to 95 Ah (Lead Acid Batteries) |
| Color | Multicolored (Red/White) |
| First Available Date | 22 May 2015 |
| Global Trade Identification Number (GTIN) | 08412473109098 |

8. WARRANTY AND SUPPORT

Specific warranty terms and conditions for the FERVE F-909 charger are provided by the manufacturer or your point of purchase. Please refer to the documentation included with your product or contact the retailer for detailed warranty information.

For technical support, service, or inquiries regarding your FERVE product, please contact FERVE, S.A. directly or consult

their official website for contact details and authorized service centers.

© 2024 FERVE, S.A. All rights reserved. Model F-909.

Documents - FERVE – F-909


[\[pdf\]](#) Declaration of Conformity



Instruccions F 968 909 NOV Ferve 6 12V 4 8A Motardinn eng ferve manu cache tradeinn images manuales |||

AUTOMATIC DDEESSIIGGNFFERRRRETT CARGADOR DE BATERAS - BATTERY CHARGER AUTOMATIC AUTOMATIC fF-990099 24-1202A4h- 95Ah 4A 4A 12V12V 8A8A 242V4V 23300VV - 5500//6600HHzz -221100WW -1122/2/24V4V 44/8/8AA MADMEAIDNESINPASIPNABINYBFYERFEVREV, ES,.AS.A. F-968 **F-909** AUTOMATIC F-968 AUTOMATI...

lang:es **score:31** filesize: 1.94 M page_count: 12 document date: 2022-02-11

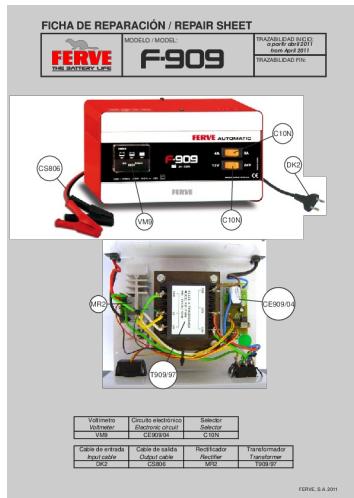


[\[pdf\]](#)

F909 0111ST cdr webmaster1 Versión actual Recambios y esquemas FERVE f 909 ferve images SPV |||

FICHA DE REPARACION / REPAIR SHEET MODELO / MODEL: **F-909**

TRAZABILIDAD INICIO: a partir abril 2011 from April 2011 TRAZABILIDAD FIN: CS806 VM9 C10N DK2 C10N MR2 CE909/04 T909/97 Voltmetro Voltmeter VM9 Circuito electronico Electronic circuit CE909/04 Cable de entrada Input cable DK2 Cable d...

lang:es **score:28** filesize: 241.05 K page_count: 2 document date: 2011-11-29

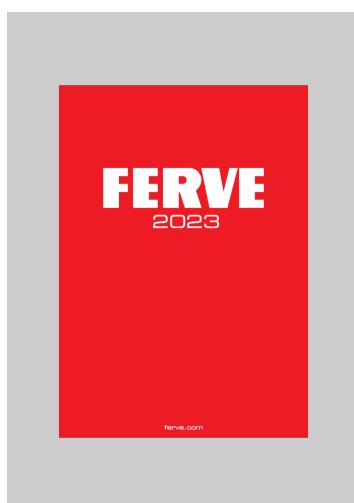

[\[pdf\]](#) Accessories Catalog

TAPA A 2023 Cataleg FERVE 1 ferve CATÁLOGO ¿Por qué elegir Productos |||

2023 ferve.com 2023 Bienvenidos Welcome Bienvenue Les presentamos el nuevo catlogo FERVE 2023, q ... sus, avec le plus haut degr de securit. Pour batteries au plomb acide de 6, 12 et 24 V. F-968 F-908 **F-909** F-2320 230 V - 50/60 Hz 115 W 6 - 12 V 100-240 V - 50/60 Hz 180 W 12 V 230 V - 50/60 Hz 210 W...

lang:en **score:21** filesize: 27.66 M page_count: 45 document date: 2023-01-25

FERVE
2025

ferve.com

[\[pdf\] Catalog](#)

TAPA A 2025 Cataleg 1 ferve |||

2025 ferve.com 2025 Bienvenidos Welcome Bienvenue El nuevo catlogo FERVE 2025 rene los mejores p ... sus, avec le plus haut degr de securit. Pour batteries au plomb acide de 6, 12 et 24 V. F-968 F-908 **F-909** F-2320 230 V - 50/60 Hz 115 W 6 - 12 V 100-240 V - 50/60 Hz 180 W 12 V 230 V - 50/60 Hz 210 W...

lang:fr score:20 filesize: 13.99 M page_count: 44 document date: 2024-12-19



[\[pdf\]](#)

Instrucciones F 1880 Instruccions web ferve TRUE RMS MULTIMETER AUTO DC f V FERVE pc link range rel hz % max min select hold off v mv μ a ma a μ a600ma 10a fused cat iii 1000v iv 600v com multimeter true rms 8 мая 2024 г — For more information go to images 2 Plus d sur |||

TRUE RMS MULTIMETER AUTO DC V RANGE PC-LINK REL SELECT mV V EF- V OFF Hz MAX MIN HOLD Hz C F ... X mA V Hz CAT III 1000V CAT IV 600V 10A MAX A FUSED COM 230V - 50/60Hz - 210W - 12V - 4/8A **f-909** 24-95Ah AUTOMATIC 4A 8A 12V 24V 10A 30 TRUE RMS MULTIMETER AUTO AUTO DC RANGE PC-LINK...

lang:de score:17 filesize: 2.44 M page_count: 28 document date: 2022-02-11