

Manuals.plus /

- › **Swing-N-Slide /**
- › Swing-N-Slide PB 8272 Cedar Brook Wooden Swing Set Play Set User Manual

## Swing-N-Slide PB 8272

# Swing-N-Slide PB 8272 Cedar Brook Wooden Swing Set Play Set User Manual

Model: PB 8272

## PRODUCT OVERVIEW

---

The Swing-N-Slide Cedar Brook Wooden Swing Set is a comprehensive outdoor play structure designed for residential use. It features multiple play elements to encourage active play and imagination.



Image: The Cedar Brook Wooden Swing Set, showcasing its various components including swings, slide, and climbing features, with children actively engaged in play.

This play set includes premium stained lumber, a Sidewinder slide, a rock climbing wall with colorful climbing rocks, two swings with UV plastic dipped chains, a multi-child glider, and a soaring wood roof with a sunburst gable. It offers two deck heights: one at 4 feet and another at 5 feet.

## SAFETY INFORMATION

---

**Important:** This product is intended for backyard residential use only. It is not suitable for commercial applications.

- **Age Recommendation:** Suitable for children aged 36 months to 10 years.
- **Weight Capacity:** The swing beam has a maximum weight capacity of 315 pounds.
- **Safety Standards:** This play set meets and/or exceeds ASTM safety standards for backyard residential use.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).
- Always supervise children during play.
- Ensure proper installation and regular maintenance to prevent hazards.



Image: The swing set with a prominent "Safety Certified" badge, emphasizing adherence to safety standards.

## SETUP AND INSTALLATION

---

Assembly of the Cedar Brook Play Set is required. The package includes all premium, pre-cut lumber and necessary hardware. A fully illustrated instruction manual is provided to guide you through the assembly process.

### Key Installation Steps:

1. **Site Preparation:** Choose a level, clear area in your backyard, ensuring adequate clearance around the play set for safe use.
2. **Unpacking and Inventory:** Carefully unpack all components and verify against the parts list in the instruction manual.
3. **Frame Assembly:** Follow the step-by-step instructions for assembling the main wooden frame structure.
4. **Component Attachment:** Install the swings, slide, rock wall, and other accessories as directed.
5. **Anchoring:** Securely anchor the play set to the ground to prevent tipping, especially in windy conditions.

6. **Final Inspection:** Before first use, thoroughly inspect all connections, bolts, and components to ensure they are tight and correctly installed.

For detailed assembly instructions, please refer to the official Installation Manual provided with your product or download it from the manufacturer's website: [Installation Manual \(PDF\)](#).

## OPERATING INSTRUCTIONS

---

The Cedar Brook Play Set offers various activities for children. Ensure children understand and follow safe play practices for each component.

- **Swings:** The set includes two standard swings and a multi-child glider.
  - Swing one child at a time per swing seat.
  - Do not stand on swings.
  - Ensure adequate space around the swing area to prevent collisions.



Image: Two children enjoying the multi-child glider, designed for shared play.

- **Sidewinder Slide:**

- Slide feet first, one child at a time.
- Ensure the landing area is clear before sliding.



Image: A child descending the green Sidewinder slide, demonstrating its curved design.

- **Rock Climbing Wall:** The wall features colorful climbing rocks.
  - Use handholds and footholds securely.
  - Only one child should climb at a time.



Image: A child ascending the rock climbing wall, utilizing the brightly colored climbing rocks.

- **Monkey Bars:**

- Ensure a firm grip on the bars.
- Only one child should use the monkey bars at a time.



Image: A child demonstrating use of the monkey bars, highlighting the grip and reach required.

- **Picnic Table:** Use for resting, drawing, or light snacks.

## MAINTENANCE

---

Regular maintenance is crucial to ensure the longevity and safety of your Swing-N-Slide play set. Perform inspections periodically, especially at the beginning of each play season and monthly during active use.

- **Hardware Check:** Inspect all nuts, bolts, and other fasteners. Tighten any loose hardware to prevent structural instability.
- **Wood Inspection:** Check for splinters, cracks, or signs of rot in the wooden components. Sand down splinters and consider applying a wood sealant or stain annually to protect the cedar from weathering.
- **Swing Chains:** The swing chains are Plastisol coated to prevent pinched fingers and rust. Inspect them for any signs of wear or damage.
- **Slide Surface:** Clean the slide surface regularly to remove dirt, debris, or mildew that could affect sliding performance or safety.
- **Ground Anchoring:** Verify that the play set remains securely anchored to the ground. Re-anchor if any movement is detected.

- **General Cleaning:** Clean all surfaces with mild soap and water as needed. Avoid harsh chemicals that could damage materials.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter with your play set.

Problem	Possible Cause	Solution
Play set feels wobbly or unstable.	Loose hardware or inadequate anchoring.	Inspect and tighten all bolts and nuts. Ensure the play set is properly anchored to the ground according to the installation manual.
Squeaking noises from swings.	Friction at pivot points or chain connections.	Apply a small amount of lubricant (e.g., silicone spray) to the swing hangers and chain connections.
Wood appears faded or weathered.	Exposure to sun and elements.	Apply a wood sealant or stain designed for outdoor play equipment. This is a normal part of wood aging and does not affect structural integrity if maintained.
Slide has cracks or breaks.	Damage from impact or manufacturing defect.	The Sidewinder slide has a lifetime warranty against cracks and breaks. Contact Swing-N-Slide customer support for replacement.

## SPECIFICATIONS

---

Feature	Detail
Model Number	PB 8272
Brand	Swing-N-Slide
Assembled Dimensions (L x W x H)	250"D x 141"W x 123"H (approx. 20'10"D x 11'9"W x 10'3"H)
Play Deck Dimensions	4' x 4' and 2' x 4'
Rock Wall Height	60"
Frame Material	Cedar
Color	Green (for slide and swing seats)
Assembly Required	Yes
Recommended Age	36 months - 10 years
Swing Beam Max Weight Capacity	315 pounds
UPC	032866082722
Item Weight	0.01 ounces <i>(Note: This value may represent packaging weight or be a data anomaly; actual product weight is significantly higher.)</i>

## WARRANTY AND SUPPORT

---

Swing-N-Slide is committed to product quality and customer satisfaction.

- **Sidewinder Slide Warranty:** The Sidewinder slide is proudly made in the USA and features a **Lifetime Warranty** against cracks and breaks.
- **Returns:** This product is eligible for 30-day easy returns through Amazon.com.
- **Customer Support:** For any questions regarding assembly, parts, or warranty claims, please contact Swing-N-Slide customer support directly. Refer to the contact information provided in your product packaging or on the official Swing-N-Slide website.

For additional information and resources, you may visit the [Swing-N-Slide Store](#) on Amazon.