

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Signature Design by Ashley](#) /
- › Signature Design by Ashley Jayron 2 Seat Powered Recliner Sofa Instruction Manual

### Signature Design by Ashley U7660047

# Signature Design by Ashley Jayron 2 Seat Powered Recliner Sofa Instruction Manual

Model: U7660047

[Introduction](#)   [Safety](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Signature Design by Ashley Jayron 2 Seat Powered Recliner Sofa. Please read this manual thoroughly before assembly and operation, and retain it for future reference. This sofa features a powered reclining mechanism for enhanced comfort.



**Figure 1:** The Jayron 2 Seat Powered Recliner Sofa in Harness Brown, showcasing its contemporary design and two reclining seats.

## 2. IMPORTANT SAFETY INFORMATION

---

Observe the following safety precautions to prevent injury or damage to your furniture:

- Keep children and pets away from the reclining mechanism. Ensure no obstructions are present when operating the recline function.
- Do not stand on the footrest or armrests.
- Ensure the power cord is not pinched or damaged. Route the cord safely to avoid tripping hazards.
- Only use the provided power cord and adapter.
- Do not attempt to disassemble or repair the powered reclining mechanism yourself. Contact qualified service personnel for assistance.
- Avoid placing the sofa near heat sources or in direct sunlight for prolonged periods to prevent material degradation.

## 3. SETUP AND ASSEMBLY

---

### 3.1 Package Contents

- Jayron 2 Seat Recliner Sofa (Main Unit)
- Power Cord

### 3.2 Placement

Position the sofa on a level, stable surface. Ensure there is adequate clearance behind and in front of the sofa for the reclining mechanism to operate fully without obstruction. A minimum of 10-12 inches from the wall is typically recommended for full recline.



Figure 2: Dimensions of the Jayron 2 Seat Recliner Sofa: 91 inches wide, 38 inches deep, and 42 inches high.

### 3.3 Power Connection

1. Locate the power port on the underside or rear of the sofa.
2. Connect the provided power cord securely to the sofa's power port.
3. Plug the other end of the power cord into a standard, grounded electrical outlet.
4. Ensure the power cord is not stretched, twisted, or placed where it can be stepped on or damaged.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powered Reclining Function

The Jayron sofa features a one-touch powered reclining mechanism for each seat.

1. **To Recline:** Locate the control button on the side of the sofa (typically on the inner side of the armrest). Press and hold the button to extend the footrest and recline the backrest to your desired position.
2. **To Return to Upright Position:** Press and hold the same control button. The footrest will retract, and the backrest will return to its upright position. Release the button when the desired position is reached.



**Figure 3:** The Jayron 2 Seat Recliner Sofa with both footrests extended, demonstrating the powered reclining function.



**Figure 4:** A close-up view of the circular one-touch power recline button integrated into the side of the sofa.

## 5. CARE AND MAINTENANCE

---

### 5.1 General Care

- Regularly dust the sofa with a soft, dry cloth.
- Avoid direct sunlight and heat sources to prevent fading and drying of the material.
- Rotate cushions periodically if possible (though these are attached) to ensure even wear.

### 5.2 Cleaning the Upholstery (Leather/PVC)

The sofa features 100% leather on cushion backs and arms, and a blend of 31% Polyester & 69% PVC on outside parts, arms, backs, and rails.

- For general cleaning, wipe with a damp cloth and mild soap solution. Dry immediately with a clean, soft cloth.

- For spills, blot immediately with a clean, dry cloth. Do not rub.
- Avoid harsh chemicals, abrasive cleaners, or solvents, as these can damage the upholstery.
- For stubborn stains, consult a professional upholstery cleaner.



Figure 5: A detailed view of the Harness Brown upholstery, showing the texture and stitching.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Recliner does not operate.	No power supply. Power cord disconnected. Outlet malfunction.	Ensure the power cord is securely plugged into both the sofa and a working electrical outlet. Test the outlet with another device.
Recliner operates slowly or intermittently.	Low power. Obstruction in mechanism.	Check power connections. Ensure no objects are obstructing the reclining mechanism.
Unusual noises during operation.	Mechanism requires lubrication. Loose components.	Contact customer support. Do not attempt to lubricate or tighten components yourself unless specifically instructed.

## 7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Signature Design by Ashley
Model Number	U7660047
Color	Brown (Harness Brown)
Product Dimensions (D x W x H)	38"D x 91"W x 42"H
Item Weight	0.01 Ounces <i>(Note: This weight appears to be a data entry error. Actual weight will be significantly higher.)</i>
Upholstery Fabric Type	Faux Leather (Cushion backs and arms: 100% leather; Outside parts arms backs rails: 31% Polyester & 69% PVC)
Fill Material	Foam
Special Feature	Powered Reclining
Included Components	Power Cord
UPC	024052300062

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official Signature Design by Ashley website. For technical assistance, replacement parts, or any other inquiries, please contact Signature Design by Ashley customer support.

**Online Support:** [Visit the Signature Design by Ashley Store on Amazon](#)



© 2025 Signature Design by Ashley. All rights reserved.