

[Manuals.plus](#) /

› [BestAir](#) /

› BestAir ALL-2 Humidifier and Air Filter User Manual

BestAir ALL-2

BestAir ALL-2 Humidifier and Air Filter User Manual

For Models: ALL-2

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your BestAir ALL-2 Humidifier and Air Filter. Designed for optimal performance, this filter helps maintain efficient humidification and air quality in your home. Please read these instructions carefully before use to ensure safe and effective operation.

PRODUCT FEATURES

- **Metal Reinforcement:** Adds rigidity and stability to the wick filter, preventing sagging when wet.
- **Anti-Microbial Treated:** Helps inhibit the growth of mold, mildew, and bacteria on the filter.
- **Optimized Absorption:** Made with soft, absorbent paper for efficient moisture transfer.
- **Trim to Fit:** Designed to be trimmed for compatibility with various humidifier models.

COMPATIBILITY

The BestAir ALL-2 Humidifier and Air Filter is compatible with a range of humidifier models, including but not limited to:

- **Holmes Models:** HM850, 1845, 1850, 1855, 1975, 2059, 2060W, 2000, 3000, 3400, 3500, 3600, 3640, 3650, 3600, 3701, 4000
- **GE Models:** 106463
- **White-Westinghouse Models:** WWHT60, 1101, 1600
- Also fits most Bonaire humidifiers.

Always refer to your humidifier's manual for specific filter requirements.

SETUP AND INSTALLATION

Follow these general steps to install your new BestAir ALL-2 filter. Specific instructions may vary slightly depending on your humidifier model. Always consult your humidifier's user manual for detailed filter replacement procedures.

1. **Power Off:** Ensure your humidifier is unplugged from the power outlet before beginning installation.
2. **Access Filter Compartment:** Open the humidifier's filter compartment. This usually involves removing the water tank or a cover panel.
3. **Remove Old Filter:** Carefully remove the old, used filter and dispose of it properly.
4. **Prepare New Filter:** If necessary, trim the BestAir ALL-2 filter to match the dimensions of your previous filter or the humidifier's filter slot. The metal reinforcement helps maintain its shape.
5. **Install New Filter:** Insert the new BestAir ALL-2 filter into the compartment, ensuring it is seated correctly and securely.
6. **Close Compartment:** Close the filter compartment and reattach any removed parts or water tanks.
7. **Refill Water Tank:** Fill the water tank with clean, fresh water according to your humidifier's instructions.
8. **Power On:** Plug the humidifier back into the power outlet.



Image: BestAir Humidifier and Air Filter packaging. This image displays the BestAir Humidifier + Air Filter packaging. It highlights key features such as 'Anti-Microbial treated' and 'Trim to fit Same Models'. The packaging also lists compatible Holmes, GE, and White-Westinghouse humidifier models, along with an illustration of various humidifiers.

OPERATING INSTRUCTIONS

Once the BestAir ALL-2 filter is installed, operate your humidifier according to its manufacturer's instructions. The filter works by absorbing water from the reservoir and allowing the humidifier's fan to blow air through the moistened wick, releasing invisible moisture into the air. The anti-microbial treatment helps ensure cleaner humidification.

For optimal performance, ensure the humidifier's water tank is regularly filled and the unit is placed in an appropriate location as recommended by your humidifier's manual.

MAINTENANCE

Regular maintenance of your BestAir ALL-2 filter is crucial for efficient and hygienic humidifier operation.

- **Filter Replacement:** Replace your humidifier filter regularly, typically every 1-3 months, or more frequently in areas with hard water or heavy usage. A discolored, hardened, or calcified filter indicates it needs replacement.
- **Cleaning:** Do not attempt to wash or clean the filter. Washing can damage the filter material and reduce its effectiveness, including the anti-microbial treatment. Replace with a new BestAir ALL-2 filter when necessary.
- **Humidifier Cleaning:** Periodically clean your humidifier's water tank and base according to its manufacturer's instructions to prevent mineral buildup and bacterial growth.

TROUBLESHOOTING

If you experience issues with your humidifier after installing the BestAir ALL-2 filter, consider the following common troubleshooting steps:

Problem	Possible Cause	Solution
Reduced Humidity Output	Clogged or old filter; mineral buildup in humidifier.	Replace the filter. Clean the humidifier base and tank.
Unpleasant Odor	Bacterial growth in water or on filter; stagnant water.	Replace the filter. Clean and sanitize the humidifier. Use fresh water daily.
Filter Not Wicking Water	Filter not properly seated; humidifier base not level; excessive mineral buildup.	Ensure filter is correctly installed. Check humidifier for level placement. Clean humidifier.

If problems persist, refer to your humidifier's specific troubleshooting guide or contact the humidifier manufacturer.

SPECIFICATIONS

- **Model Number:** ALL-2
- **Product Dimensions:** 3 x 8.3 x 8.8 inches
- **Item Weight:** 8.1 ounces
- **Manufacturer:** RPS PRODUCTS INC (for BestAir)
- **ASIN:** B00RTKM7XM
- **Features:** Metal reinforcement, Anti-Microbial treated, Trim to fit design.

WARRANTY AND SUPPORT

For specific warranty information regarding your BestAir ALL-2 filter, please refer to the product packaging or contact BestAir customer support directly. Keep your purchase receipt as proof of purchase.

For technical support or inquiries, please visit the [BestAir Store on Amazon](#) or the manufacturer's official website.

