

MEDION E66281

MEDION LIFE E66281 (MD 84627) Kitchen CD Radio FM Instruction Manual

Model: E66281 (MD 84627)

1. INTRODUCTION

Thank you for choosing the MEDION LIFE E66281 (MD 84627) Kitchen CD Radio FM. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the device.
- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the device during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition upon unpacking:

- MEDION LIFE E66281 (MD 84627) Kitchen CD Radio FM unit
- Remote Control (with battery)
- Mounting hardware (screws, spacers, mounting template)
- Power adapter
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your kitchen radio.



Figure 4.1: Front view of the MEDION LIFE E66281 Kitchen CD Radio FM. This image displays the central CD slot, the digital display on the left, and various control buttons arranged below and to the right of the display. An AUX input jack is visible on the right side.



Figure 4.2: The MEDION LIFE E66281 Kitchen CD Radio FM shown alongside its compact remote control. The remote control provides convenient access to all major functions of the radio, including power, volume, mode selection, and CD playback controls.

Front Panel Controls:

- **Display:** Shows time, frequency, and current mode.
- **CD Slot:** For inserting audio CDs.
- **Power Button:** Turns the unit on/off.
- **Mode Button:** Switches between FM Radio, CD, and AUX input.
- **Volume +/- Buttons:** Adjusts the audio volume.
- **Tuning/Skip Buttons:** For radio frequency adjustment or CD track skipping.
- **Play/Pause Button:** Controls CD playback.
- **Stop Button:** Stops CD playback.
- **Dimmer:** Adjusts display brightness.
- **AOT (Auto Off Timer):** Sets a timer for automatic shutdown.
- **PRE+/-:** Navigates through preset radio stations.
- **TIMER:** Sets the kitchen timer or alarm.
- **FUNC (Function):** Accesses additional settings.
- **MEM (Memory):** Stores radio presets.
- **EQ (Equalizer):** Selects sound equalizer presets.
- **AUX Input:** 3.5mm jack for connecting external audio devices.

5. SETUP

5.1 Mounting the Unit

The MEDION LIFE E66281 is designed for under-cabinet mounting. Use the provided mounting template and hardware for secure installation.

1. Select a suitable location under a kitchen cabinet, ensuring sufficient space for operation and ventilation.
2. Tape the mounting template to the underside of the cabinet.
3. Drill pilot holes at the marked positions on the template.
4. Attach the mounting brackets (if separate) or directly screw the unit into place using the provided screws and spacers. Ensure the unit is level and securely fastened.



Figure 5.1: The MEDION LIFE E66281 Kitchen CD Radio FM securely mounted under a kitchen cabinet. This image demonstrates the typical installation, showing the unit positioned above a countertop, ready for use.



Figure 5.2: The MEDION LIFE E66281 Kitchen CD Radio FM featuring its integrated paper holder, shown holding a recipe sheet. This practical design allows users to keep recipes or notes visible while cooking.

5.2 Power Connection

Connect the power adapter to the DC IN jack on the unit and then plug it into a standard wall outlet. The unit will enter standby mode.

5.3 Initial Setup

Upon first power-up, the unit may prompt for initial settings such as time. Follow the on-screen instructions or refer to the 'Setting the Clock' section for manual adjustment.

6. OPERATING INSTRUCTIONS

6.1 Basic Operation

- **Power On/Off:** Press the **Power** button on the unit or remote control.
- **Mode Selection:** Press the **Mode** button repeatedly to cycle through FM Radio, CD, and AUX input modes.
- **Volume Adjustment:** Use the **Vol+/-** buttons on the unit or remote.

6.2 FM Radio Operation

1. Switch to FM Radio mode using the **Mode** button.
2. **Manual Tuning:** Press the **Tuning +/-** buttons briefly to adjust the frequency step by step.
3. **Automatic Scan:** Press and hold the **Tuning +/-** buttons to automatically scan for the next available station.
4. **Storing Presets:** When on a desired station, press the **MEM** button, then use **PRE+/-** to select a preset number, and press **MEM** again to confirm.
5. **Recalling Presets:** Use the **PRE+/-** buttons to navigate through stored stations.

6.3 CD Player Operation

1. Switch to CD mode using the **Mode** button.
2. Gently insert an audio CD into the CD slot with the label side facing up. The unit will automatically load and begin playback.
3. **Play/Pause:** Press the **Play/Pause** button.
4. **Stop:** Press the **Stop** button.
5. **Skip Tracks:** Use the **Skip +/-** buttons to go to the next or previous track.

6.4 AUX Input Operation

1. Connect your external audio device (e.g., MP3 player) to the **AUX IN** jack on the front panel using a 3.5mm audio cable.
2. Switch to AUX mode using the **Mode** button.
3. Control playback from your external device. Adjust volume using the radio's volume controls.

6.5 Timer Functions

- **Kitchen Timer:** Press the **TIMER** button to set a countdown timer for cooking. Use the tuning buttons to adjust the time.
- **Auto Off Timer (AOT):** Press the **AOT** button to set a sleep timer, which will automatically turn off the radio after a set period.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device from the power outlet before cleaning.
- Use a soft, dry cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc.

7.2 Storage

If the unit is not used for an extended period, store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter problems with your device, please refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet faulty.	Check power connections; try a different outlet.
No sound	Volume too low; incorrect mode selected; headphones connected.	Increase volume; select correct mode (FM/CD/AUX); disconnect headphones.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; unsupported disc type.	Reinsert CD correctly; clean or replace CD; ensure it's an audio CD.
Poor FM reception	Weak signal; interference.	Adjust unit position; try manual tuning; minimize interference from other electronics.
Remote control not working	Battery depleted; obstruction between remote and unit.	Replace remote battery; ensure clear line of sight to the unit's IR sensor.

9. SPECIFICATIONS

Feature	Detail
Brand	MEDION
Model Number	E66281 (MD 84627) / 50048714
Connectivity Technology	AUX Input
Compatible Devices	MP3 Player
ASIN	B00RTPHODA
Launch Date on Amazon.com.be	January 5, 2015

10. WARRANTY AND SUPPORT

MEDION products are covered by a manufacturer's warranty. For detailed warranty information, service requests, or technical support, please visit the official MEDION website or contact their customer service department. Keep your proof of purchase for warranty claims.

Official MEDION Website: www.medion.com