

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips LFH072052 720-T Desktop Analog Mini Cassette Transcriber Dictation System w/Foot Control User Manual

PHILIPS LFH0720/52

Philips LFH0720/52 Desktop Analog Mini Cassette Transcriber User Manual

Model: LFH0720/52

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Philips LFH0720/52 Desktop Analog Mini Cassette Transcriber. Please read this manual carefully before using the device to ensure proper functionality and to prevent damage.



Image: The Philips LFH0720/52 Desktop Analog Mini Cassette Transcriber system, showing the main transcriber unit on the left, the foot control pedal on the top right, and the headset on the bottom right. The transcriber unit features a display and various control buttons.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Philips LFH0720/52 Transcriber Unit
- Foot Control Pedal
- Deluxe Headset
- AC Power Adapter
- User Manual (this document)

SETUP

Connecting the Components

1. **Connect the Foot Control:** Insert the plug of the foot control pedal into the designated "Foot Control" jack on the back of the transcriber unit.
2. **Connect the Headset:** Plug the headset into the "Headset" jack, typically located on the front or side of the transcriber unit.
3. **Connect the Power Adapter:** Insert the DC plug of the AC power adapter into the "DC IN" jack on the transcriber unit. Then, plug the AC adapter into a standard electrical outlet.
4. **Insert Mini Cassette:** Open the cassette compartment and insert a mini cassette with the tape side facing the playback head. Close the compartment securely.

OPERATING INSTRUCTIONS

Basic Playback

- **Power On:** Ensure the transcriber is connected to power. The unit should power on automatically or via a dedicated power button.
- **Adjust Volume:** Use the volume control knob or buttons to adjust the audio level through the headset.
- **Playback with Foot Control:**
 - Press and hold the center pedal (Play) to begin playback.
 - Release the center pedal to pause playback.
 - Press the left pedal (Rewind) to rewind the tape.
 - Press the right pedal (Fast Forward) to fast forward the tape.
- **Cue Tone Index Search:** The microprocessor mechanism supports cue tone index search during playback. This allows for quick navigation to marked sections on the tape. Refer to the display for index markers.
- **Turbo Wind:** Utilize the Turbo Wind feature for rapid tape winding, either forward or backward, to quickly locate specific sections.

Tape Handling

Always handle mini cassettes carefully. Avoid touching the tape surface. When inserting, ensure the cassette is oriented correctly to prevent damage to the tape or the transcriber mechanism.

MAINTENANCE

Cleaning the Unit

- **Exterior:** Wipe the exterior of the transcriber unit with a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild detergent can be used, followed by a dry cloth. Do not use abrasive cleaners or solvents.
- **Tape Heads:** Periodically clean the tape heads and pinch roller using a specialized tape head cleaning solution and

a cotton swab. This helps maintain optimal audio quality and prevents tape wear. Ensure the unit is powered off before cleaning.

Storage

Store the transcriber in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Disconnect the power adapter when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Check power adapter connection. Try a different electrical outlet.
No audio from headset	Headset not plugged in correctly, volume too low, or faulty headset.	Ensure headset is fully plugged in. Increase volume. Test with another headset if available.
Tape not playing/moving	Cassette inserted incorrectly, tape jammed, or foot control not pressed.	Re-insert cassette correctly. Check for tape jams. Ensure foot control is pressed firmly.
Poor audio quality	Dirty tape heads, worn tape, or faulty cassette.	Clean tape heads. Try a different cassette.

SPECIFICATIONS

Model: LFH0720/52
Brand: PHILIPS
Mechanism: Microprocessor controlled
Features: Cue tone index search (in play mode), Turbo Wind
Included Accessories: Foot control, Deluxe Headset, AC Adapter
Dimensions (Product): 5.6 x 8.27 x 11.3 inches (approximate)
Weight (Item): 6 pounds (approximate)
Cassette Type: Mini Cassette (Note: Different from Micro-cassettes)
Headphones Jack: 3.5 mm
UPC: 778888033907

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Philips support website. Keep your proof of purchase for warranty claims.
Online Support: www.philips.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question