

[Manuals.plus](#) /

› [Digital Nc](#) /

› Digital Nc Accessory Package for Olympus Stylus VH-510 Digital Camera - User Manual

Digital Nc OVH510BA1

Digital Nc Accessory Package for Olympus Stylus VH-510 Digital Camera

USER MANUAL - MODEL: OVH510BA1

Introduction

This manual provides essential instructions for the Digital Nc Accessory Package, designed to enhance the functionality and protection of your Olympus Stylus VH-510 Digital Camera. The package includes a high-capacity replacement battery, a deluxe hard shell padded case, and an adjustable neck strap.

Package Contents

- 1 x Li-50B High Capacity Replacement Battery (3.7V, 1000 mAh)
- 1 x Deluxe Hard Shell Padded Case (4 3/4" x 2 3/4" x 1 3/4")
- 1 x Adjustable Neck Strap (Lanyard Style with Quick-Release)

Setup

1. Battery Installation and Initial Charge

The Li-50B replacement battery is designed to power your Olympus Stylus VH-510 Digital Camera. Before first use, ensure the battery is fully charged.

1. Open the battery compartment on your Olympus Stylus VH-510 Digital Camera.
2. Insert the Li-50B battery, ensuring the contacts align correctly with the camera's terminals. Close the battery compartment securely.
3. Charge the battery using your camera's original charger or a compatible Li-50B charger until the charging indicator shows a full charge. Refer to your camera's instruction manual for specific charging procedures.



Image: The Li-50B high capacity replacement battery and the deluxe hard shell padded case. The battery is a compact black rectangle, and the case is a black zippered pouch with a textured exterior.

2. Neck Strap Attachment

The adjustable neck strap provides a secure and convenient way to carry your camera.

1. Locate the strap eyelets on your Olympus Stylus VH-510 Digital Camera.
2. Thread the thin loop end of the neck strap through one of the camera's eyelets.
3. Pass the larger part of the strap through the loop you just created and pull it tight to secure. Repeat for the other side.
4. Adjust the length of the strap using the plastic buckle for comfortable wear. The quick-release buckle allows for easy detachment of the camera from the main strap.



Image: A black digital camera with a black neck strap attached, being worn around a person's neck. The strap features an adjustable buckle and a quick-release mechanism.



Image: A black neck strap with an adjustable length and a quick-release buckle, positioned next to a black digital camera. This illustrates the components of the neck strap and its connection point.

3. Camera Case Usage

The deluxe hard shell padded case provides protection for your camera during transport and storage.

1. Open the zipper of the padded case.
2. Carefully place your Olympus Stylus VH-510 Digital Camera inside the case. Ensure it fits snugly within the padded interior.
3. Close the zipper completely to secure the camera.

Operating

1. Battery Usage Guidelines

- Always use the correct charger for the Li-50B battery.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If the camera indicates low battery, replace or recharge the battery promptly.

2. Neck Strap Safety

- Ensure the quick-release buckle is fully engaged before relying on the strap to support the camera's weight.
- Adjust the strap to a comfortable length to prevent accidental drops and reduce strain.
- Do not swing the camera by the strap.

3. Camera Case Protection

- Always store your camera in the padded case when not in use or during transport to protect it from impacts, dust, and scratches.
- Ensure no foreign objects are inside the case that could scratch the camera.

Maintenance

1. Battery Care

- Store the battery in a cool, dry place when not in use.
- Keep battery contacts clean using a dry, soft cloth.
- Do not expose the battery to extreme temperatures or moisture.

2. Case Care

- Wipe the exterior of the case with a damp cloth if it becomes dirty. Avoid harsh chemicals.
- Allow the case to air dry completely before storing the camera inside.

3. Neck Strap Care

- Inspect the strap regularly for signs of wear or damage, especially at the attachment points and quick-release buckle.
- Clean the strap with mild soap and water if necessary, and allow it to dry thoroughly before reattaching to the camera.

Troubleshooting

Battery Related Issues

- **Camera not powering on:** Ensure the Li-50B battery is correctly inserted and fully charged. Check the battery contacts for any dirt or corrosion.
- **Battery not charging:** Verify that the charger is functioning correctly and the battery is properly seated in the charger.

Neck Strap Issues

- **Strap detaching unexpectedly:** Ensure the quick-release buckle is fully locked and the strap is securely threaded through the camera eyelets. Avoid excessive force or sudden movements.

Specifications

Component	Specification
Product Model Number	OVH510BA1
Brand	Digital Nc
Battery Type	Li-50B Lithium Ion
Battery Voltage	3.7V
Battery Capacity	1000 mAh
Case Dimensions (L x W x H)	4 3/4" x 2 3/4" x 1 3/4"
Case Type	Deluxe Hard Shell Padded
Neck Strap Style	Lanyard with Quick-Release
Compatibility	Olympus Stylus VH-510 Digital Camera

Warranty and Support

For warranty information regarding this Digital Nc Accessory Package, please refer to the documentation provided at the time of purchase or contact Digital Nc directly. For technical support or further assistance, please reach out to the manufacturer's customer service department.