

## Beyution LC-RC1-14

# Beyution LC-RC1-14 TV Remote Control User Manual

For Sharp LC-32LB261U, LC-42LB261U, LC-50LB261U, LC-32LB150U, LC-42LB150U, LC-50LB150U, LC-43LB371U, LC-50LB371U, LC-43LB370U TV Models

## 1. INTRODUCTION

---

This manual provides instructions for the Beyution LC-RC1-14 TV Remote Control. This remote is designed as a direct replacement for various Sharp LCD TV models, ensuring seamless operation without complex setup procedures. Please read this manual thoroughly to understand the remote's functions and ensure proper use.

## 2. PRODUCT OVERVIEW

---

The Beyution LC-RC1-14 remote control features a standard layout for easy navigation and control of your Sharp television. Below is an image of the remote with a description of its key buttons.



Image: Beyution LC-RC1-14 TV Remote Control, showing all buttons from power to playback controls.

## Button Functions:

- **POWER (Red Button):** Turns the television on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Pad (0-9, . , ENT):** Directly selects channels or enters numerical values. The "ENT" button confirms entries.
- **AV MODE:** Selects the Audio/Video mode.
- **AUDIO:** Adjusts audio settings or selects audio tracks.
- **SLEEP:** Sets the sleep timer for the television.
- **VIEW MODE:** Changes the screen display mode (e.g., Wide, Zoom).
- **VOL (+/-):** Increases or decreases the volume level.
- **CH (Up/Down Arrows):** Changes the television channel up or down.
- **MUTE:** Mutes or unmutes the television audio.
- **FLASHBACK:** Returns to the previously viewed channel.
- **SOUND MODE:** Selects different sound presets (e.g., Standard, Music, Movie).
- **CC (Closed Caption):** Toggles closed captions on or off.
- **FAVORITE:** Accesses favorite channels or content.

- **MENU:** Opens the television's main menu.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through on-screen menus and confirms selections.
- **EXIT:** Exits the current menu or on-screen display.
- **INFO:** Displays information about the current program or input.
- **HOME:** Returns to the television's home screen or main interface.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip Back, Skip Forward):** Controls media playback functions for connected devices or built-in media players.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

**Note:** This remote control is designed to work with compatible Sharp TV models without requiring any programming or pairing. Simply insert the batteries, and it should be ready for use.

## 4. OPERATING INSTRUCTIONS

---

Once batteries are installed, point the remote control towards your television and press the desired buttons to operate. Ensure there are no obstructions between the remote and the TV's infrared sensor.

### Basic Operations:

- **Power On/Off:** Press the **POWER** button.
- **Change Channels:** Use the **CH Up/Down** arrows.
- **Adjust Volume:** Use the **VOL +/-** buttons.
- **Select Input:** Press the **INPUT** button repeatedly to cycle through inputs, or use the navigation buttons within the input menu if available.

### Menu Navigation:

- Press the **MENU** button to open the TV's main menu.
- Use the **Up, Down, Left, Right** navigation arrows to move through menu options.
- Press **ENTER** to select an option or confirm a setting.
- Press **EXIT** to close the menu.

## 5. TROUBLESHOOTING

---

Problem	Solution
---------	----------

Problem	Solution
Remote is not working.	<ul style="list-style-type: none"> <li>• Ensure batteries are inserted correctly with the correct polarity.</li> <li>• Replace old batteries with new AAA batteries.</li> <li>• Check for any obstructions between the remote and the TV's infrared sensor.</li> <li>• Ensure you are within the effective range of the TV's sensor.</li> </ul>
Some buttons are unresponsive.	<ul style="list-style-type: none"> <li>• Clean the remote control's surface and buttons with a soft, dry cloth.</li> <li>• If the issue persists, it may indicate a faulty button or internal component.</li> </ul>
TV does not respond to remote commands.	<ul style="list-style-type: none"> <li>• Verify that the remote control model LC-RC1-14 is compatible with your specific Sharp TV model.</li> <li>• Try restarting your TV by unplugging it from the power outlet for a few minutes, then plugging it back in.</li> </ul>

## 6. SPECIFICATIONS

- **Model Number:** LC-RC1-14 (also known as cd-LC-RC1-14-ori-gen-1)
- **Brand:** Beyution
- **Compatible Devices:** Sharp Televisions (Specific models: LC-32LB261U, LC-42LB261U, LC-50LB261U, LC-32LB150U, LC-42LB150U, LC-50LB150U, LC-43LB371U, LC-50LB371U, LC-43LB370U)
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 2.39 ounces

## 7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.