

## Tristar RK-6126

# Tristar RK-6126 1L Rice Cooker Instruction Manual

Model: RK-6126 | Brand: Tristar

## 1. INTRODUCTION

---

This instruction manual provides detailed guidance for the safe and efficient operation, maintenance, and troubleshooting of your Tristar RK-6126 Rice Cooker. Please read this manual thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off",

then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### 3. PRODUCT OVERVIEW AND COMPONENTS

---

Familiarize yourself with the parts of your Tristar RK-6126 Rice Cooker.



**Figure 1:** Assembled Tristar RK-6126 Rice Cooker. This image shows the complete rice cooker unit with its lid, main body, and control panel.





**Figure 2:** Exploded view of the rice cooker, illustrating its main components: the outer housing, the removable non-stick inner pot, and the glass lid.



**Figure 3:** A detailed view of the removable inner pot, highlighting its non-stick coating and measurement markings for precise cooking.

### Components:

- **Main Unit:** Contains the heating element and control panel.
- **Removable Inner Pot:** Non-stick coated pot for cooking rice.
- **Glass Lid:** Transparent lid to monitor cooking progress.
- **Control Panel:** Features 'COOK' and 'WARM' indicator lights and a power switch.
- **Measuring Cup:** For precise rice and water measurements.
- **Rice Spatula:** For stirring and serving rice.

## 4. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Initial Cleaning:** Before first use, wash the inner pot, glass lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not

immerse the main unit in water.

3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from water and heat sources. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Ensure the voltage of your power outlet matches the specifications of the appliance (220 Volts). Plug the power cord into a grounded electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields about 2-3 cups of cooked rice. The 1-liter capacity can cook up to 5 measuring cups of rice.
2. **Rinse Rice (Optional):** Rinse the rice under cold water until the water runs clear. This helps remove excess starch.
3. **Add Rice and Water:** Place the rinsed rice into the removable inner pot. Add the appropriate amount of water. A common ratio is 1:1.5 (1 cup rice to 1.5 cups water), but this may vary depending on the type of rice. Refer to rice packaging for specific recommendations.
4. **Place Inner Pot:** Ensure the exterior of the inner pot is dry, then place it into the main unit.
5. **Secure Lid:** Place the glass lid securely on the rice cooker.
6. **Start Cooking:** Plug in the rice cooker. Press the power switch down to the "COOK" position. The 'COOK' indicator light will illuminate.
7. **Automatic Keep Warm:** Once the rice is cooked, the appliance will automatically switch to the "WARM" function. The 'COOK' light will turn off, and the 'WARM' light will illuminate. The rice will be kept warm at approximately 70-75°C.
8. **Serve:** Allow the rice to rest for 5-10 minutes in the 'WARM' mode before serving. Use the provided rice spatula to fluff and serve.

### 5.2 Using the Keep Warm Function

The Tristar RK-6126 automatically activates the keep-warm function after cooking is complete. This function maintains the rice at an optimal serving temperature (70-75°C) for several hours without overcooking or drying it out. To turn off the keep-warm function, unplug the appliance from the power outlet.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker.

1. **Unplug and Cool:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Lid:** Wash the removable inner pot and glass lid with warm, soapy water. The non-stick coating makes cleaning easy. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick surface.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure no water enters the electrical components.
4. **Accessories:** Wash the measuring cup and rice spatula with warm, soapy water and dry.
5. **Storage:** Store the cleaned and dried rice cooker in a cool, dry place.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Rice is too hard/undercooked.	Not enough water; cooking cycle interrupted; lid not sealed properly.	Add slightly more water next time; ensure lid is secure; do not open lid during cooking.
Rice is too soft/mushy.	Too much water.	Reduce water slightly next time.
Rice sticks to the bottom.	Not enough water; rice not rinsed; inner pot not clean.	Ensure correct water ratio; rinse rice thoroughly; ensure inner pot is clean before use. The non-stick coating should minimize sticking.
Rice cooker does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Check power cord connection; test outlet with another appliance; contact customer support if problem persists.
'COOK' light does not illuminate.	Power switch not pressed down; appliance malfunction.	Ensure power switch is in the 'COOK' position; contact customer support if problem persists.

## 8. TECHNICAL SPECIFICATIONS

---

**Brand:** Tristar

**Model:** RK-6126

**Color:** Black, Stainless Steel

**Dimensions (L x W x H):** 24 x 28 x 20 cm

**Capacity:** 1 Litre

**Power:** 400 Watts

**Voltage:** 220 Volts

**Material:** Stainless Steel

**Special Feature:** Keep Warm Function

**Item Weight:** 1.2 Kilograms

**Power Source:** Corded Electric

**Care Instructions:** Clean with a damp cloth or wash gently by hand

## 9. WARRANTY AND SUPPORT

---

The product comes with a 24-month warranty. For warranty claims, technical support, or spare parts inquiries, please contact your retailer or the Tristar customer service department. Keep your proof of purchase for warranty validation.

For more information, visit the official Tristar website or contact their customer support.



