

Manuals.plus /

› Pigeon /

› Pigeon by Stovekraft Favourite Blackline Smart Glass Top 4 Burner Gas Stove User Manual

Pigeon 12097

Pigeon by Stovekraft Favourite Blackline Smart Glass Top 4 Burner Gas Stove

Model: 12097

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Pigeon by Stovekraft Favourite Blackline Smart Glass Top 4 Burner Gas Stove. Please read this manual thoroughly before using the appliance and retain it for future reference. This gas stove features a toughened glass top, stainless steel body, and four brass burners (1 Big, 1 Jumbo, 2 Small) for versatile cooking.

SAFETY INSTRUCTIONS

Always prioritize safety when operating gas appliances. Failure to follow these instructions may result in fire, explosion, or carbon monoxide poisoning.

- Ensure proper ventilation in the kitchen area during use.
- Do not store flammable materials near the gas stove.
- Keep children and pets away from the appliance during operation.
- Always use appropriate cookware that fits securely on the pan supports.
- Never leave cooking unattended.
- If you smell gas, immediately turn off the gas supply, open windows, and do not operate any electrical switches or appliances. Contact your gas supplier or emergency services.
- Ensure all burner knobs are in the "OFF" position when not in use.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.

PRODUCT OVERVIEW

The Pigeon by Stovekraft gas stove is designed for efficiency and ease of use. Familiarize yourself with its main components:

- **Toughened Glass Top:** Provides a sleek appearance and is easy to clean.

- **Brass Burners:** Four burners of varying sizes (1 Big, 1 Jumbo, 2 Small) for diverse cooking needs, offering even flame distribution.
- **Pan Supports:** Uniquely designed to provide stable support for cookware.
- **Control Knobs:** User-friendly ABS knobs for manual ignition and flame adjustment.
- **Stainless Steel Body:** Durable and compact design.



Figure 1: Top view of the Pigeon by Stovekraft 4 Burner Gas Stove, showcasing the black toughened glass top, four brass burners, and control knobs.

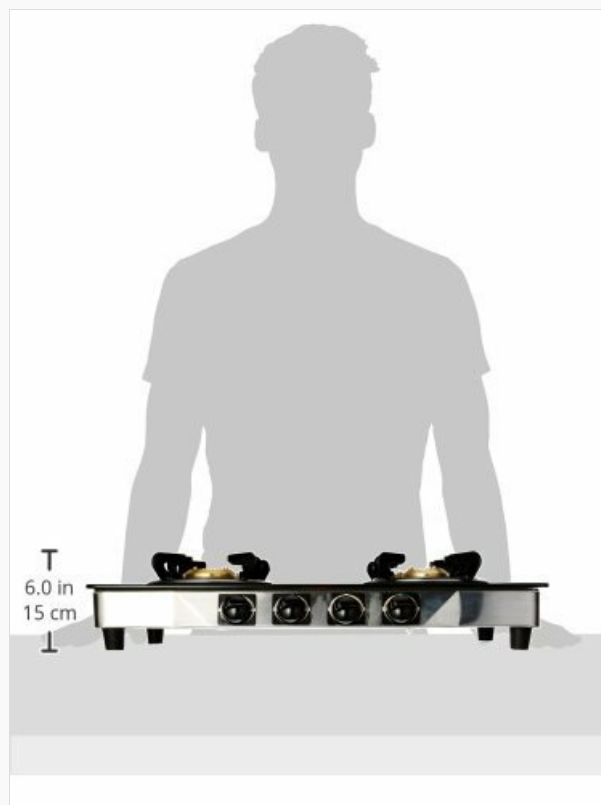


Figure 2: Side view of the gas stove, illustrating its compact dimensions (approximately 15 cm in height).



Figure 3: Detailed view of a brass burner and its surrounding pan support, highlighting the design for even flame distribution.

SETUP

1. **Unpacking:** Carefully remove the gas stove from its packaging. Inspect for any damage during transit. Retain packaging for potential future transport or service.
2. **Placement:** Place the gas stove on a stable, flat, and non-combustible surface. Ensure there is adequate clearance from walls and overhead cabinets for proper ventilation. Avoid placing it near flammable materials.
3. **Gas Connection:**
 - Connect the gas stove to a regulated LPG cylinder or piped natural gas supply using a certified gas hose and regulator.
 - It is highly recommended that gas connections are performed by a qualified and authorized gas technician to ensure safety and compliance with local regulations.

- After connection, check for any gas leaks using a soapy water solution on all joints. Bubbles indicate a leak. If a leak is detected, turn off the gas supply immediately and rectify the connection before use.
4. **Burner and Pan Support Placement:** Ensure all brass burners are correctly seated in their respective positions and the uniquely designed pan supports are securely placed over the burners.

OPERATING INSTRUCTIONS

1. **Before Use:** Ensure the gas cylinder valve is open and the regulator is functioning correctly.
2. **Ignition (Manual):**
 - Place your cookware on the desired burner's pan support.
 - Push down and turn the corresponding control knob counter-clockwise to the "ON" or "HIGH" position.
 - Immediately bring a lit matchstick or a gas lighter close to the burner to ignite the gas.
 - Once the flame ignites, release the knob.
3. **Flame Adjustment:** Rotate the control knob to adjust the flame intensity. Turn towards "LOW" for a smaller flame and towards "HIGH" for a larger flame.
4. **Turning Off:** After cooking, turn the control knob clockwise to the "OFF" position until you hear a click and the flame extinguishes. Ensure all burners are turned off when not in use.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and efficient performance of your gas stove. The stove is designed to be easy to clean and maintain.

- **Daily Cleaning:** After each use, allow the stove to cool completely. Wipe the toughened glass top and stainless steel body with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or scouring pads that can scratch the surface.
- **Burner Cleaning:** Periodically remove the brass burners and pan supports. Wash them with warm soapy water. Ensure they are completely dry before placing them back on the stove. Clogged burner holes can lead to uneven flames; use a thin wire or needle to clear them if necessary.
- **Spill Management:** Clean up spills immediately to prevent them from hardening and becoming difficult to remove.
- **Inspection:** Regularly inspect the gas hose and connections for any signs of wear, cracks, or leaks. Replace damaged components immediately.

TROUBLESHOOTING

Refer to the following common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Burner does not light.	No gas supply, clogged burner holes, or faulty ignition.	Check gas cylinder/supply. Clean burner holes. Ensure knob is fully pressed and turned.
Uneven or yellow flame.	Clogged burner holes or improper air-gas mixture.	Clean burner holes. Ensure burner is seated correctly.
Smell of gas.	Gas leak from connections or hose.	Immediately turn off gas supply. Ventilate area. Check for leaks with soapy water. Contact technician if leak persists.
Knob is stiff or hard to turn.	Accumulated dirt or internal mechanism issue.	Ensure area around knob is clean. Do not force. Contact customer support if issue persists.

SPECIFICATIONS

Feature	Detail
Brand	Pigeon
Model Number	12097
Colour	Black
Material	Toughened Glass (Top), Stainless Steel (Body)
Special Feature	Manual Ignition
Heating Elements	4 Burners (1 Big, 1 Jumbo, 2 Small)
Burner Material	Brass
Controls Type	Knob
Power Source	Gas Powered
Item Weight	9 kg 400 g
Item Dimensions (LxWxH)	71 x 58 x 15 Centimeters
Included Components	1-Piece Gas Stove, 1-Piece Warranty Card, 1-Piece Instruction Manual

WARRANTY AND SUPPORT

Your Pigeon by Stovekraft gas stove comes with a comprehensive warranty and dedicated customer support.

- **Warranty Period:** This product is covered by a **2-year warranty** from the date of purchase.
- **Warranty Coverage:** The warranty covers manufacturing defects. Please refer to the included Warranty Card for full terms and conditions.
- **Customer Support:** For any issues, queries, or service requests, please contact Pigeon customer support at: **1800-425-6666**.