



[Manuals.plus](#) /

› [Beko](#) /

› Beko OIM 27201 A Electric Oven User Manual

Beko OIM 27201 A

Beko OIM 27201 A Electric Oven User Manual

Model: OIM 27201 A

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and efficient operation of your Beko OIM 27201 A Electric Oven. Please read it thoroughly before installation, first use, and maintenance.



Figure 1: Front view of the Beko OIM 27201 A Electric Oven. The oven features a sleek black finish with a prominent brass-colored handle and matching rotary control knobs. The top panel includes a function selector knob on the left, a central analog clock/timer, and a temperature control knob on the right. The main oven door has a large viewing window.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the oven is properly installed and grounded by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Never use water on grease fires.
- Keep children away from the oven during operation.
- Unplug the appliance before cleaning or servicing.

3. INSTALLATION AND SETUP

3.1 Unpacking

Carefully remove all packaging materials. Inspect the oven for any shipping damage. Do not discard packaging until the oven is installed and operating correctly.

3.2 Electrical Connection

This appliance must be connected to a suitable electrical supply by a qualified electrician. Refer to the electrical specifications for correct voltage and current requirements.

3.3 First Use

Before first use, wipe the interior with a damp cloth. Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure good ventilation during this process.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The oven's control panel consists of three main elements:

1. **Function Selector Knob (Left):** Used to select various cooking functions such as conventional baking, grill, fan-assisted cooking, and defrost.
2. **Analog Clock/Timer (Center):** Displays the current time and can be used to set cooking durations or a minute minder.
3. **Temperature Control Knob (Right):** Used to set the desired oven temperature from 75°C to 250°C.



Figure 2: Detail of the oven's control panel. The left knob shows symbols for different cooking modes, the central clock has hour and minute hands, and the right knob indicates temperature settings in degrees Celsius.

4.2 Setting the Time

To set the time on the analog clock, gently rotate the central knob until the correct time is displayed.

4.3 Basic Cooking Operation

1. Place food inside the oven on the appropriate rack.
2. Turn the **Function Selector Knob** to the desired cooking mode (e.g., conventional, grill, defrost).
3. Turn the **Temperature Control Knob** to the required temperature. The oven will begin to heat.
4. Monitor cooking progress through the oven door window.
5. When cooking is complete, turn both knobs back to the 'off' position.

4.4 Special Functions

- **Defrost Function:** Select the defrost symbol on the function knob. This circulates air at room temperature to gently thaw frozen food.

- **Grill Function:** Use for browning or toasting. Position food closer to the top heating element.
- **Internal Light:** The oven is equipped with an internal light for visibility during cooking.

5. CLEANING AND MAINTENANCE

5.1 General Cleaning

Always ensure the oven is cool and unplugged before cleaning. Use a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage surfaces.

5.2 Interior Cleaning

For stubborn stains, use a specialized oven cleaner, following the product's instructions. Remove oven racks and clean them separately.

5.3 Exterior Cleaning

Wipe the exterior surfaces with a damp cloth and dry thoroughly. Pay attention to the control panel and handle, ensuring no moisture enters the electrical components.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not heat	Not plugged in; circuit breaker tripped; function/temperature not set.	Check power supply; reset breaker; ensure knobs are correctly set.
Light not working	Bulb needs replacement.	Replace oven light bulb (refer to service manual or contact support).
Excessive smoke during first use	Residues from manufacturing process.	Normal for first use; ensure good ventilation. It will dissipate.

If the problem persists after attempting these solutions, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Brand: Beko

Model: OIM 27201 A (PAL - 7791686701)

Color: Black

Product Dimensions: 59.4 x 56.7 x 59.5 cm

Capacity: 71 Liters

Energy Efficiency Class: A

Special Features: Defrost function, Grids, Built-in display, Internal light

Item Weight: 37 Kilograms

Heating Method: Electric Oven

Fuel Type: Electric

Installation Type: Built-in

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Beko OIM 27201 A Electric Oven comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

8.2 Customer Support

For technical assistance, spare parts, or service requests, please contact Beko customer support. Have your model number (OIM 27201 A) and serial number ready when contacting support.

Please visit the official Beko website for up-to-date contact information and service centers.