

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fujifilm](#) /

› [Fujifilm FinePix XP80 Waterproof Digital Camera Instruction Manual](#)

## Fujifilm FinePix XP80

# Fujifilm FinePix XP80 Waterproof Digital Camera Instruction Manual

## INTRODUCTION

The Fujifilm FinePix XP80 is an all-purpose camera designed for everyday needs, both indoors and outdoors. It integrates four rugged protection features: waterproof up to 50 ft (15m), freeze-proof to temperatures as low as 14°F (-10°C), shockproof to withstand drops from 5.8 ft (1.75m), and dustproof to protect the body from sand and dust.

## Key Features

- 4-Way Proof: Waterproof 50 ft / 15m, Freeze-proof 14°F / -10°C, Shockproof 5.8 ft / 1.75m, and Dustproof.
- 16.2 megapixel backlit CMOS sensor delivers high-quality images in low light.
- Continuous shooting mode capable of capturing up to 10.0fps (maximum recording of 10 images at full resolution).
- Full HD Movies with one-touch movie button.
- Connect to your smartphone or tablet for Remote Shooting and Wireless Image Transfer.

## PACKAGE CONTENTS

The Fujifilm FinePix XP80 package typically includes the following items:

- Fujifilm FinePix XP80 Digital Camera (Graphite Black)
- Rechargeable Li-ion Battery
- USB Cable
- AC Power Adapter
- Hand Strap
- Owner's Manual

## INITIAL SETUP

### 1. Inserting Battery and Memory Card

Open the battery/memory card compartment cover located on the side of the camera. Insert the supplied rechargeable battery, ensuring correct orientation as indicated inside the compartment. Insert a compatible SD/SDHC/SDXC memory card (sold separately) into the memory card slot. Close the compartment cover securely until it clicks into place. For waterproof integrity, ensure the cover is fully sealed.

## 2. Charging the Battery

Connect the camera to the supplied AC power adapter using the USB cable. Plug the AC power adapter into a wall outlet. The charging indicator will illuminate. Charging is complete when the indicator turns off. Ensure the battery is fully charged before first use.

## 3. Powering On and Initial Settings

Press and hold the power button to turn on the camera. Follow the on-screen prompts to set the language, date, and time. These settings are crucial for proper image management.

# BASIC OPERATION

---

## 1. Taking Photos

To take a photo, press the shutter button halfway down to focus, then press it completely to capture the image. The camera features a 16.2 megapixel sensor for high-quality stills.

## 2. Recording Videos

Press the dedicated one-touch movie button to start recording Full HD videos. Press it again to stop recording. The camera supports 1080p video resolution.

## 3. Using Shooting Modes

The FinePix XP80 offers various shooting modes, including:

- **Underwater Mode:** Optimizes color balance and sharpness for underwater photography.
- **Continuous Shooting:** Capture fast-moving subjects at up to 10 frames per second.
- **Panorama:** Stitch multiple shots together to create wide panoramic images.
- Other modes include Automatic, Landscape, Macro, Night Portrait, and Portrait.

## 4. Wireless Image Transfer

Utilize the camera's built-in Wi-Fi to connect to your smartphone or tablet. Download the Fujifilm Camera Remote app to transfer images wirelessly or use your smart device for remote shooting control.

# CARE AND MAINTENANCE

---

- **Cleaning:** Wipe the camera body with a soft, dry cloth. For the lens and LCD screen, use a lens cleaning cloth and specialized cleaning solution.
- **Water Seal Inspection:** Before each underwater use, inspect the battery/memory card compartment seal for any dirt, sand, or damage. Clean and ensure it is free of debris to maintain waterproof integrity.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.
- **Battery Care:** Fully charge the battery before each use. Avoid completely draining the battery frequently to prolong its lifespan.

# TROUBLESHOOTING COMMON ISSUES

- **Camera Won't Turn On:** Ensure the battery is fully charged and correctly inserted.
- **Poor Image Quality:** Check lighting conditions, adjust shooting mode, and ensure the lens is clean.
- **Water Leakage:** Immediately remove the battery and memory card. Allow the camera to dry completely. Always ensure the battery/memory card compartment is securely closed and free of debris before water exposure.
- **Wi-Fi Connection Issues:** Ensure the Fujifilm Camera Remote app is updated and the camera's Wi-Fi is enabled. Try restarting both devices.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Sensor Type	16.2 MP Backlit CMOS
Waterproof Depth	Up to 50 ft (15m)
Freeze-proof	Up to 14°F (-10°C)
Shockproof Height	Up to 5.8 ft (1.75m)
Display	2.7 Inches LCD
Optical Zoom	5x
Video Resolution	Full HD 1080p
Connectivity	Wi-Fi, USB
Storage Media	SD/SDHC/SDXC Card
Item Weight	179 Grams

## WARRANTY INFORMATION

**Legal Disclaimer:** Must be 18 years or older. No refunds, returns, or exchanges.

## PRODUCT VISUALS AND DEMONSTRATIONS



Image: Fujifilm FinePix XP80 Waterproof Digital Camera in Graphite Black, showcasing its compact and rugged design.

Video: A demonstration of a waterproof digital camera, highlighting its features and durability in aquatic environments. This video is provided by a seller.