

Fujifilm XQ2

Fujifilm XQ2 Digital Camera Instruction Manual

Comprehensive guide for operating and maintaining your Fujifilm XQ2 Digital Camera.

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Fujifilm XQ2 Digital Camera. The Fujifilm XQ2 is a compact digital camera designed for enthusiasts, offering a blend of robust build quality, flexible controls, and a versatile zoom range within a highly portable design. It features an exceptional Fujinon lens, advanced Film Simulation modes, and responsive performance.

2. PRODUCT OVERVIEW

The Fujifilm XQ2 is equipped with a 12MP 2/3" X-Trans CMOS II Sensor and EXR Processor II, ensuring high-quality images. Its Fujinon 4x Optical Zoom lens (25-100mm equivalent) with an F1.8-4.9 aperture provides excellent optical performance. Key features include:

- 12MP 2/3" X-Trans CMOS II Sensor with EXR Processor II for superior image quality.
- Fujinon 4x Optical Zoom (25-100mm equivalent) F1.8-4.9 lens for versatile shooting.
- 9 Film Simulation Modes, drawing from Fujifilm's extensive photographic heritage, for distinct color and tone.
- Tactile control ring around the lens for quick and intuitive adjustment of shooting settings.
- One-touch wireless image transfer and direct printing compatibility with Instax printers.



This image displays the front of the Fujifilm XQ2 Digital Camera. The camera features a sleek silver top plate and a textured black body. The prominent Fujinon lens is centered, with its specifications (4x optical zoom, f=6.4-25.6mm, 1:1.8-4.9) visible around the barrel. The Fujifilm logo is on the top left, and the model name 'XQ2' is on the bottom right. A pop-up flash is visible in its retracted position on the top right.

3. GETTING STARTED: SETUP

3.1. Unboxing and Initial Check

Upon opening the package, ensure all components are present. The standard package includes the Fujifilm XQ2 camera body and a battery. Check for any visible damage before proceeding.

3.2. Charging the Battery

1. Insert the supplied battery into the battery charger.
2. Connect the charger to a power outlet. The charging indicator will illuminate.
3. Charging is complete when the indicator light turns off. Disconnect the charger from the outlet and remove the

battery.

3.3. Inserting the Battery and Memory Card

1. Open the battery/memory card cover on the bottom of the camera.
2. Insert the charged battery with the correct orientation until it clicks into place.
3. Insert an SDXC memory card (sold separately) into the card slot until it clicks. Ensure the card is facing the correct way.
4. Close the battery/memory card cover securely.

3.4. Initial Power On and Basic Settings

1. Press the **ON/OFF** button to power on the camera.
2. Follow the on-screen prompts to set the date, time, and language.
3. Format the memory card before first use to ensure optimal performance. Navigate to the **SETUP** menu and select **FORMAT**.

4. OPERATING THE CAMERA

4.1. Basic Shooting

- **Power On:** Press the **ON/OFF** button.
- **Select Mode:** Use the mode dial to choose your desired shooting mode (e.g., AUTO, P, S, A, M, Scene Position).
- **Zoom:** Rotate the control ring around the lens to adjust the optical zoom.
- **Focus:** Half-press the shutter button to focus. The camera's single-point autofocus is designed for quick and accurate focusing.
- **Capture:** Fully press the shutter button to take a picture.

4.2. Advanced Features

- **Film Simulation:** Access various film simulation modes (e.g., PROVIA, VELVIA, ASTIA, CLASSIC CHROME) via the menu to apply distinct color and tonal characteristics to your images.
- **Control Ring:** The control ring around the lens can be customized to adjust various settings such as aperture, ISO, or zoom, providing quick access to frequently used functions.
- **Built-in Flash:** To activate the pop-up flash, slide the flash release lever. The flash balances well with ambient light in various conditions.
- **Wi-Fi Connectivity:** Use the built-in Wi-Fi to transfer images wirelessly to a smartphone or tablet via the Fujifilm Camera Remote app. This also enables remote control of the camera.

4.3. Video Recording

The XQ2 supports Full HD 1080p video recording at 30 frames per second. To start recording, select the movie mode on the mode dial and press the shutter button. Ensure sufficient memory card space and battery life.

5. MAINTENANCE

- **Cleaning the Camera:** Use a soft, dry cloth to clean the camera body. For the lens, use a lens brush or blower to remove dust, then gently wipe with a microfiber lens cloth. Avoid using harsh chemicals.
- **Battery Care:** Store batteries in a cool, dry place when not in use. Do not expose them to extreme temperatures. Fully charge batteries before extended storage and recharge every six months to prevent degradation.
- **Storage:** When not in use for prolonged periods, remove the battery and memory card. Store the camera in a dry,

dust-free environment, preferably in a camera bag to protect it from impacts.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the battery contacts are clean.
Cannot take pictures.	Check if the memory card is inserted and has sufficient free space. Ensure the lens cap is removed. Verify the camera is in a valid shooting mode.
Images are blurry.	Check focus settings. Ensure adequate lighting or use the flash. Use a faster shutter speed or image stabilization if available.
Wi-Fi connection fails.	Ensure the Fujifilm Camera Remote app is installed and updated. Check camera Wi-Fi settings and device compatibility.

For further assistance, please refer to the official Fujifilm support website or contact customer service.

7. SPECIFICATIONS

Feature	Detail
Model Name	XQ2
Brand	Fujifilm
Photo Sensor Resolution	12 MP
Photo Sensor Size	0.66 inches (2/3")
Photo Sensor Technology	CMOS (X-Trans CMOS II)
Lens Type	Fujinon 4x Optical Zoom (25-100mm equivalent) F1.8-4.9
Optical Zoom	4x
Maximum Aperture	F1.8
Image Stabilization	Digital, Optical
Supported File Format	JPEG, RAW
Video Resolution	1080p (Full HD)
Frame Rate	30 FPS
Screen Size	3 Inches
Display Type	LCD (920k dots)
Connectivity Technology	Wired, Wireless (Wi-Fi)
Flash Memory Type	SDXC

Feature	Detail
Battery Type	Lithium Ion
Item Weight	1.2 Pounds
Item Dimensions (D x W x H)	5.5"D x 5.5"W x 2"H

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, and customer support, please visit the official Fujifilm website or contact their authorized service centers. Keep your proof of purchase for warranty claims.

Online resources, including FAQs and software downloads, are often available on the manufacturer's support pages.

