

[Manuals.plus](#) /

> [Coleman](#) /

> Coleman Classic 3-Burner Propane Camping Stove with InstaStart Ignition User Manual

**Coleman 2000037884**

# Coleman Classic 3-Burner Propane Camping Stove User Manual

Model: 2000037884

## 1. INTRODUCTION

Thank you for choosing the Coleman Classic 3-Burner Propane Camping Stove. This portable cooktop is designed for reliable outdoor cooking, featuring three adjustable burners with a total cooking power of up to 28,000 BTUs. Its InstaStart ignition system provides matchless lighting, and integrated wind-blocking panels ensure consistent performance in various outdoor conditions. This manual provides essential information for safe and efficient use of your camping stove.



Figure 1: Coleman Classic 3-Burner Propane Camping Stove, shown open with two red pots on the grates.

## 2. SAFETY INFORMATION

---

**WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).**

- **Outdoor Use Only:** Never use this appliance indoors, in an enclosed space, or in a tent. Carbon monoxide poisoning can occur.
- **Ventilation:** Always use in a well-ventilated area.
- **Leak Checks:** Before each use, check all gas connections for leaks using a soapy water solution. Never use a flame to check for leaks.
- **Stable Surface:** Place the stove on a stable, level, non-combustible surface away from flammable materials.
- **Propane Cylinder:** Use only 16.4 oz. disposable propane cylinders (sold separately). Ensure the cylinder is securely connected and upright during use.
- **Hot Surfaces:** Stove surfaces become extremely hot during operation. Allow to cool completely before handling or storing.
- **Children and Pets:** Keep children and pets away from the stove during operation and while it is cooling.

## 3. PRODUCT COMPONENTS

---

Your Coleman Classic 3-Burner Propane Camping Stove includes the following main components:

- Stove Unit with Integrated Lid
- Three Burner Grates
- Two Side Wind-Blocking Panels
- Propane Regulator Assembly
- Control Knobs for each burner
- InstaStart Push-Button Ignition



Figure 2: The Coleman Classic 3-Burner Propane Camping Stove in its closed, portable configuration.

## 4. SETUP INSTRUCTIONS

---

1. **Unpack and Position:** Remove the stove from its packaging. Place the stove on a firm, level surface outdoors, ensuring adequate clearance from combustible materials.
2. **Open Stove:** Release the lid latch and lift the lid. The lid will stand upright, acting as a back wind guard.
3. **Extend Wind-Blocking Panels:** Swing out the two side panels until they lock into place. These panels provide additional wind protection and can serve as small side tables.
4. **Connect Propane Cylinder:** Ensure all burner control knobs are in the 'OFF' position. Screw the propane regulator assembly firmly into the stove's gas inlet. Then, attach a 16.4 oz. propane cylinder (sold separately)

to the regulator. Hand-tighten only. Do not overtighten.

5. **Check for Leaks:** Apply a soapy water solution to all gas connections. If bubbles appear, there is a leak. Tighten connections or replace parts as necessary. Do not operate the stove if a leak is detected.



Figure 3: The stove set up for cooking outdoors, demonstrating the extended wind-blocking panels.

## 5. OPERATING INSTRUCTIONS

---

1. **Lighting a Burner:** Ensure the propane cylinder is connected and the main gas valve (if applicable on the cylinder) is open. Turn the desired burner control knob to the 'HIGH' position. Immediately press the InstaStart ignition button until the burner ignites.
2. **Adjusting Flame:** Once lit, adjust the flame intensity by turning the corresponding control knob. The stove features precise temperature control for simmering or high-heat cooking.
3. **Using Multiple Burners:** The stove is designed to accommodate two 12-inch pans or three 8-inch pans simultaneously, allowing for versatile meal preparation.
4. **Turning Off:** To turn off a burner, rotate its control knob clockwise to the 'OFF' position. Once all burners are off, close the main gas valve on the propane cylinder.



Figure 4: The stove in operation, demonstrating its capacity for multiple cooking vessels.

## 6. MAINTENANCE

---

- **Cleaning:** Allow the stove to cool completely before cleaning. Remove the burner grates and wipe down the cooking surface and grates with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Storage:** Ensure the stove is clean and dry before storing. Disconnect the propane cylinder. Fold down the side panels and close the lid, securing the latch. Store in a cool, dry place.

## 7. TROUBLESHOOTING

---

- **Burner Does Not Light:**
  - Check if the propane cylinder is connected correctly and has fuel.
  - Ensure the main gas valve on the cylinder is fully open.
  - Verify the burner control knob is turned to 'HIGH'.
  - If the InstaStart ignition is not sparking, check if the ignition battery (if applicable and replaceable) needs replacement.
- **Low or Inconsistent Flame:**
  - Check the propane cylinder for low fuel.
  - Ensure the regulator is properly attached and not obstructed.
  - The stove features pressure-control technology for consistent performance; if issues persist, ensure the stove is not operating in extremely cold conditions that might affect propane flow.

## 8. SPECIFICATIONS

---

<b>Brand</b>	Coleman
<b>Model Number</b>	2000037884
<b>Fuel Type</b>	Propane
<b>Cooking Power</b>	Up to 28,000 total BTUs
<b>Number of Burners</b>	3 (Adjustable)
<b>Ignition Type</b>	InstaStart Push-Button
<b>Material</b>	Metal Blend
<b>Product Dimensions (L x W x H)</b>	26" x 19" x 6"
<b>Item Weight</b>	8.5 Kilograms (approx. 18.7 lbs)
<b>Runtime (all burners on high)</b>	Up to 0.75 hours on one 16.4 oz. propane cylinder

## 9. WARRANTY AND SUPPORT

---

This Coleman Classic 3-Burner Propane Camping Stove is covered by a **3-year limited warranty**. For warranty claims, product support, or additional information, please visit the official Coleman website or contact their customer service department.

For further assistance, please refer to the contact information provided on the product packaging or the official Coleman website.

