

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic KX-DT543 Digital Corded Telephone User Manual](#)

Panasonic KX-DT543

Panasonic KX-DT543 Digital Corded Telephone User Manual

Model: KX-DT543

1. INTRODUCTION

This user manual provides comprehensive instructions for the Panasonic KX-DT543 digital corded telephone. Please read this manual carefully before using your new telephone to ensure proper operation and to take full advantage of its features. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Panasonic KX-DT543 is a robust digital telephone designed for business communication systems, specifically compatible with Panasonic KX-DT590 48-key DSS console systems. It features a 3-line graphical LCD with backlighting for clear visibility and an intuitive user interface.



Figure 2.1: Panasonic KX-DT543 Digital Corded Telephone. This image displays the white model of the telephone, highlighting its 3-line LCD, keypad, and programmable function buttons.

Key Features:

- **3-Line Graphical LCD:** Backlit display for easy viewing of call information and menu options.

- **Adjustable Volume:** 6 levels of adjustable handset and headset volume control.
- **Full Duplex Speakerphone:** Enables natural, two-way conversations without clipping.
- **24 Programmable Line Buttons:** Customizable buttons for speed dial, line access, and feature activation.
- **Built-in Electronic Hook Switch (EHS):** For seamless integration with compatible headsets.
- **Wideband Compliant:** Supports high-quality audio.
- **Auto Redial:** Quickly redial the last number called.
- **Navigator Key:** For easy menu navigation.

3. SETUP

Follow these steps to set up your Panasonic KX-DT543 telephone.

3.1 Package Contents Verification

Ensure all components are present in the box:

- KX-DT543 Telephone Unit
- Handset
- Handset Cord
- Line Cord
- Stand

3.2 Connecting the Telephone

1. **Attach the Stand:** Securely attach the telephone stand to the main unit.
2. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack labeled **HANDSET** on the telephone unit.
3. **Connect the Line Cord:** Plug one end of the line cord into the jack labeled **LINE** on the telephone unit and the other end into the digital extension port on your Panasonic PBX system.
4. **Connect Power (if applicable):** If your system requires external power, connect the AC adapter (sold separately or provided by your system administrator) to the **POWER** jack and then to an electrical outlet. *Note: In many digital systems, power is supplied over the line cord (PoE). Consult your system administrator.*

3.3 Initial Power On

Once connected, the telephone will power on automatically. The display will show the system's startup sequence. If the display remains blank, check all connections and power source.

4. OPERATING INSTRUCTIONS

This section covers the basic operation of your KX-DT543 telephone.

4.1 Making Calls

1. **Lift the Handset** or press the **SPEAKER** button.
2. **Dial the Number:** Enter the desired telephone number using the keypad.
3. **Press the **CALL** button** (if required by your system) or wait for the call to connect.

4.2 Receiving Calls

1. When the phone rings, **lift the Handset** or press the **SPEAKER** button to answer.
2. To end the call, replace the handset or press the **SPEAKER** button again.

4.3 Using Programmable Buttons

The 24 programmable buttons can be configured for various functions such as speed dial, direct line access, or feature activation. Consult your system administrator for specific programming details.

- To use a programmed button, simply press it.

4.4 Adjusting Volume

During a call, use the **VOLUME** buttons (up/down arrows) to adjust the handset, headset, or speakerphone volume.

4.5 Using the Navigator Key

The navigator key (four-way arrow cluster) allows you to scroll through menu options and lists on the LCD. Press the center **ENTER** button to select an option.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity of your telephone.

5.1 Cleaning

- Disconnect the telephone from the power source before cleaning.
- Use a soft, dry cloth to wipe the exterior of the telephone.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- Avoid getting moisture into any openings.

5.2 Storage

Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

6. TROUBLESHOOTING

If you encounter issues with your telephone, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No dial tone	Line cord disconnected or faulty. No power to the unit.	Check that the line cord is securely connected to both the telephone and the wall jack. Verify power connection if external power supply is used. Contact your system administrator.
Display is blank	No power. Display settings.	Ensure the telephone is properly connected to its power source. Check if the display brightness is set too low (if adjustable).
Cannot hear caller / Caller cannot hear me	Volume too low. Handset/headset not connected properly.	Adjust the volume using the VOLUME buttons. Ensure the handset/headset cord is securely plugged in.

Problem	Possible Cause	Solution
Buttons are unresponsive	Temporary software glitch.	Disconnect the telephone from its power source for a few seconds, then reconnect it. If the problem persists, contact your system administrator.

7. SPECIFICATIONS

Below are the technical specifications for the Panasonic KX-DT543 Digital Corded Telephone.

- **Model Number:** KX-DT543
- **Telephone Type:** Corded Digital
- **Display:** 3-Line Graphical LCD, Backlit
- **Programmable Buttons:** 24
- **Speakerphone:** Full Duplex
- **Electronic Hook Switch (EHS):** Built-in
- **Volume Control:** 6 levels (Handset, Headset)
- **Compatible Devices:** Panasonic KX-DT590 48-key DSS console systems
- **Material:** Plastic
- **Color:** White
- **Item Weight:** 2.9 pounds (approx. 1.32 kg)
- **Package Dimensions:** 10.98 x 7.87 x 5.39 inches (approx. 27.89 x 19.99 x 13.69 cm)
- **Power Source:** Corded Electric (PoE or optional AC adapter)

8. WARRANTY INFORMATION

Panasonic products are manufactured to high-quality standards. For specific warranty terms and conditions applicable to your KX-DT543 telephone, please refer to the warranty card included with your purchase or visit the official Panasonic website. Warranty coverage typically includes defects in materials and workmanship for a specified period from the date of purchase.

9. SUPPORT

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact your system administrator or the Panasonic customer support team. You can find contact information and additional resources on the official Panasonic website:

www.panasonic.com