

[manuals.plus](#) /

› [Hansa](#) /

› [Hansa FCCX59226 Freestanding Cooker User Manual](#)

Hansa FCCX59226

Hansa FCCX59226 Freestanding Cooker User Manual

Model: FCCX59226

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Hansa FCCX59226 Freestanding Cooker. Please read these instructions carefully before installation, use, or maintenance of the appliance. Keep this manual for future reference.



Figure 1.1: Front view of the Hansa FCCX59226 Freestanding Cooker. This image shows the complete appliance, featuring a ceramic hob with four cooking zones, a control panel with rotary knobs and a digital display, an oven door with a large viewing window, and a storage compartment at the bottom.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is properly earthed and connected to a suitable power supply.
- Do not allow children to operate the cooker unsupervised.
- The appliance becomes hot during use. Avoid touching hot surfaces. Use oven mitts.

- Never use water to extinguish oil or grease fires. Smother the flames with a lid or fire blanket.
- Do not store flammable materials in or near the cooker.
- Always disconnect the appliance from the power supply before cleaning or maintenance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your cooker. It is recommended that installation be performed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the cooker for any signs of damage. Report any damage to your retailer immediately.

3.2 Positioning

Place the cooker on a flat, stable surface. Ensure adequate ventilation around the appliance. Maintain minimum distances from adjacent furniture as specified in the installation guide (not included in this manual).

3.3 Electrical Connection

The cooker must be connected to the mains electricity supply by a qualified electrician, in accordance with local wiring regulations. The appliance requires a 2000 watt electrical supply.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Figure 4.1: Control panel of the Hansa FCCX59226. This image highlights the five rotary control knobs for the hob and oven functions, along with the central digital display showing the time (12:34) and indicator lights.

The control panel features rotary knobs for hob and oven control, and a digital display for time and timer functions.

4.2 Using the Ceramic Hob

The ceramic hob features four cooking zones. To activate a cooking zone, turn the corresponding rotary knob to the desired heat setting (1-9). The indicator light will illuminate when a zone is active.

4.3 Using the Oven

The oven has a capacity of 66 liters. To operate the oven, select the desired cooking function and temperature using the

dedicated rotary knobs. The oven light will illuminate when the oven is in use.



Figure 4.2: Oven door of the Hansa FCCX59226. This image focuses on the large, dark glass oven door with a brushed metal handle, providing a clear view into the oven cavity.

4.4 Setting the Timer

The digital display can be used to set a timer for cooking. Refer to the specific icons next to the display for timer functions (e.g., minute minder, cooking duration).

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooker.

5.1 General Cleaning

Before cleaning, ensure the cooker is switched off and has cooled down. Use a soft cloth and mild detergent for external surfaces. Avoid abrasive cleaners.

5.2 Ceramic Hob Cleaning

For the ceramic hob, use a specialized ceramic hob cleaner. Remove spills immediately to prevent them from baking onto the surface.

5.3 Oven Cleaning

Clean the oven interior regularly. For stubborn stains, use an oven cleaner suitable for electric ovens. Remove oven racks and clean them separately.

6. TROUBLESHOOTING

Before contacting service, please refer to the following common issues and their solutions.

| Problem | Possible Cause | Solution |
|-----------------------|---|---|
| Cooker not turning on | No power supply; tripped circuit breaker. | Check power connection; reset circuit breaker. |
| Hob not heating | Wrong knob setting; faulty element. | Ensure knob is set correctly; contact service if element is faulty. |
| Oven not heating | Incorrect function/temperature setting; faulty heating element. | Verify settings; contact service for element replacement. |

7. SPECIFICATIONS

Model: FCCX59226

Brand: Hansa

Type: Freestanding Cooker

Color: Black, Silver

Control Type: Rotary, Electronic

Hob Type: Ceramic

Oven Capacity: 66 Liters

Product Dimensions: 50 x 60 x 85 cm (Width x Depth x Height)

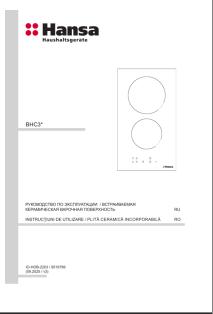
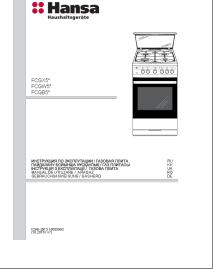
Power Consumption: 2000 Watts

Noise Level: 49 dB

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your appliance or visit the official Hansa website. Keep your proof of purchase for warranty claims.

Related Documents - FCCX59226

| |
|--|
|  <p>Hansa BHKS6* / BHKW6* Газ Плитасы: Пайдалану, Орнату және Қызмет Көрсету Нұсқаулығы Hansa BHKS6* және BHKW6* газ плиталарына арналған толық пайдалану нұсқаулығы. Құжатта орнату, пайдалану, қауіпсіздік шаралары, техникалық сипаттамалар және ақауларды жою бойынша нұсқаулар берілген.</p> |
|  <p>Hansa BHC3* Встраиваемая керамическая варочная панель: Руководство пользователя Полное руководство пользователя для встраиваемой керамической варочной панели Hansa BHC3*. Содержит инструкции по установке, эксплуатации, обслуживанию, очистке и технике безопасности.</p> |
|  <p>Hansa FCGX5*, FCGW5*, FCGB5* Gas Stove User Manual Comprehensive user manual for Hansa FCGX5*, FCGW5*, and FCGB5* gas stoves, covering installation, operation, safety, cleaning, and troubleshooting. Features detailed instructions for gas burners, oven functions, and grill usage.</p> |
|  <p>Hansa OMC6551BH Kitchen Extractor Hood: Operating Instructions Comprehensive operating instructions and user manual for the Hansa OMC6551BH kitchen extractor hood, covering safety, installation, operation, maintenance, and warranty information.</p> |
|  <p>Hansa Kitchen Extractor Hood Operating Instructions Comprehensive operating instructions and safety guide for Hansa kitchen extractor hoods, including models OTP5233IH, OTP5233WH, OTP6233IH, OTP6233WH, and OTP6233BH. Covers installation, operation, maintenance, and warranty.</p> |



[Hansa BHC3* Керамикалық пісіру беті: Пайдалану нұсқаулығы](#)

Hansa BHC3* кіріктірілетін керамикалық пісіру бетіне арналған толық пайдалану нұсқаулығы. Орнату, дұрыс пайдалану, қауіпсіздік шаралары, тазалау және техникалық қызмет көрсету бойынша егжей-тегжейлі ақпаратты қамтиды.