

**Intermec CK71AB6MN00W1400**

# Intermec CK71 Ultra-Rugged Mobile Computer User Manual

Model: CK71AB6MN00W1400

Brand: Intermec

## PRODUCT OVERVIEW

---

The Intermec CK71AB6MN00W1400 is an ultra-rugged mobile computer designed for demanding environments. It features a numeric keypad, an EX25 scanner, and WLAN connectivity, making it suitable for various data capture and processing tasks. This device is built to withstand harsh conditions while providing reliable performance for automated identification and data capture applications.



Figure 1: Front view of the Intermec CK71 Ultra-Rugged Mobile Computer. This image displays the device's robust design, including its numeric keypad, display screen, and the integrated scanner at the top. A wrist strap is visible on the right side.

## SETUP

---

### 1. Unboxing and Initial Inspection

Carefully remove the CK71 mobile computer and all accessories from its packaging. Inspect the device for any visible damage. Retain the original packaging for future storage or shipping.

### 2. Battery Installation and Charging

The CK71 uses a rechargeable battery. Ensure the battery is fully charged before first use to optimize battery life.

- Locate the battery compartment cover on the rear of the device.
- Open the cover and insert the battery, ensuring the contacts align correctly.
- Close the battery compartment cover securely.
- Connect the provided power adapter to the charging port on the device.

- Plug the power adapter into a suitable power outlet. The charging indicator light will illuminate.
- Allow the device to charge until the indicator light signals a full charge.

### 3. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top of the device) until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the power-off options appear on the screen. Select "Power Off" or "Shut Down" and confirm.
- **To Restart:** If the device is unresponsive, press and hold the Power button for an extended period (e.g., 10-15 seconds) to force a restart.

## OPERATING INSTRUCTIONS

---

### 1. Keypad Functions

The CK71 features a numeric keypad with additional function keys for efficient data entry and navigation.

- **Numeric Keys (0-9):** Used for entering numerical data.
- **Function Keys (F1-F12):** These keys can be programmed or have predefined functions depending on the application. Refer to your specific software documentation for their exact usage.
- **Enter Key:** Confirms input or selection.
- **Esc Key:** Typically used to cancel an operation or go back to the previous screen.
- **Arrow Keys:** Used for navigating menus and input fields on the screen.
- **Shift/Alt Keys:** Used in combination with other keys to access secondary characters or functions.

### 2. EX25 Scanner Operation

The integrated EX25 scanner is designed for rapid and accurate barcode scanning.

1. Ensure the application requiring scanning is active on the device.
2. Point the scanner window at the barcode you wish to scan.
3. Press the scan trigger button (typically located on the side of the device). A red aiming beam or illumination will appear.
4. Position the aiming beam over the center of the barcode.
5. Once the barcode is successfully read, the device will typically emit an audible beep or vibrate, and the data will be transmitted to the active application.

*Note: For optimal scanning performance, ensure the barcode is clean and well-lit. Avoid scanning highly reflective surfaces at direct angles.*

### 3. WLAN Connectivity

The CK71 supports Wireless Local Area Network (WLAN) connectivity for data transmission and network access.

- Access the device's network settings (usually found in the Control Panel or Settings menu).
- Enable Wi-Fi and search for available networks.
- Select your desired network from the list.
- If prompted, enter the network password or security key.
- Once connected, the Wi-Fi icon will indicate a successful connection.

## MAINTENANCE

---

## 1. Cleaning the Device

Regular cleaning helps maintain the device's performance and longevity.

- **Exterior:** Use a soft, damp cloth with a mild, non-abrasive cleaner to wipe down the casing. Avoid harsh chemicals or abrasive materials.
- **Screen:** Use a microfiber cloth specifically designed for electronic screens. For stubborn smudges, a screen cleaner spray can be used sparingly. Do not spray liquid directly onto the screen.
- **Scanner Window:** Gently wipe the scanner window with a clean, lint-free cloth. Ensure it is free of dust or smudges that could affect scanning performance.
- **Connectors:** Keep charging ports and other connectors free of dust and debris. Use a soft brush or compressed air if necessary.

## 2. Battery Care

Proper battery care extends the life of your device's battery.

- Avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- Use only Intermec-approved charging accessories.

## 3. General Handling

- While the CK71 is ultra-rugged, avoid unnecessary drops or impacts.
- Do not expose the device to extreme temperatures or direct sunlight for prolonged periods.
- Keep the device away from liquids and excessive moisture.

## TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your CK71 mobile computer.

Problem	Possible Cause	Solution
Device does not power on.	Battery is discharged or not properly installed.	Ensure battery is fully charged and correctly seated. Try connecting to power adapter.
Scanner not reading barcodes.	Barcode damaged, scanner window dirty, or incorrect application active.	Clean scanner window. Ensure barcode is clear. Verify the correct application is open and ready for input.
WLAN connection issues.	Out of range, incorrect password, or network interference.	Move closer to the access point. Re-enter Wi-Fi password. Restart the device and/or the network router.
Device is unresponsive.	Software crash or temporary system error.	Perform a soft reset by holding the power button until the device restarts. If persistent, a hard reset may be required (consult advanced user guide).

If the problem persists after attempting these solutions, please refer to the official Intermec support resources or contact customer service.

## SPECIFICATIONS

Feature	Detail
Model Number	CK71AB6MN00W1400
Dimensions (L x W x H)	9.33 x 3.15 x 1.97 inches
Weight	1.29 Pounds
Scanner Type	EX25
Keypad	Numeric Function Keypad
Connectivity	WLAN
Operating System	Windows Embedded Handheld
Camera	No Camera

## WARRANTY AND SUPPORT

Specific warranty terms and conditions for the Intermec CK71AB6MN00W1400 mobile computer are not detailed within this manual. For comprehensive warranty information, technical support, and service inquiries, please refer to the official Intermec website or contact your authorized Intermec reseller.

It is recommended to register your product with Intermec to receive updates and support notifications.



© 2024 Intermec. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Documents - Intermec – CK71AB6MN00W1400



[\[pdf\]](#)

intermec ck71 mobil adatgyujto hu files digicode |||

INTERMEC CK71 MOBIL ADATGYJT Cm: 1054 Budapest, Bank utca 6. II. em. 9.  
Telefonszm: 36 1 700 4460; ... 71AB6EN00W1400 CK71AB6EN00W4100  
CK71AB6MC00W1100 CK71AB6MC00W1400 CK71AB6MC00W4100  
CK71AB6MN00W1100 **CK71AB6MN00W1400** CK71AB6MN00W4100  
Honeywell/Intermec CK71 ipari adatgyjt terminl, Numerikus s Funkc...  
lang:tl score:23 filesize: 608.81 K page\_count: 7 document date: 2018-11-26

INTERMEC QTR 3 2015

## BLUESTAR PRODUCT CATALOG

Carrie Brooks  
cbrooks@bluestarinc.com

### [\[pdf\]](#) Catalog

INTERMEC Q3 bluestarinc 80 fileadmin bluestar typo3 documents Catalog 2015 Catalogs

INTERMEC QTR 3 2015 Carrie Brooks cbrooks bluestarinc.com Table of Contents

Category Page PRINT ... 71AB6EN00W1400 CK71AB6EN00W4100

CK71AB6MC00W1100 CK71AB6MC00W1400 CK71AB6MC00W4100

CK71AB6MN00W1100 **CK71AB6MN00W1400** CK71AB6MN00W4100 MSRP

2,965.00 2,773.00 3,307.00 3,499.00 3,307.00 3,200.00 ...

lang:i-klngon **score:16** filesize: 5.72 M page\_count: 45 document date: 2015-09-30



Industry-Electronics  
Preisliste vom 17.08.2022



### [\[pdf\]](#) Guide

Industry Electronics Preisliste Lieske Elektronik vom 17 08 2022 ago — Ersatzbatterie entfernbar Farbe

weiß passend für QBT2400 QM2400 INSTAL USER GUIDE MOUNTING PLATE LOW SPEED USB INST

IN 397 pagine lieske buero industry electronics de preisliten |||

Preisliste vom 17.08.2022 - Alle Preise verstehen sich zzgl. der gesetzlichen MwSt


und zzgl. Versand ... CK71AB6EN00W4100 1579.00 605899 CK71AB6MN00W1100

1929.00 605397 CK71AB6MC00W4100 1809.00 605361 **CK71AB6MN00W1400**

1839.00 443524 CK71AA4DC00W1100 1509.00 819954 CK71AA4DC00W1400

1595.00 875863 C...

lang:de **score:13** filesize: 4.07 M page\_count: 397 document date: 2022-08-17

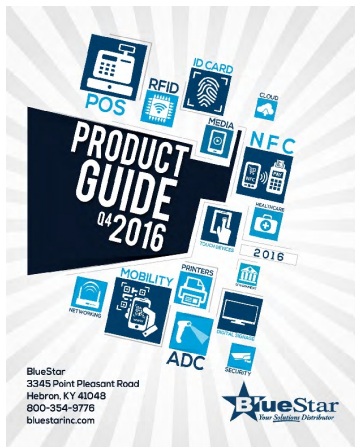

### [\[pdf\]](#) Catalog

credit application BlueStar Untitled \$21 00 DATAMAX O NEIL SPARE PART SWIVEL BELT LOOP \$349

INTERMEC MAG STRIPE READER FOR GREY HG3 AR 2 1 C02 INCLUDES SOFTCARD SMARTTAP

Catalog Q4 2016 reduced bluestarinc media temp

MANUFACTURER LISTINGS CREDIT APPLICATION DATE: \_\_\_\_\_ BLUESTAR


SALES REP: \_\_\_\_\_ ... FUNCTION KEY,EX25,NO

CAMERA,WLAN,WINDOWS EMBEDDED HANDHELD,WWE,SMART SYSTEMS,

NON-STANDARD, NC/NR **CK71AB6MN00W1400** 3,392.00 INTERMEC, 1 GHZ

REFRESH,NUMERIC FUNCTION KEY,EX25,NO CAMERA,WLAN,WINDOWS ...

lang:en **score:12** filesize: 31.79 M page\_count: 284 document date: 2016-11-14

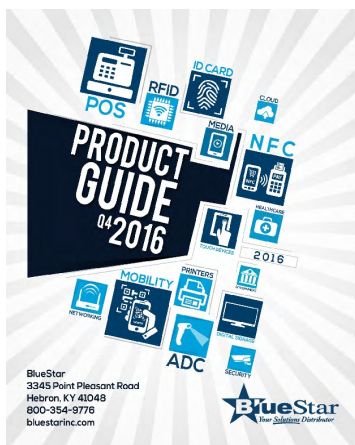

### [\[pdf\]](#) Accessories Catalog

Untitled Catalog Q4 2016 honeywell backend bluestarinc fileadmin bluestar typo3 documents

ANTENNAS HONEYWELL ACCESSORIES HONEYWELL CAPTUVO

ACCESSORIES SKU MSRP DESCRIPTION 6000279ANT ... FUNCTION

KEY,EX25,NO CAMERA,WLAN,WINDOWS EMBEDDED HANDHELD,WWE,SMART

SYSTEMS, NON-STANDARD, NC/NR **CK71AB6MN00W1400** 3,392.00 INTERMEC,

1 GHZ REFRESH,NUMERIC FUNCTION KEY,EX25,NO

CAMERA,WLAN,WINDOWS ...

lang:i-klngon **score:10** filesize: 8.92 M page\_count: 92 document date: 2018-02-26

