

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Elk Home](#) /

› [Elk Home Rutherford 1-Light Pendant \(Model 57041/1\) Instruction Manual](#)

Elk Home 57041/1

Elk Home Rutherford 1-Light Pendant Instruction Manual

Model: 57041/1 | Brand: Elk Home

INTRODUCTION

Thank you for choosing the Elk Home Rutherford 1-Light Pendant. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only the specified bulb type and wattage. Exceeding the maximum wattage may cause overheating and damage to the fixture.
- Do not install this fixture in wet or damp locations. It is designed for indoor use only.
- Ensure all mounting hardware is securely fastened to a structurally sound surface.
- Do not handle the bulb with bare hands during installation or replacement. Use a clean cloth or glove.

PACKAGE CONTENTS

Verify that all components are present before discarding packaging materials. If any parts are missing or damaged, contact Elk Home customer support.

- Pendant Fixture Assembly
- Fabric Shade
- Mounting Hardware Kit (includes mounting plate, screws, wire nuts)
- Instruction Manual

SETUP AND INSTALLATION

This fixture requires hardwired installation. Professional installation is recommended.

1. **Turn Off Power:** Before starting, ensure the power to the circuit at the main fuse box or circuit breaker is completely OFF.
2. **Prepare Mounting:** Attach the mounting plate to the junction box in the ceiling using the provided screws. Ensure it is securely fastened.
3. **Wire Connections:** Connect the fixture's wires to the corresponding house wires using the provided wire nuts. Connect the black (live) wire from the fixture to the black (live) wire from the ceiling. Connect the white (neutral) wire from the fixture to the white (neutral) wire from the ceiling. Connect the green or bare copper (ground) wire from the fixture to the green or bare copper (ground) wire from the ceiling. Ensure all connections are tight and secure.
4. **Mount Fixture:** Carefully tuck the wires into the junction box. Align the fixture canopy with the mounting plate and secure it with the decorative nuts or screws provided.
5. **Install Bulb:** Insert one (1) A19 medium base (E26) incandescent bulb, up to 100 watts (not included), into the socket. Do not exceed the maximum wattage.
6. **Restore Power:** Once installation is complete, restore power at the circuit breaker.



Image: The assembled Elk Home Rutherford 1-Light Pendant in gloss white finish with its fabric shade.



Image: A technical diagram illustrating the dimensions of the Rutherford Pendant, showing a total height of 52 inches

(1321mm), a shade height of 13 inches (330mm), and a shade diameter of 15 inches (381mm).

OPERATING INSTRUCTIONS

The Elk Home Rutherford Pendant operates via a standard wall switch connected to the fixture's electrical circuit. Simply toggle the wall switch to turn the light ON or OFF.

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure the power is off and the fixture is cool. Wipe with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Always turn off the power at the circuit breaker and allow the bulb to cool before replacing. Unscrew the old bulb and screw in a new A19 medium base (E26) incandescent bulb, not exceeding 100 watts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture.	Check circuit breaker or fuse. Ensure wall switch is ON.
	Loose wire connections.	Turn off power and check all wire connections. Re-secure if loose.
	Bulb is faulty or not installed correctly.	Replace bulb with a new one. Ensure bulb is screwed in tightly.
Light flickers.	Loose bulb or wiring.	Turn off power. Tighten bulb. Check wire connections.
	Incorrect dimmer switch (if applicable).	Ensure dimmer switch is compatible with incandescent bulbs.

SPECIFICATIONS

Model Name	Rutherford Pendant
Model Number	57041/1
Brand	Elk Home
Dimensions (L x W x H)	8"L x 15"W x 13"H (Fixture body)
Overall Height (Adjustable)	Up to 52" (1321mm)
Color	Gloss White
Material	Metal (Fixture), Fabric (Shade)
Style	Transitional
Light Source Type	Incandescent
Number of Light Sources	1

Bulb Base	E26 Medium
Max Wattage	100 watts
Voltage	120 Volts
Installation Type	Hardwired, Built-In
Indoor/Outdoor Usage	Indoor
Item Weight	6 Pounds
Assembly Required	Yes
UPC	748119090153

WARRANTY

This Elk Home Rutherford 1-Light Pendant is covered by a **1-year limited manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or normal wear and tear. For warranty claims, please retain your proof of purchase and contact Elk Home customer support.

SUPPORT

For technical assistance, missing parts, or warranty inquiries, please contact Elk Home customer support. Refer to the contact information provided on the product packaging or the official Elk Home website. Please have your model number (57041/1) and proof of purchase ready when contacting support.

Online Resources: For additional information and product details, visit the [Elk Home Store on Amazon](#).