

Philips HR1832/00

Philips Viva Collection HR1832/00 Juicer Instruction Manual

Model: HR1832/00

1. IMPORTANT SAFETY INFORMATION

Read this instruction manual carefully before using the appliance and save it for future reference. Incorrect use can lead to potential hazards.

General Safety

- Always ensure the voltage indicated on the appliance corresponds to the local mains voltage before connecting.
- Do not use the appliance if the plug, the mains cord, or other parts are damaged.
- Keep the appliance out of reach of children.
- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use a damp cloth to clean the motor unit.
- Do not let the appliance operate unattended.
- Always unplug the appliance after use and before cleaning.

Juicer Specific Safety

- Do not touch the small cutting blades at the base of the sieve. They are very sharp.
- Never put your fingers or other objects into the feeding tube while the appliance is operating. Only use the pusher provided.
- Ensure all parts are correctly assembled and the clamps are locked before switching on the appliance.
- Do not process hard, unripe, or frozen fruits and vegetables.
- Do not use the appliance for more than 1 minute at a time. Allow it to cool down for 1 minute before continuing.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Philips Viva Collection HR1832/00 Juicer.



Image: The Philips Viva Collection HR1832/00 Juicer fully assembled, showcasing its compact design and ink black finish.

1. **Pusher:** Used to guide fruits and vegetables into the feeding tube.
2. **Feeding tube:** Where ingredients are inserted.
3. **Lid:** Covers the juicing mechanism.
4. **Sieve:** Stainless steel filter that separates juice from pulp.
5. **Juice collector with spout:** Collects the extracted juice and directs it to the juice jug. Features a drip-stop function.
6. **Pulp container:** Collects the separated pulp. Integrated into the design.
7. **Motor unit:** The base of the appliance containing the motor and control knob.
8. **Clamps:** Securely lock the lid and juice collector to the motor unit.
9. **Juice jug (500 ml):** For collecting the freshly extracted juice.



Image: The transparent 500 ml juice jug, designed to collect fresh juice directly from the juicer's spout.



Image: A close-up view of the integrated pulp container, highlighting its design for efficient pulp collection.

3. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your juicer before use.

1. Place the motor unit on a stable, level surface.
2. Insert the pulp container into the motor unit.
3. Place the sieve into the juice collector. Ensure it is seated firmly.
4. Attach the juice collector with the sieve onto the motor unit. The spout should align with the groove on the motor unit.
5. Place the lid on top of the juice collector.
6. Lift the clamps on both sides of the appliance and hook them over the lid. Push the clamps downwards until they lock into place with a click.
7. Place the juice jug under the spout.
8. Insert the pusher into the feeding tube.

4. OPERATING THE JUICER

This section provides instructions on how to use your juicer to extract juice efficiently.

Preparation of Ingredients

- Wash fruits and vegetables thoroughly.
- Peel fruits like oranges, pineapples, and melons. Remove large seeds from fruits like peaches and plums.
- Cut ingredients into pieces that fit easily into the feeding tube. The juicer has one optimized speed suitable for all fruits and vegetables.

Juicing Process

1. Ensure the appliance is correctly assembled and plugged into a power outlet.
2. Place the juice jug under the spout.
3. Switch on the appliance using the control knob.
4. Gradually feed the prepared ingredients into the feeding tube using the pusher. Apply gentle, even pressure. Do not push too hard or too fast.
5. The juicer is designed for direct serving, allowing juice to flow directly into the jug. It can make up to 1.5 liters of juice in one go.
6. When finished, switch off the appliance and unplug it.



Image: The Philips juicer in operation, with a glass of freshly extracted juice positioned next to it, demonstrating its direct serve capability.

Drip-Stop Function



Image: A detailed view of the juicer's spout, illustrating its design to prevent drips after juicing.

To prevent juice from dripping after juicing, simply turn the spout upwards. This feature helps keep your countertop clean.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your juicer. All removable parts are designed for easy hand washing.

Disassembly for Cleaning

1. Unplug the appliance from the power outlet.
2. Remove the pusher.
3. Unlock the clamps and remove the lid.
4. Lift the juice collector with the sieve from the motor unit.
5. Remove the sieve from the juice collector.
6. Empty the pulp container.

Cleaning Instructions

- Rinse all removable parts (pusher, lid, sieve, juice collector, pulp container, juice jug) under running water immediately after use.
- Use a cleaning brush to remove any remaining pulp from the sieve. The QuickClean sieve design facilitates faster cleaning.
- Wash all removable parts with warm water and a mild dishwashing liquid.
- Wipe the motor unit with a damp cloth. Never immerse the motor unit in water.
- Dry all parts thoroughly before reassembling or storing.



Image: A hand cleaning the QuickClean sieve under running water with a sponge, demonstrating the ease of maintenance.

6. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions.

Appliance does not work.

- **Check:** Is the appliance plugged in?
- **Solution:** Ensure the power cord is securely plugged into a working electrical outlet.

- **Check:** Are the clamps locked correctly?
- **Solution:** Make sure both clamps are securely locked over the lid. The appliance has a safety interlock system.

Motor stops during operation.

- **Check:** Is the feeding tube overloaded?
- **Solution:** Switch off the appliance, unplug it, and clear any blockage in the feeding tube or sieve. Reduce the amount of ingredients fed at once.
- **Check:** Has the appliance been running for too long?
- **Solution:** Allow the appliance to cool down for at least 1 minute before resuming operation.

Excessive vibration or noise.

- **Check:** Is the sieve correctly inserted or damaged?
- **Solution:** Switch off and unplug the appliance. Remove the sieve and reinsert it correctly. If the sieve is damaged, do not use the appliance and contact customer support.

Low juice yield or wet pulp.

- **Check:** Are you pushing ingredients too fast or too hard?
- **Solution:** Feed ingredients slowly and apply gentle, even pressure with the pusher.
- **Check:** Is the sieve clogged?
- **Solution:** Clean the sieve thoroughly. Some softer fruits may clog the sieve more easily.

7. SPECIFICATIONS

Key technical specifications for the Philips Viva Collection HR1832/00 Juicer.

Feature	Specification
Brand	Philips
Model Name	HR1832/00
Colour	Ink Black
Maximum Power	500 Watts
Operating Voltage	220-240 Volts
Capacity	1.5 Litres (juice collector)
Juice Jug Capacity	500 Milliliters
Number of Speeds	1 (optimized for all fruits)
Blade Material	Stainless Steel
Product Dimensions	23.3D x 23.3W x 42H Centimeters
Item Weight	1 kg 800 g

Special Features	Cord Storage, Powerful Motor, QuickClean Sieve, Direct Serve, Drip Stop
Care Instructions	Hand Wash Only (removable parts)



Image: A diagram illustrating the dimensions of the Philips HR1832/00 Juicer, showing its height of 31 cm (approximately 12 inches).

8. WARRANTY AND SUPPORT

This Philips appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and coverage details.

Customer Support

For technical assistance, product information, or to report a problem, please contact Philips customer support. You can typically find contact details on the official Philips website or in the documentation provided with your product. When contacting support, please have your model number (HR1832/00) and purchase information ready.