

Deco Breeze DBF2499

DecoBREEZE Adjustable Height Oscillating Outdoor Pedestal Fan

Model: DBF2499 | Brand: Deco Breeze

INTRODUCTION

The DecoBREEZE Coppertino Outdoor Pedestal Fan is designed to provide powerful and stylish air circulation for your outdoor living spaces. Featuring a durable, weather-resistant construction with a hammered copper and metallic base, this 18-inch oscillating fan offers three speed settings and adjustable height for optimal comfort. Its ETL "Wet Listed" safety rating and GFCI plug ensure safe operation in outdoor environments. This manual will guide you through the assembly, operation, maintenance, and troubleshooting of your new fan.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this fan. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- **Outdoor Use Only:** This fan is specifically designed and rated for outdoor use. Do not use indoors unless explicitly stated for dual use.
- **GFCI Protection:** Always connect the fan to a Ground Fault Circuit Interrupter (GFCI) protected outlet. This is a critical safety feature for outdoor electrical appliances.
- **Power Cord:** Do not run the power cord under carpeting or cover with throw rugs. Arrange the cord away from traffic areas where it will not be tripped over.
- **Water Exposure:** While designed for outdoor use, avoid submerging the fan or exposing it to direct, high-pressure water streams.
- **Moving Parts:** Keep fingers, hair, and loose clothing away from the fan blades and other moving parts during operation.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children or individuals with reduced physical, sensory, or mental capabilities.
- **Maintenance:** Disconnect the fan from the power source before cleaning or performing any maintenance.
- **Damage:** Do not operate any fan with a damaged cord or plug. If the fan malfunctions or has been dropped or

damaged in any manner, discontinue use and contact customer service.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Fan Head Assembly
- Adjustable Pedestal Pole
- Base
- Power Cord with GFCI Plug
- Assembly Hardware (screws, washers, etc.)
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your DecoBREEZE Pedestal Fan:

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, clean surface to prevent scratches.
2. **Attach Pole to Base:** Secure the adjustable pedestal pole to the heavy-duty base using the provided screws and washers. Ensure it is firmly tightened for stability.



Figure 1: Fan Base and Lower Pole Assembly

3. **Attach Fan Head:** Mount the fan head assembly onto the top of the adjustable pedestal pole. Align the holes

and secure with the designated screw or knob.



Figure 2: Fully Assembled Fan

4. **Adjust Height:** Loosen the height adjustment knob on the pole. Extend or retract the pole to your desired height, which can range from 40 inches to 51 inches. Tighten the knob securely to lock the height in place.



Figure 3: Fan Height Adjustment Range

5. **Position Fan:** Place the fan on a stable, level surface in your desired outdoor location. Ensure the power cord can reach a GFCI-protected outlet without being stretched or obstructed.



Figure 4: Fan with Power Cord

OPERATING INSTRUCTIONS

Your DecoBREEZE fan is designed for simple and intuitive operation.

- **Powering On/Off:** Plug the fan's GFCI plug into a suitable outdoor GFCI-protected electrical outlet. The fan is equipped with a pull chain switch for power control. Pull the chain once to turn the fan on to its lowest speed.
- **Adjusting Fan Speed:** The fan offers three speed settings. Pull the chain repeatedly to cycle through the speeds: Low (900 RPM), Medium (1100 RPM), High (1280 RPM), and Off.
- **Oscillation Function:** To activate the oscillation feature, push down the oscillation pin located on the top rear of the motor housing. To stop oscillation, pull the pin up.



Figure 5: Rear View of Fan Head with Controls

- **Tilting the Fan Head:** The fan head can be tilted vertically to direct airflow. Loosen the tilt adjustment knob on the side of the fan head, adjust to the desired angle, and then tighten the knob securely.

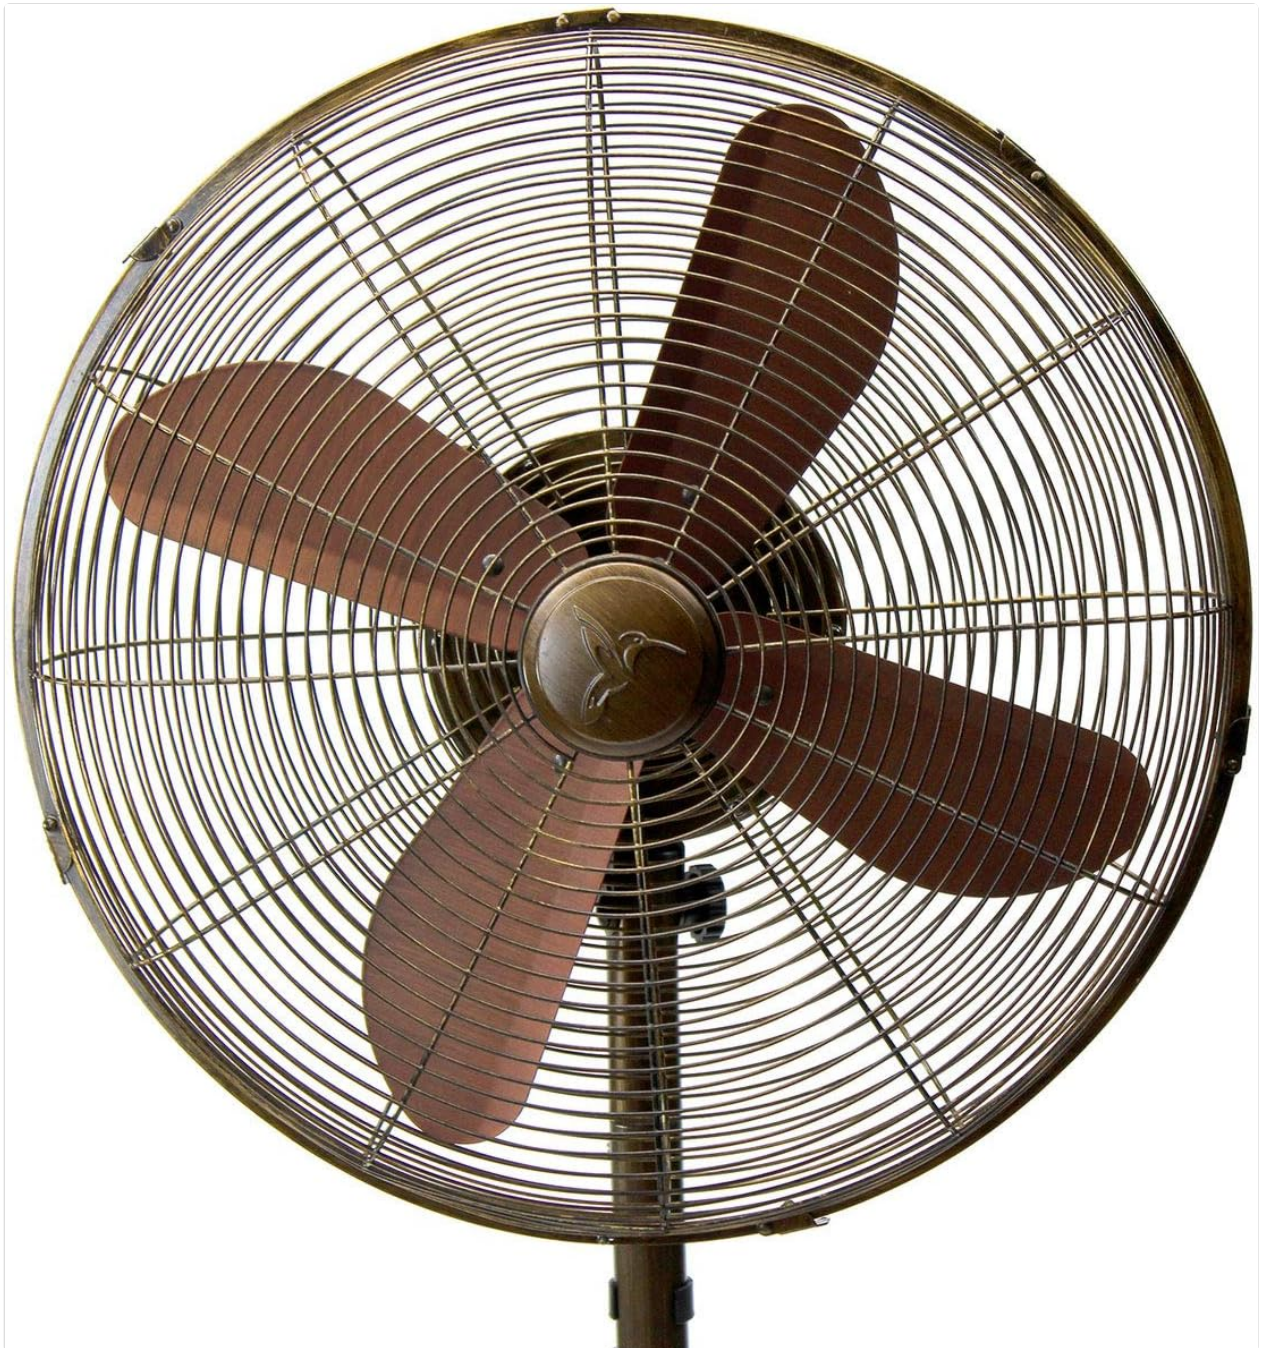


Figure 6: Front View of Fan Head

MAINTENANCE AND CARE

Regular maintenance will ensure the longevity and optimal performance of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. For the fan blades and grille, use a vacuum cleaner with a brush attachment or a soft, dry cloth to remove dust and debris. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging or covered to protect it from dust and moisture.
- **UV Resistance:** The fan is coated with U/V resistant all-weather paint, which helps protect it from sun exposure. However, prolonged direct sunlight may still cause some fading over time.
- **GFCI Plug:** Periodically test the GFCI plug by pressing the "TEST" button, then the "RESET" button. If it does not reset, do not use the fan and consult a qualified electrician.

TROUBLESHOOTING

If you experience issues with your fan, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not turn on	No power to outlet; GFCI tripped; Fan not plugged in; Pull chain switch not activated.	Check power outlet; Reset GFCI; Ensure fan is securely plugged in; Pull chain to cycle through settings.
Fan is noisy or vibrates excessively	Loose parts; Fan not on a level surface; Debris in fan blades.	Check all screws and connections; Place fan on a flat, stable surface; Unplug and clean fan blades.
Oscillation not working	Oscillation pin not engaged/disengaged properly.	Push down the oscillation pin to engage, pull up to disengage.
Reduced airflow	Fan blades are dirty; Fan is too far from area; Incorrect speed setting.	Unplug and clean fan blades; Reposition fan closer; Increase fan speed.

SPECIFICATIONS

Brand	Deco Breeze
Model Name	DBF2499
Color	Coppertino
Electric Fan Design	Floor Fan (Pedestal Fan)
Power Source	Corded Electric
Product Dimensions	19"D x 38"W x 19"H
Special Feature	Oscillating, Adjustable Height
Wattage	53 watts
Number of Blades	4
Voltage	120 Volts
Switch Type	Pull Chain
Indoor/Outdoor Usage	Outdoor
Control Method	Touch
Blade Material	Metal
Number of Power Levels	3
Item Weight	25.2 pounds
Diameter	18 Inches
UPC	843730024997

WARRANTY AND SUPPORT

Your DecoBREEZE Adjustable Height Oscillating Outdoor Pedestal Fan is covered by a **3-year limited manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact Deco Breeze customer service. Keep your proof of purchase for warranty validation.

Website: www.decobreeze.com (Check for updated contact information)

Email: Refer to the product packaging or website for customer support email.

Phone: Refer to the product packaging or website for customer support phone number.

Please have your model number (DBF2499) and purchase date ready when contacting support.

© 2024 Deco Breeze. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question