

[Manuals.plus](#) /

› [Air Wick](#) /

› Air Wick Freshmatic Max Automatic Air Freshener Starter Kit - Summer Pleasure User Manual

Air Wick 8171199

Air Wick Freshmatic Max Automatic Air Freshener Starter Kit - Summer Pleasure

User Manual

1. INTRODUCTION

Thank you for choosing the Air Wick Freshmatic Max Automatic Air Freshener Starter Kit. This device is designed to automatically release bursts of fragrance, providing a continuous and welcoming scent in your home. The Summer Pleasure scent features a delightful combination of fresh white flowers, fruity melon, and subtle vanilla. This manual provides essential information for safe setup, operation, and maintenance of your device.

2. SAFETY INFORMATION

- Keep out of reach of children and pets.
- Do not place near heat sources, open flames, or direct sunlight.
- Do not spray directly onto food, fabrics, or surfaces.
- Avoid direct inhalation of the spray. Use in well-ventilated areas.
- If swallowed, seek immediate medical advice and show this container or label.
- In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- The device contains batteries. Do not expose batteries to extreme temperatures or dispose of them in fire.
- Only use Air Wick Freshmatic Max refills with this device.

3. PACKAGE CONTENTS

Your Air Wick Freshmatic Max Starter Kit includes:

- 1 x Air Wick Freshmatic Max Automatic Spray Device

- 1 x Air Wick Freshmatic Max Refill (Summer Pleasure scent, 250 ml)
- 2 x AA Batteries



Image 1: The Air Wick Freshmatic Max Automatic Air Freshener Starter Kit packaging, showing the automatic spray device, a Summer Pleasure scent refill, and indicating that batteries are included. The packaging highlights 'Up to 70 days of fragrance' and 'Contains natural essential oils'.

4. SETUP INSTRUCTIONS

1. **Open the Device:** Press the button on the back of the device and pull the front cover forward to open it.
2. **Insert Batteries:** Insert the 2 AA batteries into the designated compartment, ensuring correct polarity

(+/-).

3. **Insert Refill:** Before inserting the aerosol refill, ensure the red lever inside the device is pushed upwards. Insert the Air Wick Freshmatic Max refill can into the device with the nozzle facing outwards.
4. **Close the Device:** Close the front cover of the device until it clicks securely into place.
5. **Select Intensity:** Turn the device on by selecting your desired fragrance intensity setting using the switch on the back. There are three intensity settings: low, medium, and high. The device will spray after a few seconds to confirm it is working.
6. **Placement:** Place the device on a flat surface at least 2 meters (6 feet) above the floor. Ensure the spray is directed away from your face and eyes.

5. OPERATING INSTRUCTIONS

Once set up, the Air Wick Freshmatic Max will automatically release bursts of fragrance at intervals determined by your chosen intensity setting. On the lowest setting, one refill can last up to 70 days.

- **Power On/Off:** The device is turned on when an intensity setting is selected. To turn off the device, slide the switch to the 'OFF' position.
- **Fragrance Intervals:** The device will spray at longer intervals on the low setting and shorter intervals on the high setting.
- **Indicator Light:** A red light may flash when the batteries are low or the refill is empty.

6. MAINTENANCE

- **Refill Replacement:** When the refill is empty, turn off the device, open the front cover, remove the old refill, and insert a new Air Wick Freshmatic Max refill. Close the cover and select your desired intensity.
- **Battery Replacement:** When the batteries are low (indicated by a flashing red light), turn off the device, open the front cover, remove the old batteries, and insert new AA batteries. Ensure correct polarity.
- **Cleaning:** Wipe the exterior of the device with a soft, damp cloth. Do not immerse the device in water or use harsh cleaning agents.

7. TROUBLESHOOTING

- **Device not spraying:**
 - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure the refill is correctly inserted and not empty.
 - Verify that the red lever inside the device is pushed upwards before inserting the refill.
 - Make sure the device is turned on and an intensity setting is selected.
- **No scent or weak scent:**
 - Increase the intensity setting.
 - The refill may be nearing empty. Replace with a new one.
 - Ensure the device is placed in an optimal location for fragrance dispersion.

8. SPECIFICATIONS

- **Brand:** Air Wick
- **Model Number:** 8171199
- **Scent:** Summer Pleasure (White flowers, Melon, Vanilla)
- **Item Form:** Aerosol
- **Power Source:** 2 x AA Batteries (included)
- **Scent Duration:** Up to 70 days (on lowest setting)
- **Recommended Use:** Room air freshener
- **Package Dimensions:** 20.8 x 15.8 x 8.6 cm
- **Package Weight:** 520 g

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Air Wick website. Keep your purchase receipt as proof of purchase.