

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony MEX-N4200BT Single-Din Car Stereo Receiver User Manual](#)

## Sony MEX-N4200BT

# Sony MEX-N4200BT Single-Din Car Stereo Receiver User Manual

Model: MEX-N4200BT

Brand: Sony

## 1. INTRODUCTION

---

This manual provides detailed instructions for the proper installation, operation, and maintenance of your Sony MEX-N4200BT Single-Din Car Stereo Receiver. Please read this manual thoroughly before using the unit to ensure correct usage and to prevent damage. Keep this manual for future reference.

## 2. SAFETY INFORMATION

---

- **Driving Safety:** Always operate the unit safely. Distracted driving can lead to accidents.
- **Volume Level:** Keep the volume at a level where you can still hear outside sounds, such as emergency vehicles.
- **Power Source:** Connect the unit only to a 12V DC car battery with a negative ground.
- **Wiring:** Ensure all wiring is correctly connected to prevent short circuits or damage. Refer to the wiring diagram carefully.
- **Professional Installation:** If you are unsure about installation, consult a qualified professional.
- **Avoid Moisture:** Do not expose the unit to rain or moisture to prevent fire or electric shock.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Sony MEX-N4200BT Car Stereo Receiver
- Wiring Harness
- External Microphone
- Remote Control
- Installation Hardware (Screws, Mounting Sleeve)
- User Manual (this document)

## 4. SETUP AND INSTALLATION

Proper installation is crucial for optimal performance. Disconnect the vehicle's negative battery terminal before starting installation.

### 4.1 Wiring Diagram

Refer to the diagram below for correct wiring connections. Ensure all connections are secure and insulated.



**Figure 4.1:** Rear view of the Sony MEX-N4200BT receiver, illustrating the wiring harness connection points, RCA pre-outputs for front, rear, and subwoofer, the external microphone input, and the 10A fuse. The multi-colored wires of the harness are visible, indicating connections for power, ground, speakers, and accessories.

- **Power (Yellow):** Connect to constant 12V power.
- **Accessory (Red):** Connect to switched 12V power (ignition).
- **Ground (Black):** Connect to a clean chassis ground point.
- **Speaker Wires:** Connect to vehicle's speaker wires, observing polarity.
- **Remote Turn-On (Blue/White):** Connect to amplifier remote input (if applicable).
- **Microphone:** Plug the external microphone into the designated input on the rear panel. Position the microphone in a clear area for optimal voice pickup.

- **Pre-Outs:** Use RCA cables to connect to external amplifiers for front, rear, and subwoofer channels.

## 4.2 Mounting

Insert the mounting sleeve into the dashboard opening. Bend the tabs to secure it. Slide the receiver into the mounting sleeve until it locks into place.

## 4.3 Initial Power On

After all connections are made and the unit is mounted, reconnect the vehicle's negative battery terminal. Turn on the vehicle's ignition. The unit should power on. Follow any on-screen prompts for initial setup, such as language selection or clock setting.

## 5. OPERATION

### 5.1 Basic Controls

Familiarize yourself with the front panel controls for easy operation.



**Figure 5.1:** Front panel of the Sony MEX-N4200BT receiver, displaying the main rotary knob (volume/enter), source button, call buttons, seek buttons, display button, and numbered preset buttons. The unit features blue illumination around the main controls.

- **Rotary Knob (Volume/Enter):** Turn to adjust volume. Press to select menu items or confirm actions.
- **SRC (Source) Button:** Press to cycle through available audio sources (Tuner, CD, USB, Bluetooth Audio, AUX).
- **CALL Buttons:** Use for hands-free calling (answer/end calls).
- **SEEK +/- Buttons:** Use to change radio stations, tracks, or navigate menus.
- **MENU Button:** Access the main menu for settings and adjustments.
- **Numbered Buttons (1-6):** Used for radio station presets, direct track selection, or menu navigation.
- **DSPL (Display) Button:** Changes display information or illumination settings.

### 5.2 Bluetooth Connectivity

The MEX-N4200BT features built-in Bluetooth for hands-free calling and audio streaming.



**Figure 5.2:** An in-car scene demonstrating smartphone integration with the car stereo. The driver is focused on the road, while a passenger interacts with a smartphone, likely controlling music or navigation through the Sony MEX-N4200BT receiver.

#### 1. Pairing:

- Turn on Bluetooth on your smartphone.
- On the receiver, select the Bluetooth source.
- Search for available devices on your smartphone and select "MEX-N4200BT".
- Confirm the pairing code if prompted.

#### 2. Hands-Free Calling (HFP, PBAP):

- Once paired, you can make and receive calls through the receiver.
- Use the CALL buttons on the front panel.
- The external microphone ensures clear voice transmission.
- The unit supports Phone Book Access Profile (PBAP) to display caller names.

#### 3. Audio Streaming (A2DP, AVRCP):

- Stream music wirelessly from your smartphone to the receiver.
- Use the receiver's controls (SEEK buttons) or your smartphone to play, pause, and skip tracks.
- Supports Advanced Audio Distribution Profile (A2DP) for high-quality audio and Audio/Video Remote Control Profile (AVRCP) for basic remote functions.

4. **Dual Bluetooth Connectivity:** The unit allows connecting two Bluetooth devices simultaneously. One for full functionality (hands-free, audio streaming) and a second for hands-free calling only.

## 5.3 USB Playback

Connect a USB device (flash drive, smartphone) to the front USB port for audio playback.

- Supported audio formats include MP3, WMA, and FLAC.

- Use the SEEK buttons to navigate folders and tracks.
- The USB port also provides charging for connected devices.

## 5.4 CD/MP3 Playback

Insert a CD into the disc slot. The unit will automatically switch to the CD source and begin playback.

- Supports CD, CD-R, and CD-RW discs.
- Plays MP3/WMA files burned onto CDs.
- Press the EJECT button to remove a disc.

## 5.5 Radio (AM/FM)

Select the Tuner source to listen to AM/FM radio.


- **Manual Tuning:** Press and hold SEEK buttons to manually tune.
- **Seek Tuning:** Press SEEK buttons briefly to automatically search for the next strong station.
- **Presets:** Store your favorite stations using the numbered buttons (1-6). Press and hold a numbered button to save the current station.

## 5.6 Auxiliary Input

Connect external audio devices (e.g., portable music players) to the front 3.5mm auxiliary input jack using a stereo mini-plug cable.

## 5.7 Sound Settings

Customize your audio experience using the built-in sound adjustment features.

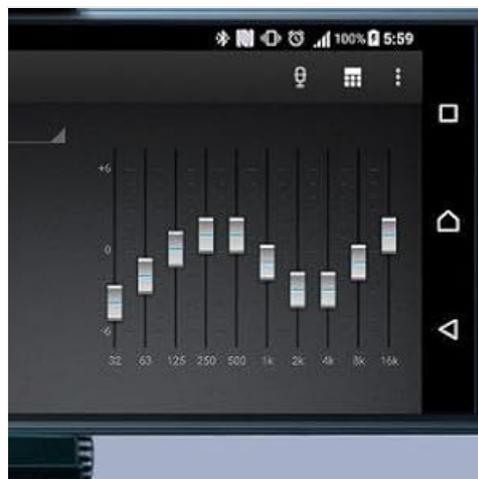

**Figure 5.3:** A smartphone screen showing a graphic equalizer interface, allowing precise adjustment of audio frequencies across 10 bands, from 32 Hz to 16 kHz. This illustrates the detailed sound customization available through the unit or its companion app.

- **10-Band Graphic Equalizer:** Access through the MENU button to fine-tune audio frequencies for optimal sound quality. Adjust bass, mid-range, and treble levels.
- **Mega Bass:** This feature enhances low-frequency sounds for a more powerful bass response.



**Figure 5.4:** A close-up of the Sony MEX-N4200BT front panel, with a finger pressing the prominent 'MEGA BASS' button, indicating activation of the bass enhancement feature.

- **Preamp Outputs:** The unit provides 2 sets of preamp outputs (front, rear, and subwoofer) for connecting external amplifiers, allowing for a more powerful and customizable sound system.

## 5.8 Smartphone Integration

The receiver is compatible with Apple iPhone (iOS) and Android devices, offering control over various applications.

- **App Control:** Use compatible apps like Pandora, Spotify, and iHeartRadio directly through the receiver's controls or via the Sony SongPal app (if installed on your smartphone).
- **Voice Control:** Utilize your smartphone's voice assistant (e.g., Siri, Google Assistant) through the receiver for hands-free commands, navigation, and communication.

## 6. MAINTENANCE

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the front panel. For stubborn dirt, dampen the cloth with water. Avoid abrasive cleaners or solvents.
- **Detaching the Faceplate:** The faceplate is detachable for theft deterrence. Press the release button (usually near the top left of the faceplate) and gently pull the faceplate off. Store it in the provided case.
- **CD Slot:** Keep the CD slot free of dust and debris. Do not insert anything other than standard CDs.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the table below for common problems and solutions before contacting support.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Blown fuse; incorrect wiring; vehicle battery discharged.	Check and replace fuse (10A); verify wiring connections; charge vehicle battery.
No sound	Volume too low; mute activated; speaker wires disconnected; incorrect source selected.	Increase volume; deactivate mute; check speaker connections; select correct audio source.
Bluetooth not connecting/pairing	Bluetooth off on phone/receiver; device out of range; pairing mode not active.	Ensure Bluetooth is on; bring devices closer; activate pairing mode on receiver.
CD error	Dirty or scratched disc; disc inserted incorrectly.	Clean disc; ensure disc is inserted correctly with label side up.
USB device not recognized	Unsupported file format; damaged USB device; improper connection.	Ensure files are MP3/WMA/FLAC; try a different USB device; re-insert USB device.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	MEX-N4200BT
Chassis Size	Single-DIN
Power Output (Peak)	55 watts x 4 channels
Power Output (RMS)	20 watts x 4 channels
Preamp Voltage	2 Volts
Preamp Outputs	2 Sets (Front, Rear, Subwoofer)
Display Type	LCD
Connectivity Technology	Auxiliary, Bluetooth, USB
Bluetooth Version	3.0 + EDR certified
Bluetooth Profiles Supported	HFP, PBAP, A2DP, AVRCP, SPP
Media Playback Supported	CD, CD-R/RW, MP3, WMA, WAV, AAC, FLAC (via USB)
Equalizer	10-band graphic equalizer
USB Input	Front USB
Auxiliary Input	Front 3.5mm
Compatible Devices	Smartphone (Android, iOS)
Item Weight	2.64 pounds (approx. 1.2 kg)
Product Dimensions	9.82 x 9.5 x 9.07 inches (approx. 24.9 x 24.1 x 23.0 cm)

## 9. WARRANTY AND SUPPORT

---

## 9.1 Manufacturer's Warranty

This Sony MEX-N4200BT receiver comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.

## 9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Sony customer support. Refer to the official Sony website for the most current contact information, including phone numbers and online support resources.