

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [iTouchless](#) /

› [iTouchless 50 Liter / 13 Gallon Sensor Kitchen Trash Can with Odor Filter - Slim Round Pearl White Stainless Steel Automatic Garbage Bin User Manual](#)

### iTouchless MT13RW

# iTouchless 50 Liter / 13 Gallon Sensor Kitchen Trash Can User Manual

Model: MT13RW

## INTRODUCTION

---

Thank you for choosing the iTouchless 50 Liter / 13 Gallon Sensor Kitchen Trash Can. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new automatic garbage bin. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.





Image: The iTouchless 50 Liter / 13 Gallon Sensor Kitchen Trash Can in Pearl White, featuring the motion sensor lid and AbsorbX Odor Control System label.

## SETUP INSTRUCTIONS

---

Follow these steps to set up your iTouchless sensor trash can:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: the trash can body, sensor lid, odor filter compartment, and retainer ring.
2. **Battery Installation:** Locate the battery compartment on the underside of the lid. Insert 4 AA batteries (not included) according to the polarity indicators. Close the compartment securely.
3. **Optional AC Adapter:** For continuous power, an optional AC adapter (sold separately) can be connected. Plug the adapter into the port located on the back of the lid and then into a standard wall outlet.
4. **Odor Filter Installation:** Open the odor filter compartment located inside the lid. Insert one AbsorbX odor filter (first filter included) into the compartment. Close the compartment.

5. **Trash Bag Installation:** Place a 13-gallon trash bag into the can. Secure the bag by placing the retainer ring over the top edge of the bag and fitting it into the can's rim. This hides the bag overhang and prevents it from slipping.
6. **Placement:** Position the trash can in your desired location. Ensure there is adequate space around the sensor on the lid to avoid accidental activation.





Image: Rear view of the sensor lid, showing the power port for an optional AC adapter.



## A Portion of *Every* Purchase Goes to Charity

Together, we've supported cancer research, fed families, and brought joy to children. Your purchase makes this possible!



Image: Illustration demonstrating the choice between battery power (4 AA batteries) and an optional AC adapter for continuous operation.

## OPERATING INSTRUCTIONS

Your iTouchless sensor trash can offers convenient hands-free operation:

- **Motion Sensor Activation:** Wave your hand approximately 6 inches above the sensor on the lid. The lid will open automatically. It will remain open for a few seconds and then close gently and silently.
- **Stay Open Feature:** To keep the lid open for a longer duration, press the 'Open' button on the sensor panel. Press the 'Close' button to close the lid manually, or it will close automatically after approximately 4 minutes.
- **Odor Control:** The built-in AbsorbX odor filter system actively traps and neutralizes odors, helping to maintain a fresh environment.

# 100% Automatic Lid



Image: A hand waving over the motion sensor on the trash can lid, illustrating the automatic opening function.

## ENGINEERED. TESTED. TRUSTED.

iTouchless' unique factory testing process ensures products built to outlast the rest.

- ✓ **Vibration Test:** Simulates rough shipping to ensure your package arrives safely
- ✓ **Opening Test:** 150,000+ robotic openings, proving durability for 15+ years



Image: A finger pressing the 'Open' button on the sensor panel to activate the stay-open lid feature.



Image: A visual representation of the soft and silent closing mechanism of the trash can lid.

## MAINTENANCE

---

Regular maintenance ensures your trash can operates efficiently:

- **Cleaning:** The stainless steel surface is fingerprint-resistant and easy to clean. Use a soft, damp cloth and mild detergent to wipe down the exterior. Avoid abrasive cleaners or harsh chemicals. For the sensor area, use a dry cloth to gently wipe away dust.
- **Odor Filter Replacement:** The AbsorbX odor filter should be replaced every three months, or sooner depending on usage, to maintain effective odor control. You can sign up for text reminders for filter replacement.
- **Battery Replacement:** When the batteries are low, the lid's operation may become slower or inconsistent. Replace all 4 AA batteries simultaneously with new ones.



Image: A hand wiping the premium grade stainless steel surface of the trash can with a microfiber cloth, highlighting its easy-to-clean and fingerprint-resistant properties.



# AbsorbX Odor filter eliminates trash odors

FRESH AIR



ROTTING  
FOOD

HOUSEHOLD  
WASTE

VOCs\*



\*Volatile ORGANIC COMPOUNDS (VOCs)  
common, naturally occurring chemicals that can  
cause illness.



Image: An exploded view illustrating the AbsorbX odor filter compartment within the lid, showing how activated carbon absorbs odors and VOCs for fresh air.

## TROUBLESHOOTING

If you encounter issues with your iTouchless sensor trash can, refer to the following common solutions:

- **Lid Not Opening/Closing:**

- Check battery installation and replace with fresh batteries if needed.
- Ensure the AC adapter is securely plugged in if using external power.
- Verify that the sensor area is clean and free from obstructions.

- **Lid Opens Unexpectedly:**

- Ensure the trash can is not placed in a high-traffic area where movement might trigger the sensor.
- Check for direct sunlight or strong artificial light sources shining on the sensor, which can cause interference.

- **Odor Persists:**

- Replace the AbsorbX odor filter.

- Ensure the trash bag is properly sealed and the retainer ring is correctly seated.

- **Lid Closes Too Quickly/Slowly:**

- This may indicate low battery power. Replace batteries.

For more detailed troubleshooting, please refer to the official [Troubleshooting Guide \(PDF\)](#).

## SPECIFICATIONS

Feature	Detail
Brand	iTouchless
Model Number	MT13RW
Capacity	50 Liters / 13 Gallons
Color	Pearl White
Opening Mechanism	Motion-Sensor
Material	Stainless Steel
Finish Type	Brushed
Product Dimensions	12.6"L x 11.6"W x 31.3"H (32.0cm L x 29.5cm W x 79.5cm H)
Item Weight	8.3 Pounds (3.76 kg)
Power Source	4 AA batteries (not included) or optional AC adapter (sold separately)
Special Features	Motion Sensor, Odor Filter, Smudge Resistant, Soft-Close Lid
UPC	897112000086





Image: A diagram illustrating the key dimensions of the iTouchless 50 Liter / 13 Gallon Sensor Trash Can, including height, width, and depth.

## WARRANTY INFORMATION

---

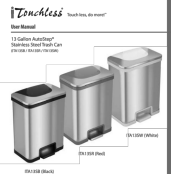





This iTouchless product comes with a **1-year warranty on parts**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or contact customer support.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or to inquire about replacement parts and accessories, please visit the official iTouchless website or contact their customer service department. You can also refer to the comprehensive [User Guide \(PDF\)](#) for additional information.

## Related Documents - MT13RW

 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>Don't Miss!</b> 13 Gallon AutoStep® Stainless Steel Trash Can #1013SB, #1013SR, #1013SW</p> <p><b>Why have to hold?</b> The iTouchless 13 Gallon AutoStep® Stainless Steel Trash Can is the only trash can that opens automatically when you step on the foot pedal. No need to touch the lid or hold the pedal down. It's the smartest way to dispose of your trash.</p>	<p><a href="#">iTouchless 13 Gallon AutoStep Stainless Steel Trash Can User Manual</a></p> <p>Comprehensive user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can (models ITA13SB, ITA13SR, ITA13SW). Learn about its features including the automatic sensor lid, odor control system, battery and AC power options, proper operation, care and maintenance, troubleshooting, and warranty information.</p>
 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>Don't Miss!</b> 18 and 23 Gallon Round Stainless Steel Sensor Trash Can with Dual Deodorizers #1018, #1023</p> <p><b>Register your Product</b> To receive the latest product information and updates, please register your product online at <a href="#">www.iTouchless.com</a>. You will receive a confirmation email with a link to the registration page.</p> <p><b>Why have to hold?</b> The iTouchless 18 and 23 Gallon Round Stainless Steel Sensor Trash Can is the only trash can that opens automatically when you step on the foot pedal. No need to touch the lid or hold the pedal down. It's the smartest way to dispose of your trash.</p>	<p><a href="#">iTouchless 18 &amp; 23 Gallon Stainless Steel Sensor Trash Can User Manual</a></p> <p>User manual for the iTouchless 18 and 23 Gallon Round Stainless Steel Sensor Trash Can with Dual Deodorizers. Provides information on features, contents, operation, filter replacement, troubleshooting, and warranty.</p>
 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>Don't Miss!</b> 4 Gallon Slim Sensor Trash Can with Left or Right Opening #1004L, #1004R</p> <p><b>Why have to hold?</b> The iTouchless 4 Gallon Slim Sensor Trash Can is the only trash can that opens automatically when you step on the foot pedal. No need to touch the lid or hold the pedal down. It's the smartest way to dispose of your trash.</p>	<p><a href="#">iTouchless 4 Gallon Slim Sensor Trash Can User Manual (SG04SSL/SG04SSR)</a></p> <p>User manual for the iTouchless 4 Gallon Slim Sensor Trash Can (models SG04SSL and SG04SSR). Learn about its features, operation, maintenance, troubleshooting, and warranty.</p>
 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>WARRANTY INFORMATION</b> <b>Don't Miss!</b> iTouchless® WS13RSL/WS18RSL Sensor Trash Can with iTouchless® Odor Control System and iTouchless® AutoStep® Foot Pedal</p> <p><b>Product Information</b> The iTouchless WS13RSL/WS18RSL Sensor Trash Can is the only trash can that opens automatically when you step on the foot pedal. No need to touch the lid or hold the pedal down. It's the smartest way to dispose of your trash.</p>	<p><a href="#">iTouchless WS13RSL/WS18RSL Sensor Trash Can User Manual</a></p> <p>Comprehensive user manual for the iTouchless WS13RSL and WS18RSL sensor trash cans, detailing features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>WARRANTY INFORMATION</b> <b>Don't Miss!</b> iTouchless® MT02SS/MT02SW/MT04SS/MT04SW Sensor Trash Can with iTouchless® Odor Control System and iTouchless® AutoStep® Foot Pedal</p> <p><b>Product Information</b> The iTouchless MT02SS/MT02SW/MT04SS/MT04SW Sensor Trash Can is the only trash can that opens automatically when you step on the foot pedal. No need to touch the lid or hold the pedal down. It's the smartest way to dispose of your trash.</p>	<p><a href="#">iTouchless Sensor Trash Can User Manual MT02SS MT02SW MT04SS MT04SW</a></p> <p>User manual for iTouchless MT02SS, MT02SW, MT04SS, MT04SW sensor trash cans. Covers features, setup, operation, maintenance, troubleshooting, and warranty information.</p>
 <p><b>iTouchless</b> "Touchless, the smart!"</p> <p><b>Don't Miss!</b> 13 Gallon Stainless Steel Sensor Trash Can #1013P</p>	<p><a href="#">iTouchless 13 Gallon Stainless Steel Sensor Trash Can User Manual</a></p> <p>User manual for the iTouchless 13 Gallon Stainless Steel Sensor Trash Can (Model DZT13P). Learn about its features, operation, troubleshooting, and warranty.</p>